


**JHX™**  
**1000F**

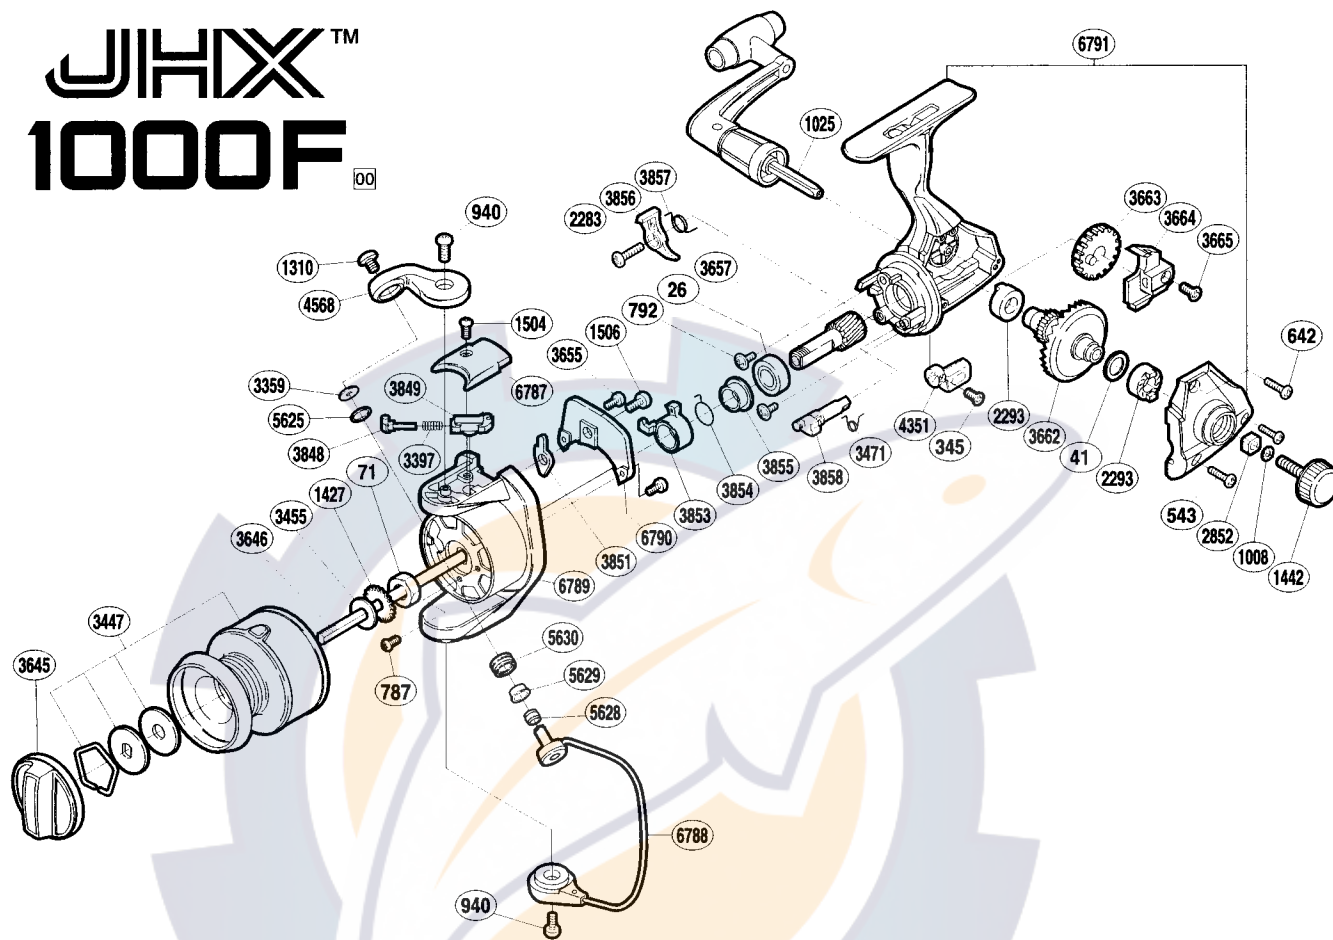

**Part No. Description**

RD 0026	Ball Bearing
RD 0041	Drive Gear Washer
RD 0071	Rotor Nut
RD 0345	Anti-Reverse Lever Screw
RD 0543	Side Cover Screw (black)
RD 0642	Side Cover Screw (silver)
RD 0787	Nut Lock Screw
RD 0792	Bearing Retainer Screw
RD 0940	Multi-Purpose Screw
RD 1008	Handle Lock Washer
RD 1025	Handle Assembly
RD 1310	Line Roller Screw
RD 1427	Spool Support
RD 1442	Handle Screw Cap
RD 1504	Bail Spring Cover Screw
RD 1506	Bail Trip Lever Screw
RD 2283	Anti-Reverse Pawl Screw
RD 2293	Drive Gear Bushing

**Part No. Description**

RD 2852	Handle Screw Lock
RD 3359	Line Roller Washer
RD 3397	Bail Spring
RD 3447	Spool Assembly
RD 3455	Spool Washer
RD 3471	Anti-Reverse Cam Spring
RD 3645	Drag Knob
RD 3646	Main Shaft
RD 3655	Cover Screw
RD 3657	Pinion Gear
RD 3662	Drive Gear
RD 3663	Oscillating Gear
RD 3664	Oscillating Slider
RD 3665	Slider Retainer Screw
RD 3848	Bail Spring Guide (A)
RD 3849	Bail Spring Guide (B)
RD 3851	Bail Trip Lever
RD 3853	Anti-Reverse Lock Out

**Part No. Description**

RD 3854	Anti-Reverse Lock Out Spring
RD 3855	Lock Out Spring Holder
RD 3856	Anti-Reverse Pawl
RD 3857	Anti-Reverse Pawl Spring
RD 3858	Anti-Reverse Cam
RD 4351	Anti-Reverse Lever
RD 4568	Bail Arm
RD 5625	Line Roller Spacer
RD 5628	Line Roller Collar
RD 5629	Line Roller Bushing
RD 5630	Line Roller
RD 6787	Bail Spring Cover
RD 6788	Bail Assembly
RD 6789	Rotor
RD 6790	Counterbalance Cover
RD 6791	Body Assembly