


SBK ULS 90

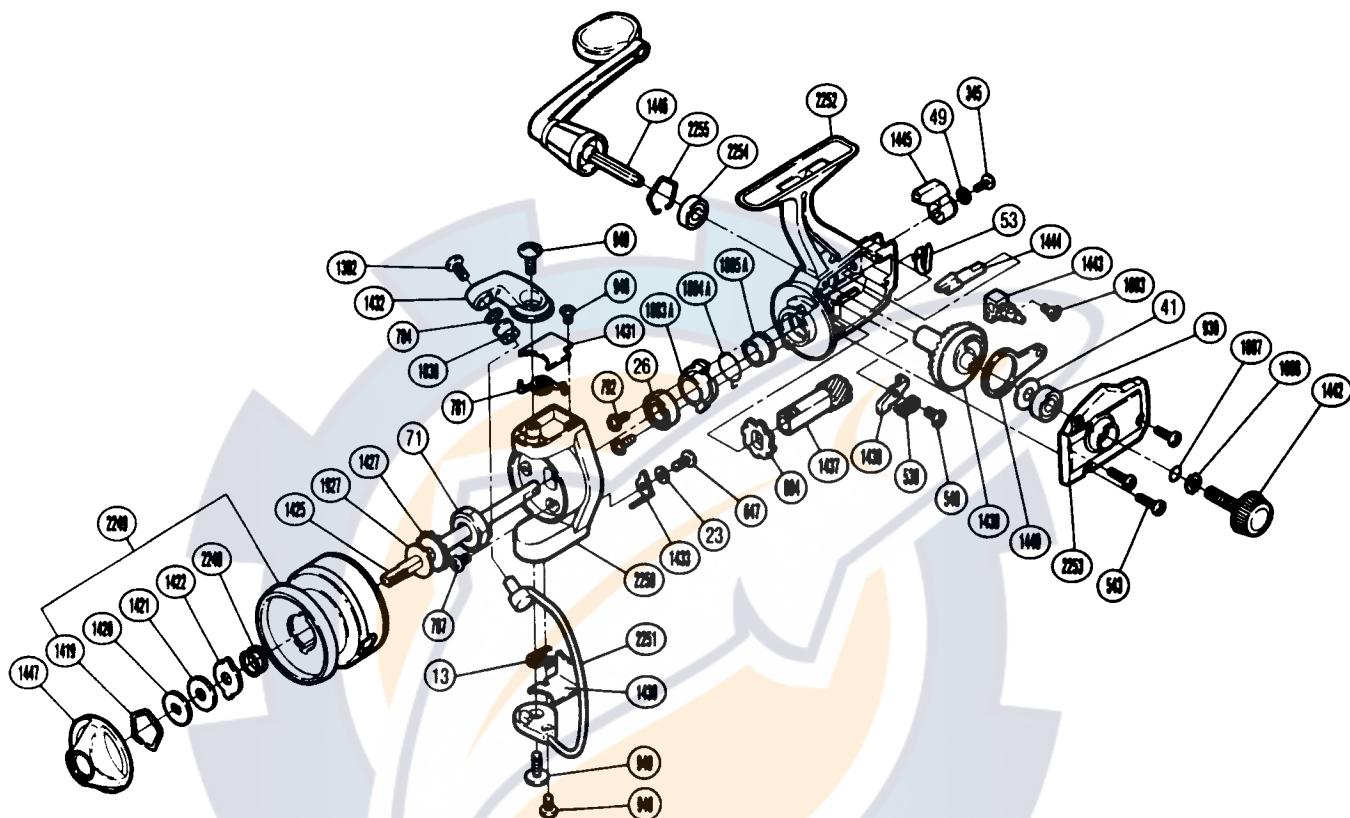

TO ORDER: USE RD PREFIX
WITH PART NUMBER

PARTS LIST

RD #	DESCRIPTION	RD #	DESCRIPTION	RD #	DESCRIPTION
0013	(Trip) Lever Spring	0948	Bail Trip Cover Screw	1440	Oscillating Arm
0023	Trip Lever Spacer	1007	Lock Washer Retainer	1442	Handle Screw Cap
0026	Ball Bearing	1008	Handle Lock Washer	1443	Oscillating Block
0041	Drive Gear Washer	1038	Sic Ceramic Roller	1444	Anti-Reverse Cam
0049	Lock Washer	1083	Slider Retainer Screw	1445	Anti-Reverse Lever
0053	Anti-Reverse Cam Spring	1302	Line Roller Screw	1446	Handle Assembly
0071	Rotor Nut	1419	Drag Washers Retainer	1447	Drag Knob
0345	Anti-Reverse Lever Screw	1420	Key Washer	1883A	Anti-Reverse Lock Out
0539	Anti-Reverse Pawl Spring	1421	Drag Washer	1884A	Anti-Reverse Lock Spring
0540	Anti-Reverse Pawl Screw	1422	Eared Washer	1885A	Pinion Spacer
0543	Side Cover Screw (B)	1425	Main Shaft	1927	Spool Washer
0647	Nut Lock Screw	1427	Spool Support	2248	Drag Coil Spring
0781	Bail Spring	1430	Bail Trip Cover	2249	Spool Assembly
0784	Line Roller Washer	1431	Bail Spring Cover	2250	Rotor
0787	Nut Lock Screw	1432	Bail Arm	2251	Bail Assembly
0792	Bearing Retainer Screw	1433	Bail Trip Lever	2252	Body
0884	Anti-Reverse Ratchet	1437	Pinion Gear	2253	Side Cover
0930	Ball Bearing	1438	Anti-Reverse Pawl	2254	Ball Bearing
0940	Bail Trip Cam Screw	1439	Drive Gear	2255	Bearing Retainer