



TO ORDER: USE BNT PREFIX
WITH PART NUMBER

PARTS LIST

BNT # DESCRIPTION

- 0042 Line Guide Pawl
- 0133 Worm Shaft Retainer
- 0194 Ball Bearing
- 0291 Side Plate Screw
- 0425 Clutchbutton Lock
- 0589 Flipping Lever Screw
- 0590 Lock Washer
- 0609 Drive Shaft Retainer Screw
- 0612 Anti-Reverse Pawl Pin
- 0613 Anti-Reverse Pawl
- 0661 Magnet Retainer Spring
- 0664 Spacer (B)
- 0766 Dial Friction Washer
- 0780 Magnet Retainer Lock
- 0795 Handle Nut Plate Screw
- 0796 Handle Nut Plate
- 0797 Handle Nut
- 0799 Friction Washer
- 0801 Cast Control Cap
- 0802 Spool Tension Spacer (B)
- 0803 Spool Tension Spacer (A)
- 0816 Drive Shaft Washer
- 0819 Drive Shaft Bushing
- 0823 Retractor Spring
- 0825 Yoke Plate Washer (A)
- 0830 Spacer (Optional)

BNT # DESCRIPTION

- 0834 Level Wind Guard
- 0838 Magnetic Control Dial
- 0840 Left Side Plate Screw
- 0853 Handle Assembly
- 0854 Flipping Lever
- 0859 Flipping Retractor Spring
- 0860 Yoke Plate Washer (B)
- 0906 Coned Disc Spring
- 0907 Key Washer (A)
- 0908 Drag Washer (D)
- 0909 Key Washer (C)
- 0911 Shift Cam
- 0919 Shift Spring
- 0920 Shift Spring Guide (B)
- 0925 Shift Arm
- 0927 Drive Gear Washer
- 0930 Shift Sleeve
- 0935 Drag Washer (A)
- 0936 Anti-Reverse Ratchet
- 0940 Drive Shaft Retainer
- 0942 Worm Bearing
- 0993 Yoke Spring
- 1008 Star Drag
- 1010 Spool Tension Spring
- 1011 Spool Shaft Bushing (A)
- 1013 Cam Spring

BNT # DESCRIPTION

- 1014 Flipping Cam
- 1015 Shift Spring Guide (A)
- 1016 Drag Shaft (B)
- 1017 Bearing Holder
- 1018 Drive Shaft Bearing (B)
- 1019 Drive Gear (L)
- 1020 Shift Clutch (L)
- 1021 Shift Clutch (H)
- 1022 Drive Gear (H)
- 1023 Drag Shaft (A)
- 1024 Drive Shaft Washer
- 1025 Drive Shaft
- 1027 Level Wind Protector
- 1029 Pinion Gear
- 1030 Yoke
- 1031 Joint Plate
- 1032 Clutch Button
- 1033 One-Piece Frame
- 1035 Dial Case
- 1039 Line Guide
- 1073 Idle Gear
- 1074 Worm Shaft
- 1075 Magnet Retainer
- 1092 Pawl Cap
- 1093 Spool