


NEXAVE

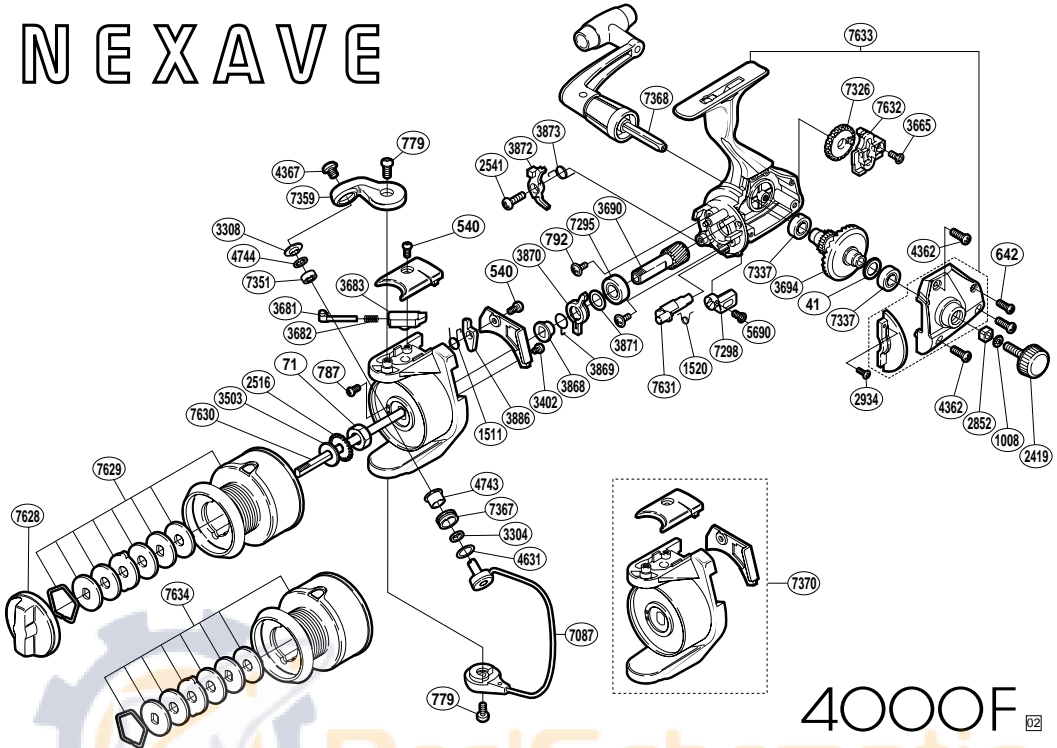

4000F ⁰²

'02 NEX 4000F

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0041	Drive Gear Washer	3665	Slider Retainer Screw	7087	Bail Assembly
0071	Rotor Nut	3681	Bail Spring Guide (A)	7295	Ball Bearing
0540	Multi-Purpose Screw	3682	Bail Spring	7298	Anti-Reverse Lever
0642	Side Cover Screw (small)	3683	Bail Spring Guide (B)	7326	Oscillating Gear
0779	Multi-Purpose Screw	3690	Pinion Gear	7337	Ball Bearing
0787	Nut Lock Screw	3694	Drive Gear	7351	Line Roller Bearing
0792	Bearing Retainer Screw	3868	Lock Out Spring Holder	7359	Bail Arm
1008	Handle Lock Washer	3869	Anti-Reverse Lock Out Spring	7367	Line Roller
1511	Lever Spring	3870	Anti-Reverse Lock Out	7368	Handle Assembly
1520	Anti-Reverse Cam Spring	3871	Bushing Washer	7370	Rotor Assembly
2419	Handle Screw Cap	3872	Anti-Reverse Pawl	7628	Drag Knob Assembly
2516	Spool Support	3873	Anti-Reverse Pawl Spring	7629	Spool Assembly
2541	Anti-Reverse Pawl Screw	3886	Bail Trip Lever	7630	Main Shaft
2852	Handle Screw Lock	4362	Side Cover Screw (large)	7631	Anti-Reverse Cam
2934	Flange Screw	4367	Line Roller Screw	7632	Oscillating Slider
3304	Bearing Spacer	4631	Spacer	7633	Body Assembly
3308	Line Roller Washer	4743	Line Roller Bushing		
3402	Cover Screw	4744	Roller Bearing Seal		
3503	Spool Washer	5690	Anti-Reverse Lever Screw	7634	Spare Spool Assembly