


# SHIMANO

**SLX** SA-RB

**SLXMGL71XG**

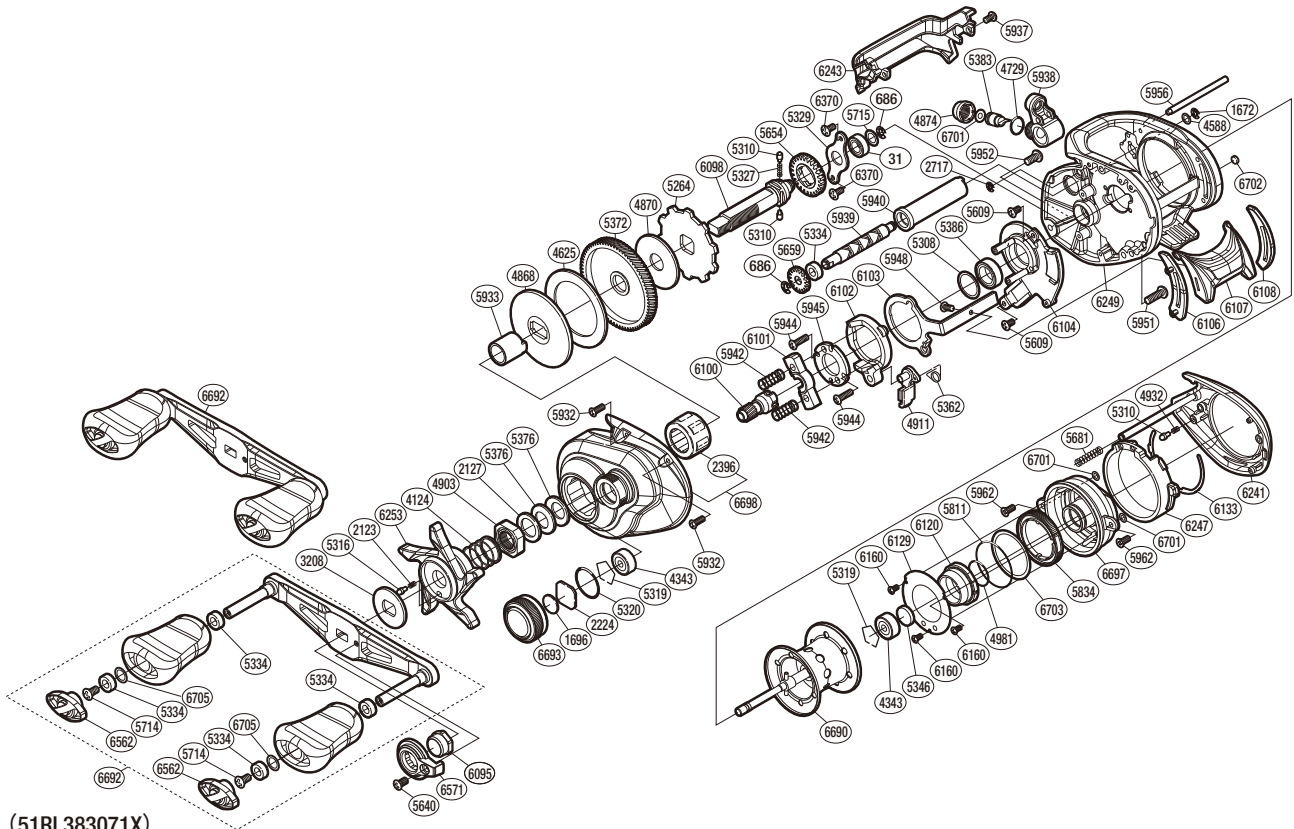

(51RL383071X)

Please note that the number of adjusting washers may not be the same as shown in the exploded views.  
(Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0031	Ball Bearing	BNT5346	Spacer B	BNT6100	Pinion Gear
BNT0686	E Lock	BNT5362	Clutch Pawl Spring	BNT6101	Yoke
BNT1672	E Lock	BNT5372	Drive Gear	BNT6102	Clutch Cam
BNT1696	Cast Control Spacer B	BNT5376	Drag Spring Washer	BNT6103	Clutch Plate
BNT2123	Click Spring	BNT5383	Line Guide Pawl	BNT6104	Clutch Guard Assembly
BNT2127	Star Drag Spacer	BNT5386	Ball Bearing	BNT6106	Clutch Bar Guide B
BNT2224	Spool Tension Spacer A	BNT5609	Screw	BNT6107	Clutch Button
BNT2396	Roller Clutch Bearing	BNT5640	Screw	BNT6108	Clutch Bar Guide A
BNT2717	E Lock	BNT5654	Idle Gear	BNT6120	Brake Pipe Gear Assembly
BNT3208	Star Drag Click Plate	BNT5659	Idle Gear	BNT6129	Br Dial Retainer Plate
BNT4124	Star Drag Spring	BNT5681	Spring	BNT6133	Washer
BNT4343	Ball Bearing	BNT5714	Screw	BNT6160	Screw
BNT4588	Washer	BNT5715	Washer	BNT6241	Right Side Plate Assembly
BNT4625	Drag Washer	BNT5811	O Ring	BNT6243	Level Wind Protector
BNT4729	O Ring	BNT5834	Brake Dial	BNT6247	B Side Plate Cam Lever
BNT4868	Key Washer	BNT5932	Screw	BNT6249	Frame
BNT4870	Drag Washer	BNT5933	Roller Clutch Inner Tube	BNT6253	Star Drag
BNT4874	Pawl Cap	BNT5937	Screw	BNT6370	Screw
BNT4903	Star Drag Nut	BNT5938	Line Guide Assembly	BNT6562	Handle Knob Seal
BNT4911	Clutch Pawl	BNT5939	Worm Shaft	BNT6571	Handle Nut Plate
BNT4932	Spring	BNT5940	Level Wind Guard	BNT6690	Spool Assembly
BNT4981	O Ring	BNT5942	Yoke Spring	BNT6692	Handle Assembly
BNT5264	Anti-Reverse Ratchet	BNT5944	Screw	BNT6693	Cast Control Cap
BNT5308	Washer	BNT5945	Clutch Cam Retainer	BNT6697	Dial Case
BNT5310	Idle Gear Pin	BNT5948	Screw	BNT6698	Left Side Plate Assembly
BNT5316	Click Pin	BNT5951	Screw	BNT6701	Washer
BNT5319	Bearing Retainer	BNT5952	Screw	BNT6702	Washer
BNT5320	O Ring	BNT5956	Stabilizer Bar	BNT6703	Washer
BNT5327	Idle Gear Spring	BNT5962	Screw	BNT6705	Washer
BNT5329	Drive Shaft Retainer	BNT6095	Handle Nut		
BNT5334	Bushing	BNT6098	Drive Shaft	BNT4692	B-100 Oil (Accessory)