



Part No.	Description	Part No.	Description	Part No.	Description
RD 0050	Anti-Reverse Lever Screw	RD 5449	Anti-Reverse Cam	RD 6758	Main Shaft
RD 0521	Rotor Nut	RD 5455	Anti-Reverse Cam Spring	RD 6760	Bail Spring Guide (A) Collar
RD 0690	Drive Gear Washer	RD 5625	Line Roller Spacer	RD 6761	Bail Spring
RD 0806	Bail Hold Support Screw	RD 5628	Line Roller Collar	RD 6764	Spacer
RD 0998	Rotor Protector Screw (large)	RD 5629	Line Roller Bushing	RD 6767	Bail Trip Lever Spring
RD 1008	Handle Lock Washer	RD 5642	Line Roller	RD 6768	Roller Clutch Screw Washer
RD 1109	Slider Retainer Screw	RD 5823	Lever Spring Guide (A)	RD 6769	Pinion Gear
RD 1506	Clutch Cover Screw	RD 5825	Lever Spring Guide (B)	RD 6770	Bushing
RD 3182	Spool Support	RD 5880	Nut Retainer Screw	RD 6771	Drive Gear
RD 3204	Ball Bearing	RD 6377	Main Shaft Spacer	RD 6772	Drive Gear Spacer
RD 3309	Line Roller Screw	RD 6379	Bail Arm Screw	RD 6774	Oscillating Slider
RD 3387	Handle Screw Lock	RD 6380	Bail Spring Guide (A)	RD 6775	Oscillating Gear
RD 3503	Spool Washer	RD 6383	Bail Spring Guide (B)	RD 6776	Oscillating Gear Bushing
RD 4362	Side Cover Screw (long)	RD 6539	Bail Trip Lever	RD 6782	Bail Assembly
RD 4416	Rotor Protector Screw (small)	RD 6540	Bail Hold Support Spacer	RD 6783	Handle Screw Cap
RD 4649	Spacer	RD 6639	Side Cover Screw (short)	RD 6784	Handle Assembly
RD 4656	Trip Lever Spacer	RD 6676	Bail Arm	RD 6786	Rotor Assembly
RD 5040	Roller Clutch Screw	RD 6686	Click Spring	RD 6839	Spool Assembly
RD 5042	Anti-Reverse Cam Ring	RD 6687	Bail Arm Click	RD 6840	Body Assembly
RD 5208	Anti-Reverse Lever	RD 6692	Bail Hold Support Shaft	RD 6843	Friction Ring
RD 5440	Drag Knob	RD 6703	Line Roller Washer		
RD 5447	Roller Clutch Assembly	RD 6757	Nut Retainer		