



1000F 99

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4639	Bail Spring Guide (A)	5180	Drag Knob
0041	Drive Gear Washer	4640	Bail Spring	5181	Spool Assembly
0050	Anti-Reverse Lever Screw	4641	Bail Spring Guide (B)	5182	Rotor Nut
0642	Side Cover Screw	4642	Bail Arm Screw	5183	Main Shaft
0930	Ball Bearing	4643	Bail Arm Bushing	5189	Anti-Reverse Cam
1008	Handle Lock Washer	4649	Spacer	5190	Anti-Reverse Lever
1427	Spool Support	4650	Bail Hold Support Shaft	5192	Oscillating Slider
1520	Anti-Reverse Cam Spring	4652	Lever Spring Guide (B)	5546	Handle Assembly
1891	Multi-Purpose Screw	4653	Lever Spring	5625	Line Roller Spacer
2404	"E" Lock	4654	Lever Spring Guide (A)	5628	Line Roller Collar
2852	Handle Screw Lock	4655	Bail Trip Lever	5629	Line Roller Bushing
3309	Line Roller Screw	4656	Trip Lever Spacer	5630	Line Roller
3359	Line Roller Washer	4658	Clutch Cover Screw	5653	Bail Assembly
3402	Bail Spring Cover Screw (small)	4659	Roller Clutch Assembly	5654	Pinion Gear
3455	Spool Washer	4661	Anti-Reverse Cam Ring	5655	Drive Gear
3663	Oscillating Gear	4792	Bail Arm	5656	Body Assembly
3665	Slider Retainer Screw	4795	Bail Hold Support Spacer	5657	Rotor Assembly
4421	Handle Screw Cap	4798	Roller Clutch Screw		