



1000FE

| RD No. | PARTS NAMES | RD No. | PARTS NAMES | RD No. | PARTS NAMES |
|--------|-------------------------------|--------|------------------------|--------|-------------------------------|
| 0026 | Ball Bearing | 4716 | Lever Spring Guide (B) | 6689 | Bail Spring Guide (B) |
| 0041 | Drive Gear Washer | 4717 | Lever Spring | 6691 | Bail Trip Lever |
| 0071 | Rotor Nut | 4718 | Lever Spring Guide (A) | 6692 | Bail Hold Support Shaft |
| 0345 | Anti-Reverse Lever Screw | 5189 | Anti-Reverse Cam | 6695 | Roller Clutch Screw |
| 0543 | Side Cover Screw (long) | 5293 | Anti-Reverse Lever | 6696 | Pinion Gear |
| 0557 | Rotor Protector Screw (small) | 6289 | Nut Retainer Screw | 6697 | Friction Ring Screw |
| 0806 | Bail Hold Support Screw | 6293 | Line Roller Bushing | 6698 | Friction Ring |
| 0930 | Ball Bearing | 6297 | Bail Spring Guide (A) | 6699 | Drive Gear |
| 0949 | Bail Arm Screw | 6628 | Oscillating Slider | 6723 | Bail Trip Lever Washer |
| 1008 | Handle Lock Washer | 6678 | Spool Assembly | 6736 | Drag Knob |
| 1083 | Slider Retainer Screw | 6679 | Nut Retainer | 6737 | Bail Arm |
| 1427 | Spool Support | 6680 | Rotor Support Bushing | 6738 | Line Roller Screw |
| 1520 | Anti-Reverse Cam Spring | 6681 | Main Shaft | 6739 | Rotor Protector Screw (large) |
| 1630 | Handle Assembly | 6682 | Line Roller Collar | 6740 | Bail Assembly |
| 2852 | Handle Screw Lock | 6683 | Line Roller | 6741 | Bail Hold Support Spacer |
| 3455 | Spool Washer | 6684 | Line Roller Spacer | 6742 | Handle Screw Cap |
| 3663 | Oscillating Gear | 6685 | Line Roller Washer | 6743 | Side Cover Screw (short) |
| 4658 | Clutch Cover Screw | 6686 | Click Spring | 6744 | Body Assembly |
| 4659 | Roller Clutch Assembly | 6687 | Bail Arm Click | 6745 | Rotor Assembly |
| 4661 | Anti-Reverse Cam Ring | 6688 | Bail Spring | | |