



4000F 99

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4421	Handle Screw Cap	5199	Drag Knob
0041	Drive Gear Washer	4649	Spacer	5200	Spool Assembly
0050	Anti-Reverse Lever Screw	4650	Bail Hold Support Shaft	5201	Main Shaft
0071	Rotor Nut	4652	Lever Spring Guide (B)	5207	Anti-Reverse Cam
0787	Nut Lock Screw	4654	Lever Spring Guide (A)	5208	Anti-Reverse Lever
0930	Ball Bearing	4656	Trip Lever Spacer	5212	Oscillating Slider
1008	Handle Lock Washer	4661	Anti-Reverse Cam Ring	5213	Oscillating Gear
1506	Clutch Cover Screw	4698	Bail Spring Guide (A)	5548	Handle Assembly
1520	Anti-Reverse Cam Spring	4699	Bail Spring	5625	Line Roller Spacer
1891	Bail Hold Support Guard Screw	4700	Bail Spring Guide (B)	5628	Line Roller Collar
2404	"E" Lock	4701	Bail Arm Screw	5629	Line Roller Bushing
2516	Spool Support	4702	Bail Arm Bushing	5630	Line Roller
2852	Handle Screw Lock	4704	Bail Spring Cover Screw (large)	5661	Bail Assembly
3309	Line Roller Screw	4710	Lever Spring	5662	Pinion Gear
3359	Line Roller Washer	4711	Bail Trip Lever	5663	Drive Gear
3402	Bail Spring Cover Screw (small)	4714	Roller Clutch Assembly	5664	Body Assembly
3503	Spool Washer	4823	Bail Arm	5665	Rotor Assembly
3665	Slider Retainer Screw	4826	Bail Hold Support Spacer		
4362	Side Cover Screw	4829	Roller Clutch Screw		