



1000FA 01

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4421	Handle Screw Cap	5180	Drag Knob
0041	Drive Gear Washer	4639	Bail Spring Guide (A)	5182	Rotor Nut
0050	Anti-Reverse Lever Screw	4640	Bail Spring	5183	Main Shaft
0642	Side Cover Screw	4641	Bail Spring Guide (B)	5188	Pinion Gear
0930	Ball Bearing	4642	Bail Arm Screw	5189	Anti-Reverse Cam
1008	Handle Lock Washer	4643	Bail Arm Bushing	5190	Anti-Reverse Lever
1427	Spool Support	4649	Spacer	5192	Oscillating Slider
1520	Anti-Reverse Cam Spring	4650	Bail Hold Support Shaft	5546	Handle Assembly
1891	Multi-Purpose Screw	4652	Lever Spring Guide (B)	5625	Line Roller Spacer
2293	Drive Gear Bushing	4653	Lever Spring	5628	Line Roller Collar
2404	"E" Lock	4654	Lever Spring Guide (A)	5629	Line Roller Bushing
2852	Handle Screw Lock	4655	Bail Trip Lever	5630	Line Roller
3309	Line Roller Screw	4656	Trip Lever Spacer	5653	Bail Assembly
3359	Line Roller Washer	4658	Clutch Cover Screw	5668	Body Assembly
3402	Bail Spring Cover Screw (small)	4659	Roller Clutch Assembly	6821	Spool Assembly (graphite)
3455	Spool Washer	4661	Anti-Reverse Cam Ring	6987	Spool Assembly (aluminum)
3662	Drive Gear	4792	Bail Arm	6996	Rotor Assembly
3663	Oscillating Gear	4795	Bail Hold Support Spacer		
3665	Slider Retainer Screw	4798	Roller Clutch Screw		