



# 4000FA 01

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4362	Side Cover Screw	4829	Roller Clutch Screw
0041	Drive Gear Washer	4421	Handle Screw Cap	5199	Drag Knob
0050	Anti-Reverse Lever Screw	4649	Spacer	5201	Main Shaft
0071	Rotor Nut	4650	Bail Hold Support Shaft	5206	Pinion Gear
0787	Nut Lock Screw	4652	Lever Spring Guide (B)	5207	Anti-Reverse Cam
0930	Ball Bearing	4654	Lever Spring Guide (A)	5208	Anti-Reverse Lever
1008	Handle Lock Washer	4656	Trip Lever Spacer	5209	Drive Gear
1506	Clutch Cover Screw	4661	Anti-Reverse Cam Ring	5212	Oscillating Slider
1520	Anti-Reverse Cam Spring	4698	Bail Spring Guide (A)	5213	Oscillating Gear
1891	Bail Hold Support Guard Screw	4699	Bail Spring	5548	Handle Assembly
2293	Drive Gear Bushing	4700	Bail Spring Guide (B)	5625	Line Roller Spacer
2404	"E" Lock	4701	Bail Arm Screw	5628	Line Roller Collar
2516	Spool Support	4702	Bail Arm Bushing	5629	Line Roller Bushing
2852	Handle Screw Lock	4704	Bail Spring Cover Screw (large)	5630	Line Roller
3309	Line Roller Screw	4710	Lever Spring	5661	Bail Assembly
3359	Line Roller Washer	4711	Bail Trip Lever	5670	Body Assembly
3402	Bail Spring Cover Screw (small)	4714	Roller Clutch Assembly	6825	Spool Assembly (graphite)
3503	Spool Washer	4823	Bail Arm	6993	Spool Assembly (aluminum)
3665	Slider Retainer Screw	4826	Bail Hold Support Spacer	6999	Rotor Assembly