



## 1989 REPAIR MANUAL

Shimano American Corporation, One Shimano Dr  
Irvine, CA 92718

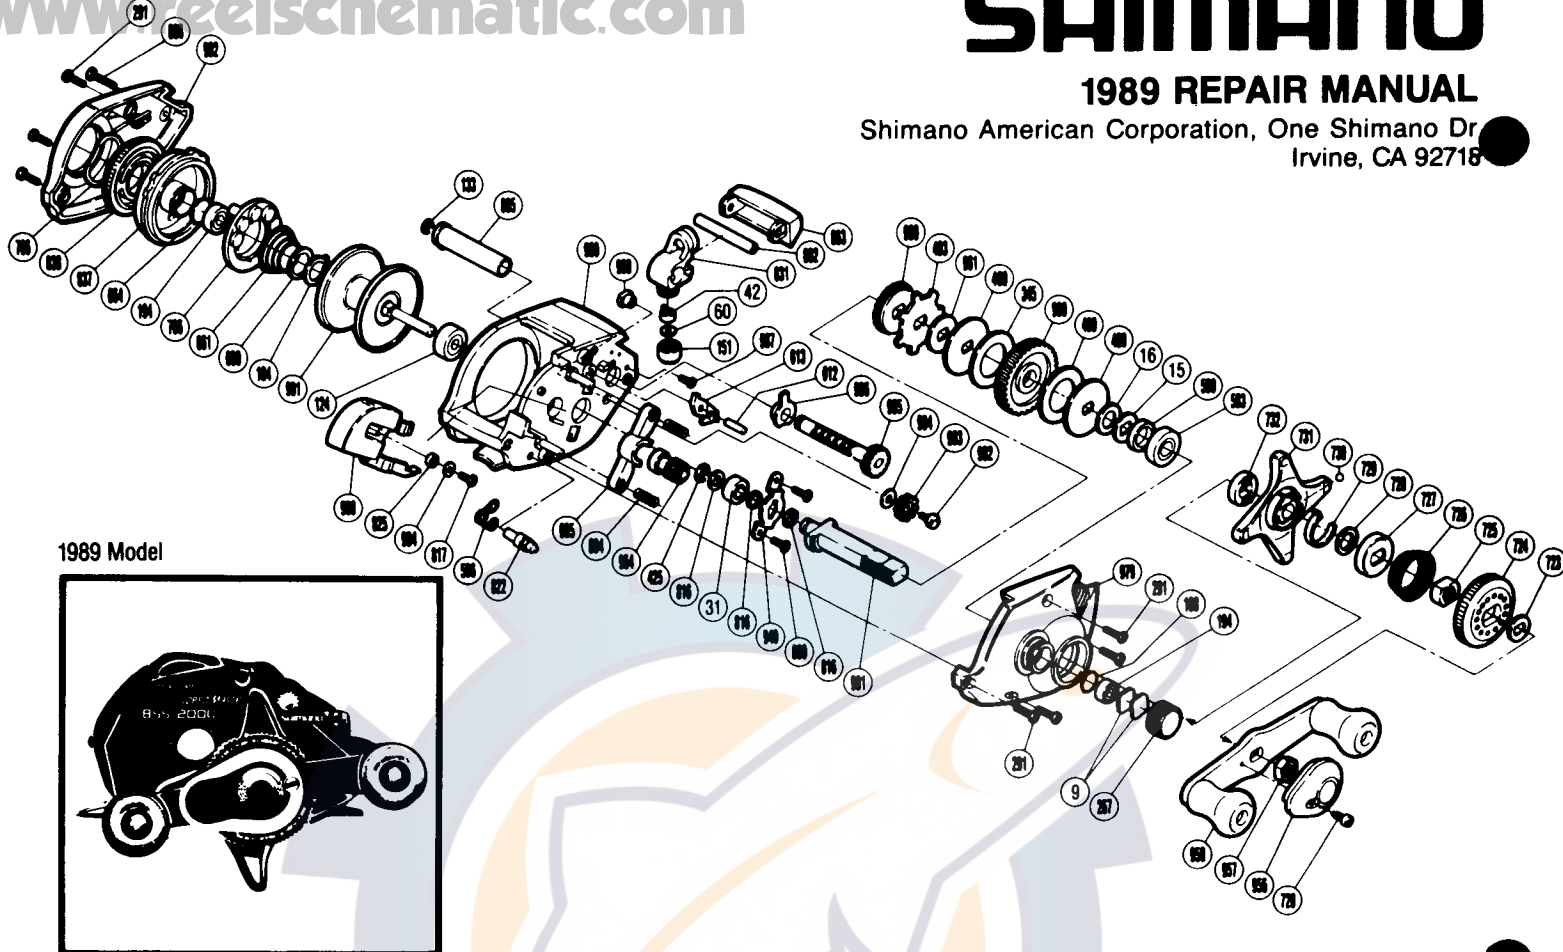

1989 Model

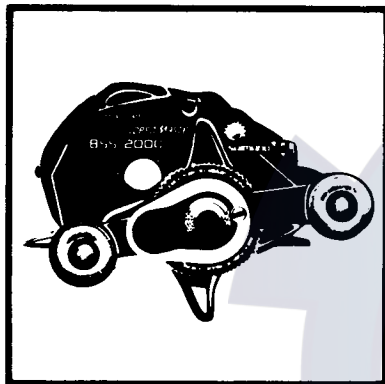

### EXPLODED PARTS VIEW

*SUPER*  
**Bantam SpeedMaster**  
**2000ULS**

### PARTS LIST

PART #	DESCRIPTION
BNT 0009	Spacer (A)
BNT 0015	Drag Spring Washer
BNT 0016	Friction Washer (C)
BNT 0031	Spool Shaft Bearing
BNT 0042	Line Guide Pawl
BNT 0060	Spacer (Optional)
BNT 0124	Spool Shaft Bearing
BNT 0133	Worm Shaft Retainer
BNT 0151	Pawl Cap
BNT 0184	Magnet Retainer Lock
BNT 0188	O Ring
BNT 0194	Ball Bearing
BNT 0267	Cast Control Cap
BNT 0291	Side Plate Screw
BNT 0345	Drive Shaft Washer "B"
BNT 0425	Clutchbutton Lock
BNT 0489	Key Washer "A"
BNT 0490	Drag Washer
BNT 0493	Anti-Reverse Ratchet
BNT 0583	Drive Shaft Bearing
BNT 0596	Retractor Spring
BNT 0598	Bushing
BNT 0604	Yoke Spring
BNT 0605	Yoke
BNT 0609	Drive Shaft Retainer Screw

PART #	DESCRIPTION
BNT 0612	Anti-Reverse Pawl Pin
BNT 0613	Anti-Reverse Pawl
BNT 0660	Spring Spacer
BNT 0661	Magnet Retainer Spring
BNT 0664	Spacer (B)
BNT 0706	Magnet Retainer
BNT 0720	Handle Nut Plate Screw
BNT 0723	Friction Washer "A"
BNT 0724	Pre-Set Dial
BNT 0725	Pre-Set Nut
BNT 0726	Pre-Set Spring
BNT 0727	Strike
BNT 0728	Pre-Set Washer
BNT 0729	Strike Spring
BNT 0730	Strike Ball
BNT 0731	Star Drag
BNT 0732	Drive Shaft Cam
BNT 0766	Dial Friction Washer
BNT 0816	Drive Shaft Washer
BNT 0817	Multi Purpose Screw
BNT 0822	Retractor Spring Pin
BNT 0825	Yoke Plate Washer (A)
BNT 0831	Line Guide
BNT 0837	Dial Case
BNT 0838	Magnetic Control Dial

PART #	DESCRIPTION
BNT 0862	Stabilizer Bar
BNT 0863	Level Wind Protector
BNT 0865	Level Wind Guard
BNT 0868	Left Side Plate Screw
BNT 0940	Drive Shaft Retainer
BNT 0956	Handle Nut Plate
BNT 0957	Handle Nut
BNT 0958	Handle Assembly
BNT 0960	Drive Gear
BNT 0961	Key Washer "B"
BNT 0964	Pinion Gear
BNT 0979	Right Side Plate
BNT 0980	Idle Gear (C)
BNT 0981	Drive Shaft
BNT 0982	Idle Gear (D) Screw
BNT 0983	Idle Gear (D)
BNT 0984	Multi Purpose Washer
BNT 0985	Worm Shaft
BNT 0986	Worm Bearing (A)
BNT 0987	Stabilizer Bar Screw
BNT 0988	Idle Gear (D) Nut
BNT 0989	One-Piece Frame
BNT 0990	Clutch Button
BNT 0991	Spool
BNT 0992	Left Side Plate