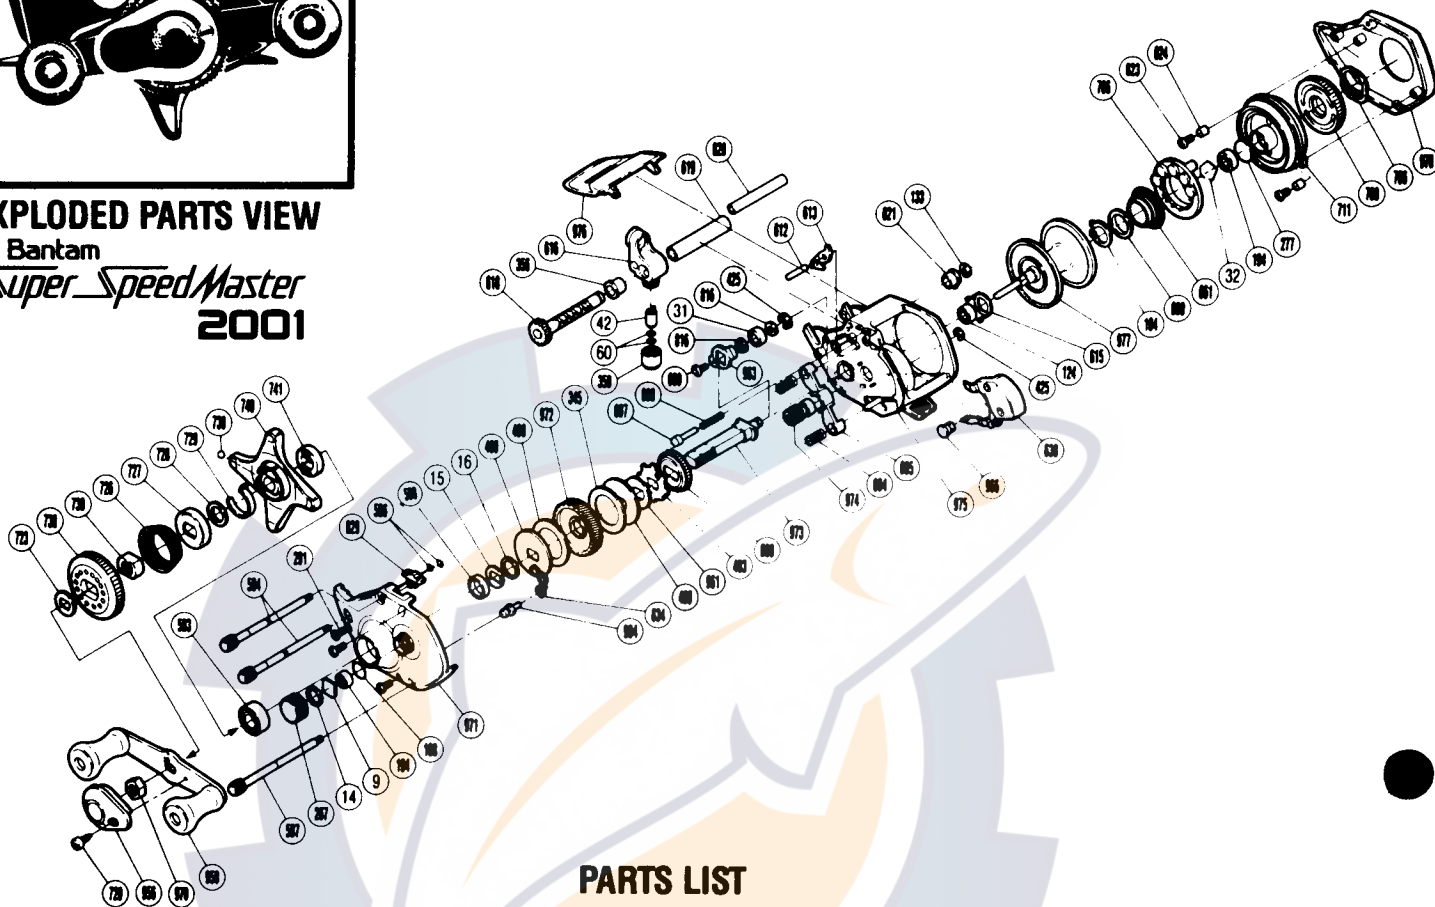
**EXPLODED PARTS VIEW**

Bantam
Super SpeedMaster
2001

**PARTS LIST****PART # DESCRIPTION**

BNT 0009	Spacer (A)
BNT 0014	Friction Washer (B)
BNT 0015	Drag Spring Washer
BNT 0016	Friction Washer (C)
BNT 0031	Spool Shaft Bearing
BNT 0032	Bearing Retainer
BNT 0042	Line Guide Pawl
BNT 0060	Spacer (Optional)
BNT 0124	Spool Shaft Bearing
BNT 0133	Worm Shaft Retainer
BNT 0184	Magnet Retainer Lock
BNT 0188	O Ring
BNT 0194	Ball Bearing
BNT 0267	Cast Control Cap
BNT 0277	Spacer (B)
BNT 0291	Side Plate Screw
BNT 0345	Drive Shaft Washer "B"
BNT 0356	Worm Bearing "A"
BNT 0358	Pawl Cap
BNT 0425	Clutchbutton Lock
BNT 0489	Key Washer "A"
BNT 0490	Drag Washer
BNT 0493	Anti-Reverse Ratchet
BNT 0583	Drive Shaft Bearing
BNT 0584	Left Side Plate Bolt "C"
BNT 0586	Bolt Retainer
BNT 0587	Left Side Plate Bolt "A"

PART # DESCRIPTION

BNT 0598	Bushing
BNT 0600	Idle Gear
BNT 0604	Yoke Spring
BNT 0605	Yoke
BNT 0607	Switch Spring Pin
BNT 0608	Switch Spring
BNT 0609	Drive Shaft Retainer Screw
BNT 0612	Anti-Reverse Pawl Pin
BNT 0613	Anti-Reverse Pawl
BNT 0615	Bearing Retainer
BNT 0616	Line Guide
BNT 0618	Worm Shaft
BNT 0619	Level Wind Guard
BNT 0620	Stabilizer Bar
BNT 0621	Worm Bearing "B"
BNT 0623	Dial Case Screw
BNT 0624	Screw Support
BNT 0629	Anti-Reverse Switch
BNT 0634	Retractor Spring
BNT 0638	Clutch Button
BNT 0660	Spring Spacer
BNT 0661	Magnet Retainer Spring
BNT 0706	Magnet Retainer
BNT 0708	Magnet Control Dial
BNT 0711	Dial Case
BNT 0720	Handle Nut Plate Screw

PART # DESCRIPTION

BNT 0723	Friction Washer "A"
BNT 0727	Strike
BNT 0728	Pre-Set Washer
BNT 0729	Strike Spring
BNT 0730	Strike Ball
BNT 0738	Pre-Set Dial
BNT 0739	Pre-Set Nut
BNT 0740	Star Drag
BNT 0741	Drive Shaft Cam
BNT 0766	Dial Friction Washer
BNT 0816	Drive Shaft Washer
BNT 0956	Handle Nut Plate
BNT 0958	Handle Assembly
BNT 0961	Key Washer "B"
BNT 0963	Drive Shaft Retainer
BNT 0966	Clutch Button Guide Pin
BNT 0970	Handle Nut
BNT 0971	Left Side Plate
BNT 0972	Drive Gear
BNT 0973	Drive Shaft
BNT 0974	Pinion Gear
BNT 0975	One-Piece Frame
BNT 0976	Thumb Rest
BNT 0977	Spool
BNT 0978	Right Side Plate
BNT 0994	Retractor Spring Pin