


1991 REPAIR MANUAL

Shimano American Corporation, One Shimano Dr.
Irvine, CA 92718

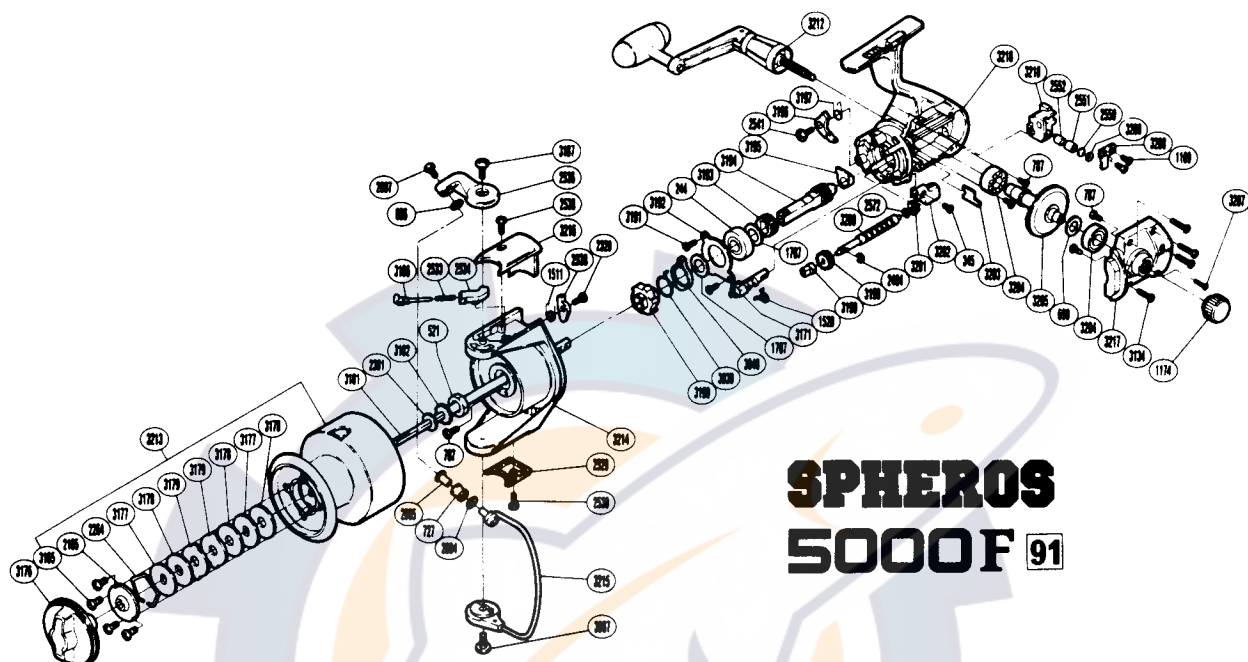

TO ORDER: USE RD PREFIX
WITH PART NUMBER

PARTS LIST

RD #	DESCRIPTION	RD #	DESCRIPTION	RD #	DESCRIPTION
0244	Ball Bearing	2538	Bail Trip Lever	3193	Pinion Idle Gear
0345	Anti-Reverse Lever Screw	2541	Anti-Reverse Pawl Screw	3194	Pinion Gear
0521	Rotor Nut	2550	Spacer (A)	3195	Bushing
0690	Drive Gear Washer	2551	Oscillating Slider Bushing	3196	Anti-Reverse Pawl
0727	Line Roller	2552	Oscillating Pawl	3197	Anti-Reverse Pawl Spring
0787	Multi Purpose Screw	2572	Worm Shaft Spacer	3198	Worm Bearing (front)
0856	Line Roller Washer	2819	Line Roller Bushing	3199	Idle Gear
1109	Slider Retainer Screw	3039	Anti-Reverse Lock Out Spring	3200	Worm Shaft
1174	Handle Screw Cap	3040	Anti-Reverse Lock Out	3201	Worm Bearing (rear)
1511	Lever Spring	3087	Bail Trip Cam Screw	3202	Anti-Reverse Lever
1520	Anti-Reverse Cam Spring	3134	Side Cover Screw (A)	3203	Worm Shaft Retainer
1707	Bushing Washer	3165	Seal Plate Screw	3204	Ball Bearing
2094	Line Roller Spacer	3171	Anti-Reverse Cam	3205	Drive Gear
2097	Line Roller Screw	3176	Drag Knob	3207	Side Cover Screw (B)
2165	Seal Plate	3177	Key Washer	3208	Oscillating Pawl Cover
2264	Drag Washers Retainer	3178	Drag Washer	3209	Spacer (B)
2329	Bail Trip Lever Screw	3179	Eared Washer	3210	Oscillating Slider
2361	Spool Washer	3181	Main Shaft	3212	Handle Assembly
2404	Idle Gear Retainer	3182	Spool Support	3213	Spool Assembly
2529	Rotor Side Cover	3186	Bail Spring Guide (A)	3214	Rotor
2530	Bail Spring Cover Screw	3187	Bail Arm Screw	3215	Bail Assembly
2533	Bail Spring	3190	Anti-Reverse Ratchet	3216	Bail Spring Cover
2534	Bail Spring Guide (B)	3191	Bearing Retainer Screw	3217	Side Cover
2536	Bail Arm	3192	Bearing Retainer	3218	Body