

PART #	DESCRIPTION	"A" INTERCHANGEABILITY	"B" INTERCHANGEABILITY
RD 0026	Ball Bearing	BNT0807, BR 0037, KXB0028, MLX0025, TGT0223, TLD0123, TT 0117	
RD 0041	Drive Gear Washer	BR 0049, RD 1524, MLX0040, X/Z0150	
RD 0071	Rotor Nut	BR 0010, KXB0073, MLX0096	
RD 0540	Ball Trip Lever Screw	BNT0689, BR 0066, MCR0021, TGT0068, TLD0058, TT 0187	BR 0470, BR 0539, RD 1506, RD 3088
RD 0787	Nut Lock Screw	BNT0696, BR 0278	RD 1111
RD 0792	Bearing Retainer Screw	BR 0035	RD 0358, TGT0005
RD 0930	Ball Bearing	BR 0047	
RD 1427	Spool Support	BR 0435A, X/Z0089	
RD 1888	Anti-Reverse Lock Out Spring		
RD 1890	Bushing Washer	TGT0224	
RD 1891	Ball Spring Cover Screw		RD 1504
RD 2280	Anti-Reverse Lock Out		
RD 2283	Anti-Reverse Pawl Screw	BR 0557	
RD 3394	Quick-Fire II Trigger Assembly		RD 3648
RD 3397	Ball Spring		
RD 3400	Ball Trip Lever		
RD 3402	Cover Screw		RD 3655
RD 3406	Handle Screw Cap Assembly		RD 3668
RD 3447	Spool Assembly (aluminum)		RD 3913
RD 3450	Spool Assembly (graphite)		RD 3907, RD 3914
RD 3455	Spool Washer		
RD 3471	Anti-Reverse Cam Spring		
RD 3645	Drag Knob		RD 3391, RD 3453
RD 3646	Main Shaft		
RD 3651	Ball Spring Guide (A)		
RD 3652	Ball Spring Guide (B)		
RD 3656	Anti-Reverse Ratchet		
RD 3657	Pinion Gear		
RD 3658	Anti-Reverse Pawl		
RD 3659	Anti-Reverse Pawl Spring		
RD 3660	Anti-Reverse Cam		
RD 3661	Anti-Reverse Lever Assembly		
RD 3662	Drive Gear		
RD 3663	Oscillating Gear		
RD 3664	Oscillating Slider		
RD 3665	Slider Retainer Screw		
RD 3719	Rotor		RD 3700, RD 3647
RD 3720	Line Roller		
RD 3721	Ball Assembly		
RD 3722	Ball Spring Cover		RD 3653, RD 3702
RD 3723	Counterbalance Cover		RD 3654, RD 3703
RD 3724	Side Cover Screw		RD 3404, RD 3666, RD 3704, RD 3759
RD 3725	Body Assembly		
RD 3726	Double Paddle Handle Assembly		RD 3801