

PART #	DESCRIPTION	"A" INTERCHANGEABILITY	"B" INTERCHANGEABILITY
RD 0041	Drive Gear Washer	BR 0049, RD 1524, MLX0040, X/Z0150	
RD 0071	Rotor Nut	BR 0010, KXB0073, MLX0096	
RD 0787	Nut Lock Screw	BNT0696, BR 0278	RD 1111
RD 0930	Ball Bearing	BR 0047	
RD 1509	Ball Spring		
RD 2275	Ball Spring Guide (B)		
RD 2298	Spacer	BR 0513	
RD 2329	Ball Trip Lever Screw		
RD 2388	Ball Bearing		
RD 2901	Spool Assembly		
RD 3305	SiC Ceramic Roller		
RD 3402	Cover Screw		RD 3655
RD 3404	Side Cover Screw		RD 3666, RD 3704, RD 3724, RD 3759
RD 3406	Handle Screw Cap Assembly		RD 3668
RD 3453	Drag Knob		RD 3391, RD 3645
RD 3454	Main Shaft		
RD 3455	Spool Washer		
RD 3456	Spool Support		
RD 3457	Rotor		RD 3832
RD 3458	Ball Assembly		RD 3833
RD 3459	Ball Spring Guide (A)		
RD 3460	Ball Spring Cover Screw		BR 0477, RD 2722
RD 3461	Ball Spring Cover		RD 3834
RD 3462	Ball Trip Lever		
RD 3463	Counterbalance Cover		RD 3835
RD 3464	Lock Out Spring Holder		
RD 3465	Anti-Reverse Lock Out Spring		
RD 3466	Anti-Reverse Lock Out		
RD 3467	Bushing Washer		
RD 3468	Bearing Retainer Screw		
RD 3469	Bearing Retainer		
RD 3470	Pinion Gear		
RD 3471	Anti-Reverse Cam Spring		
RD 3472	Anti-Reverse Cam		
RD 3473	Anti-Reverse Pawl Screw		
RD 3474	"O" Ring		
RD 3475	Anti-Reverse Pawl		
RD 3476	Anti-Reverse Pawl Spring		
RD 3477	Worm Bearing		
RD 3478	Worm Shaft Spacer		
RD 3479	Idle Gear		
RD 3480	Worm Shaft		
RD 3481	Bushing		
RD 3482	Drive Gear		
RD 3483	Slider Retainer Screw	BR 0936, RD 3260	
RD 3484	Oscillating Pawl Cover		
RD 3485	Oscillating Slider Bushing		
RD 3486	Oscillating Pawl		
RD 3487	Oscillating Slider		
RD 3488	Oscillating Guide Holder		
RD 3489	Oscillating Guide		
RD 3490	Anti-Reverse Lever Assembly		
RD 3491	Rear Protector		
RD 3492	Rear Protector Screw		
RD 3493	Body Assembly		
RD 3494	Handle Assembly		