



STRADIC 2000F

TO ORDER: USE RD PREFIX
WITH PART NUMBER

PARTS LIST

| RD # | DESCRIPTION | RD # | DESCRIPTION | RD # | DESCRIPTION |
|------|------------------------------|------|----------------------------|------|-----------------------|
| 0041 | Drive Gear Washer | 2284 | Anti-Reverse Pawl | 2884 | Oscillating Slider |
| 0050 | Anti-Reverse Lever Screw | 2285 | Anti-Reverse Pawl Spring | 2902 | Spool Assembly |
| 0071 | Rotor Nut | 2286 | Anti-Reverse Cam | 3046 | Drag Knob |
| 0540 | Multi Purpose Screw | 2287 | Anti-Reverse Cam Spring | 3050 | Quick-Fire II Trigger |
| 0779 | Bail Trip Cam Screw | 2296 | Slider Retainer Screw | 3051 | Rotor Side Cover |
| 0784 | Line Roller Washer | 2298 | Spacer | 3053 | Line Roller Screw |
| 0786 | Trigger Screw | 2299 | Oscillating Slider Bushing | 3054 | Trigger Cam |
| 0787 | Nut Lock Screw | 2300 | Oscillating Pawl | 3055 | Bail Arm |
| 0930 | Ball Bearing | 2355 | Drag Washers Retainer | 3057 | Idle Gear (A) |
| 1008 | Handle Lock Washer | 2382 | Key Washer | 3058 | Anti-Reverse Lever |
| 1038 | SiC Ceramic Roller | 2283 | Drag Washer | 3059 | Idle Gear (B) |
| 1426 | Spool Washer | 2387 | Pinion Gear | 3061 | Side Cover Screw |
| 1427 | Spool Support | 2388 | Ball Bearing | 3062 | Handle Screw Cap |
| 1509 | Bail Spring | 2391 | Drive Gear | 3064 | Handle Assembly |
| 1888 | Anti-Reverse Lock Out Spring | 2446 | Bushing | 3065 | Rotor |
| 1890 | Bushing Washer | 2852 | Handle Screw Lock | 3066 | Bail Assembly |
| 1891 | Multi Purpose Screw | 2856 | Bail Spring Guide (A) | 3067 | Bail Spring Cover |
| 2269 | Main Shaft | 2876 | Bearing Retainer | 3068 | Bail Trip Lever |
| 2275 | Bail Spring Guide (B) | 2877 | Idle Gear (B) Shaft | 3069 | Worm Shaft |
| 2279 | Anti-Reverse Ratchet | 2878 | Worm Bearing | 3070 | Side Cover |
| 2280 | Anti-Reverse Lock Out | 2879 | Worm Shaft Spacer | 3071 | Body |
| 2283 | Anti-Reverse Pawl Screw | 2883 | Oscillating Pawl Cover | | |