


STRADIC

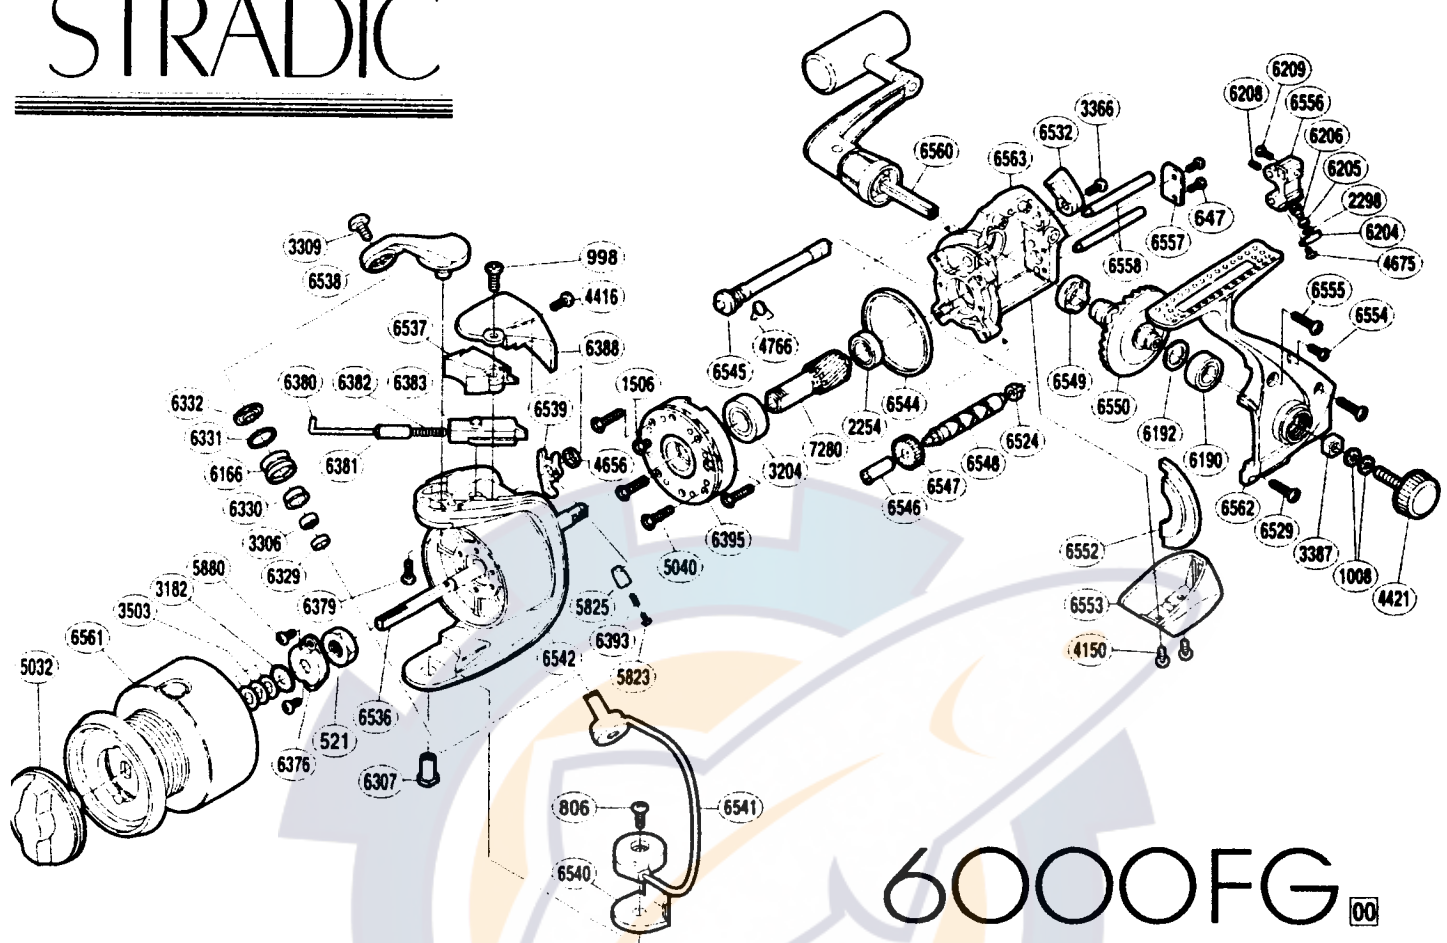

| RD No. | PARTS NAMES | RD No. | PARTS NAMES | RD No. | PARTS NAMES |
|--------|------------------------------|--------|----------------------------|--------|---------------------------|
| 0521 | Rotor Nut | 6166 | Line Roller | 6537 | Bail Spring Cover |
| 0647 | Worm Shaft Retainer Screw | 6190 | Ball Bearing | 6538 | Bail Arm |
| 0806 | Bail Hold Support Screw | 6192 | Drive Gear Washer | 6539 | Bail Trip Lever |
| 0998 | Protector Screw (long) | 6204 | Oscillating Pawl Cover | 6540 | Bail Hold Support Spacer |
| 1008 | Handle Lock Washer | 6205 | Oscillating Slider Bushing | 6541 | Bail Assembly |
| 1506 | Clutch Cover Screw | 6206 | Oscillating Pawl | 6542 | Rotor |
| 2254 | Ball Bearing | 6208 | Set Screw | 6544 | Friction Ring |
| 2298 | Spacer | 6209 | Slider Retainer Screw | 6545 | Anti-Reverse Cam |
| 3182 | Spool Support | 6307 | Bail Hold Support Shaft | 6546 | Worm Bushing (front) |
| 3204 | Ball Bearing | 6329 | Bearing Spacer | 6547 | Idle Gear |
| 3306 | Ball Bearing | 6330 | Line Roller Bushing | 6548 | Worm Shaft |
| 3309 | Line Roller Screw | 6331 | Line Roller Spacer | 6549 | Drive Gear Bushing |
| 3366 | Anti-Reverse Lever Screw | 6332 | Line Roller Washer | 6550 | Drive Gear |
| 3387 | Handle Screw Lock | 6376 | Rotor Nut Lock Plate | 6552 | Side Cover Flange |
| 3503 | Spool Washer | 6379 | Bail Arm Screw | 6553 | Rear Protector |
| 4150 | Rear Protector Screw | 6380 | Bail Spring Guide (A) | 6554 | Side Cover Screw (small) |
| 4416 | Protector Screw (short) | 6381 | Spring Guide (A) Support | 6555 | Side Cover Screw (medium) |
| 4421 | Handle Screw Cap | 6382 | Bail Spring | 6556 | Oscillating Slider |
| 4656 | Trip Lever Spacer | 6383 | Bail Spring Guide (B) | 6557 | Worm Shaft Retainer |
| 4675 | Oscillating Pawl Cover Screw | 6388 | Rotor Protector | 6558 | Oscillating Guide |
| 4766 | Anti-Reverse Cam Spring | 6393 | Lever Spring | 6560 | Handle Assembly |
| 5032 | Drag Knob | 6395 | Roller Clutch Assembly | 6561 | Spool Assembly |
| 5040 | Roller Clutch Screw | 6524 | Worm Bushing (rear) | 6562 | Side Cover |
| 5823 | Lever Spring Guide (A) | 6529 | Side Cover Screw (long) | 6563 | Body |
| 5825 | Lever Spring Guide (B) | 6532 | Anti-Reverse Lever | 7280 | Pinion Gear |
| 5880 | Nut Lock Screw | 6536 | Main Shaft | | |