



**SYMETRE
2000F⁹¹**

TO ORDER: USE RD PREFIX
WITH PART NUMBER

PARTS LIST

RD #	DESCRIPTION	RD #	DESCRIPTION	RD #	DESCRIPTION
0041	Drive Gear Washer	2272	Rotor Side Cover	2857	Trigger Cam
0071	Rotor Nut	2275	Bail Spring Guide (B)	2858	Bail Arm
0345	Anti-Reverse Lever Screw	2279	Anti-Reverse Ratchet	2876	Bearing Retainer
0774	Handle Knob Screw	2280	Anti-Reverse Lock Out	2877	Idle Gear (B) Shaft
0784	Line Roller Washer	2283	Anti-Reverse Pawl Screw	2878	Worm Bearing
0787	Nut Lock Screw	2284	Anti-Reverse Pawl	2879	Worm Shaft Spacer
0803	Handle Knob	2285	Anti-Reverse Pawl Spring	2883	Oscillating Pawl Cover
0930	Ball Bearing	2286	Anti-Reverse Cam	2884	Oscillating Slider
0949	Trigger Screw	2287	Anti-Reverse Cam Spring	2902	Spool Assembly
1008	Handle Lock Washer	2292	Anti-Reverse Lever	3057	Idle Gear (A)
1038	SiC Ceramic Roller	2296	Slider Retainer Screw	3059	Idle Gear (B)
1302	Line Roller Screw	2298	Spacer	3061	Side Cover Screw
1426	Spool Washer	2299	Oscillating Slider Bushing	3068	Bail Trip Lever
1427	Spool Support	2300	Oscillating Pawl	3069	Worm Shaft
1442	Handle Screw Cap	2316	Handle Assembly	3084	Drag Knob
1504	Bail Spring Cover Screw	2355	Drag Washers Retainer	3087	Bail Trip Cam Screw
1506	Bail Trip Lever Screw	2382	Key Washer	3088	Bail Arm Screw
1509	Bail Spring	2383	Drag Washer	3092	Rotor
1888	Anti-Reverse Lock Out Spring	2387	Pinion Gear	3093	Bail Assembly
1890	Bushing Washer	2391	Drive Gear	3094	Bail Spring Cover
1891	Bearing Retainer Screw	2446	Bushing	3095	Side Cover
2269	Main Shaft	2852	Handle Screw Lock	3096	Body
2271	Quick-Fire II Trigger	2856	Bail Spring Guide (A)		