



SYNCOPATE 1000 96

SC1000F

Part #	Description	Part #	Description	Part #	Description
RD 0026	Ball Bearing	RD 2293	Drive Gear Bushing	RD 3663	Oscillating Gear
RD 0041	Drive Gear Washer	RD 2852	Handle Screw Lock	RD 3664	Oscillating Slider
RD 0071	Rotor Nut	RD 3359	Line Roller Washer	RD 3665	Slider Retainer Screw
RD 0345	Anti-Reverse Lever Screw	RD 3400	Bail Trip Lever	RD 3700	Rotor
RD 0540	Multi-Purpose Screw	RD 3402	Cover Screw	RD 3702	Bail Spring Cover
RD 0642	Side Cover Screw	RD 3447	Spool Assembly (aluminum)	RD 3703	Counterbalance Cover
RD 0779	Bail Hold Support Screw	RD 3450	Spool Assembly (graphite)	RD 3869	Anti-Reverse Lock Out Spring
RD 0786	Trigger Screw	RD 3455	Spool Washer	RD 4051	Bail Spring
RD 0787	Nut Lock Screw	RD 3471	Anti-Reverse Cam Spring	RD 4160	Trigger Cam
RD 0792	Bearing Retainer Screw	RD 3645	Drag Knob	RD 4163	Line Roller Bushing
RD 0930	Ball Bearing	RD 3646	Main Shaft	RD 4351	Anti-Reverse Lever
RD 1008	Handle Lock Washer	RD 3651	Bail Spring Guide (A)	RD 4364	Quick-Fire II Trigger
RD 1427	Spool Support	RD 3652	Bail Spring Guide (B)	RD 4365	Bail Assembly
RD 1442	Handle Screw Cap	RD 3656	Anti-Reverse Ratchet	RD 4366	Bail Arm
RD 1630	Handle Assembly	RD 3657	Pinion Gear	RD 4367	Line Roller Screw
RD 1890	Bushing Washer	RD 3658	Anti-Reverse Pawl	RD 4368	Side Cover
RD 1891	Bail Spring Cover Screw	RD 3659	Anti-Reverse Pawl Spring	RD 4369	Body
RD 2280	Anti-Reverse Lock Out	RD 3660	Anti-Reverse Cam	RD 4553	Line Roller (Power)
RD 2283	Anti-Reverse Pawl Screw	RD 3662	Drive Gear		