

PART #	DESCRIPTION	"A" INTERCHANGEABILITY	"B" INTERCHANGEABILITY
RD 0026	Ball Bearing	BNT0807, BR 0037, KXB0028, MLX0025, TGT0223, TLD0123, TT 0117	
RD 0041	Drive Gear Washer	BR 0049, RD 1524, MLX0040, X/Z0150	
RD 0071	Rotor Nut	BR 0010, KXB0073, MLX0096	
RD 0787	Nut Lock Screw	BNT0696, BR 0278	RD 1111
RD 0792	Bearing Retainer Screw	BR 0035	RD 0358, TGT0005
RD 1427	Spool Support	BR 0435A, X/Z0089	
RD 1504	Ball Spring Cover Screw		RD 1891
RD 1506	Ball Trip Lever Screw	BR 0470, BR 0539	BNT0689, BR 0066, MCR0021, TGT0068, TLD0056, TT 0187, RD 0640, RD 3068
RD 1888	Anti-Reverse Lock Out Spring		
RD 1890	Bushing Washer	TGT0224	
RD 2280	Anti-Reverse Lock Out		
RD 2283	Anti-Reverse Pawl Screw	BR 0557	
RD 2293	Drive Gear Bushing		
RD 3397	Ball Spring		
RD 3400	Ball Trip Lever		
RD 3447	Spool Assembly		RD 3913
RD 3455	Spool Washer		
RD 3471	Anti-Reverse Cam Spring		
RD 3645	Drag Knob		RD 3391, RD 3453
RD 3646	Main Shaft		
RD 3647	Rotor		RD 3700, RD 3719
RD 3648	Quick-Fire II Trigger Assembly		RD 3394
RD 3649	Line Roller		
RD 3650	Ball Assembly		RD 3701
RD 3651	Ball Spring Guide (A)		
RD 3652	Ball Spring Guide (B)		
RD 3653	Ball Spring Cover		RD 3702, RD 3722
RD 3654	Counterbalance Cover		RD 3703, RD 3723
RD 3655	Cover Screw		RD 3402
RD 3656	Anti-Reverse Ratchet		
RD 3657	Pinion Gear		
RD 3658	Anti-Reverse Pawl		
RD 3659	Anti-Reverse Pawl Spring		
RD 3660	Anti-Reverse Cam		
RD 3661	Anti-Reverse Lever Assembly		
RD 3662	Drive Gear		
RD 3663	Oscillating Gear		
RD 3664	Oscillating Slider		
RD 3665	Slider Retainer Screw		
RD 3666	Side Cover Screw		RD 3404, RD 3704, RD 3724, RD 3759
RD 3667	Body Assembly		
RD 3668	Handle Screw Cap Assembly		RD 3406
RD 3669	Handle Assembly		