


SHIMANO®

TIAGRA®

TI-130

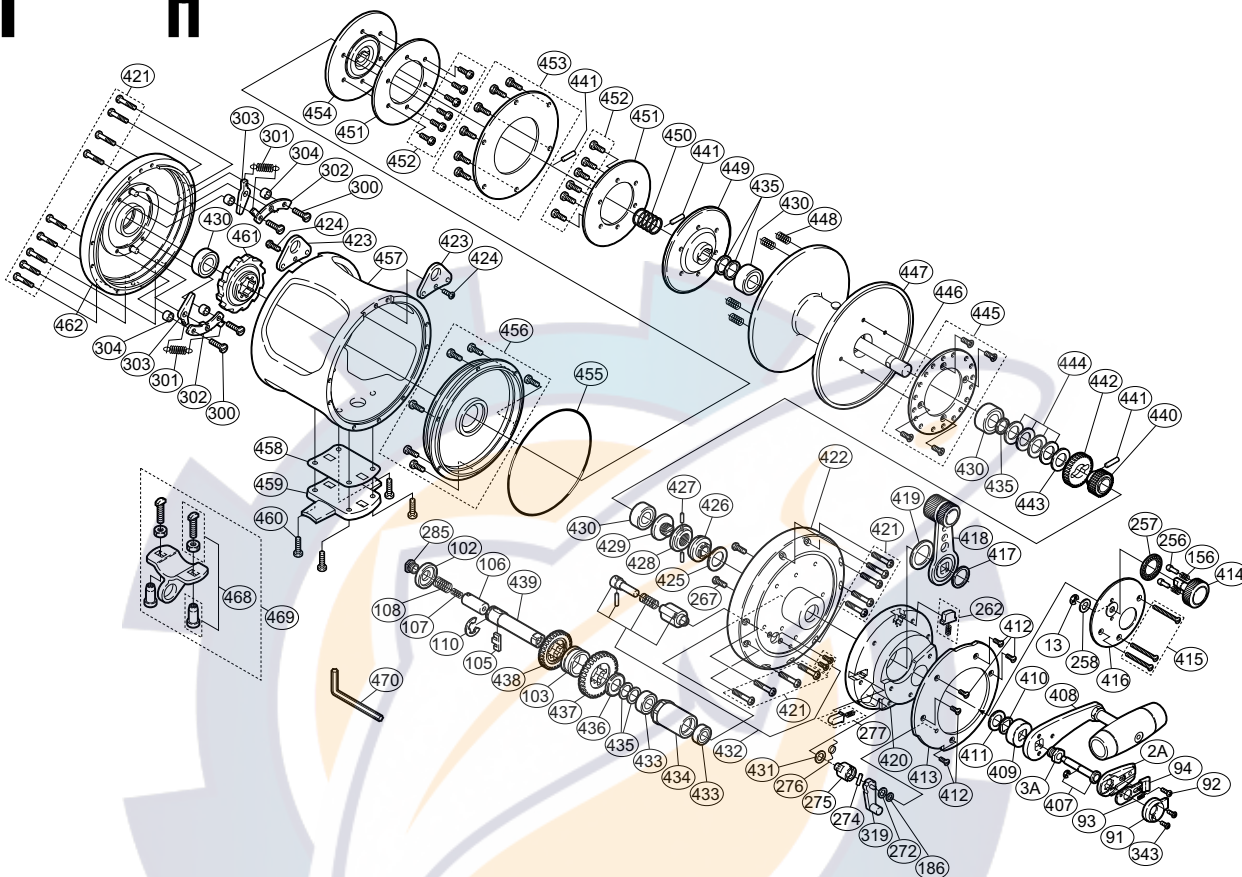

Part No.	Description	Part No.	Description	Part No.	Description
TT 0002A	Handle Bolt Plate	TT 0319	Strike Alert Lever	TT 0437	Drive Gear (A)
TT 0003A	Handle Bolt	TT 0343	Push Button Shield Screw	TT 0438	Drive Gear (B)
TT 0013	"C" Lock	TT 0407	Push "Low" Button Shaft	TT 0439	Drive Shaft
TT 0091	Push Button Shield	TT 0408	Handle Assembly	TT 0440	Pinion Gear (A)
TT 0092	Handle Bolt Plate Screw	TT 0409	Drive Shaft Shield	TT 0441	Cross Pin
TT 0093	Slide Plate Spring	TT 0410	Drive Shaft Thrust Washer	TT 0442	Pinion Gear (B)
TT 0094	Slide Plate	TT 0411	Bearing Spacer	TT 0443	Pre-Load Washer
TT 0102	Friction Washer (A)	TT 0412	Quadrant Anchor Bolts	TT 0444	Pre-Load Spring
TT 0103	Friction Washer (B)	TT 0413	Lever Quadrant	TT 0445	Alert Ratchet
TT 0105	Gear Select Cross Bar	TT 0414	Pre-Program Dial	TT 0446	Main Shaft
TT 0106	Cross Bar Stop	TT 0415	Cover Screws	TT 0447	Spool
TT 0107	Drive Shaft Spring "B"	TT 0416	Lever Hub Cover	TT 0448	Pressure Release Spring
TT 0108	Drive Shaft Spring	TT 0417	Lever Thrust Ring (A)	TT 0449	Pressure Plate (A)
TT 0110	"E" Lock	TT 0418	Drag Control Lever	TT 0450	Pressure Plate Spring
TT 0156	Friction Shoe Spring	TT 0419	Lever Thrust Ring (B)	TT 0451	Drag Washer
TT 0186	Spacer (B)	TT 0420	Right Side Plate (B)	TT 0452	Drag Washer Screws
TT 0256	Dial Click Shoe	TT 0421	Side Plate Screws	TT 0453	Drag Plate
TT 0257	Dial Click	TT 0422	Right Side Plate (A)	TT 0454	Pressure Plate (B)
TT 0258	Dial Washer	TT 0423	Harness Lugs	TT 0455	"O" Ring
TT 0262	Strike Stop	TT 0424	Harness Lug Screw	TT 0456	Cooling Shield
TT 0267	Right Side Plate (B) Screw	TT 0425	Lever Shaft Body Washer	TT 0457	One-Piece Frame
TT 0272	Spacer (A)	TT 0426	Lever Shaft Body	TT 0458	Stand Shield
TT 0274	Plunger Cross Pin (B)	TT 0427	Pre-Program Key Pin	TT 0459	Stand
TT 0275	Plunger Cross Pin Support	TT 0428	Pre-Program Key	TT 0460	Stand Screw
TT 0276	Cross Pin Support Spring	TT 0429	Pre-Program Screw	TT 0461	Anti-Reverse Ratchet
TT 0277	Free Spool Detent	TT 0430	Ball Bearing	TT 0462	Left Side Plate
TT 0285	Drive Shaft Screw	TT 0431	Spacer (C)		
TT 0300	Set Plate Screw	TT 0432	Alert Plunger Assembly		
TT 0301	Dog Spring	TT 0433	Ball Bearing	TT 0468	Rod Clamp Bolt/Nuts
TT 0302	Set Plate	TT 0434	Drive Shaft Holder	TT 0469	Rod Clamp Assembly
TT 0303	Dog	TT 0435	Spacer (D)		
TT 0304	Set Plate Support	TT 0436	Friction Washer (C)	TT 0470	Wrench