


# TIAGRA

TI-16

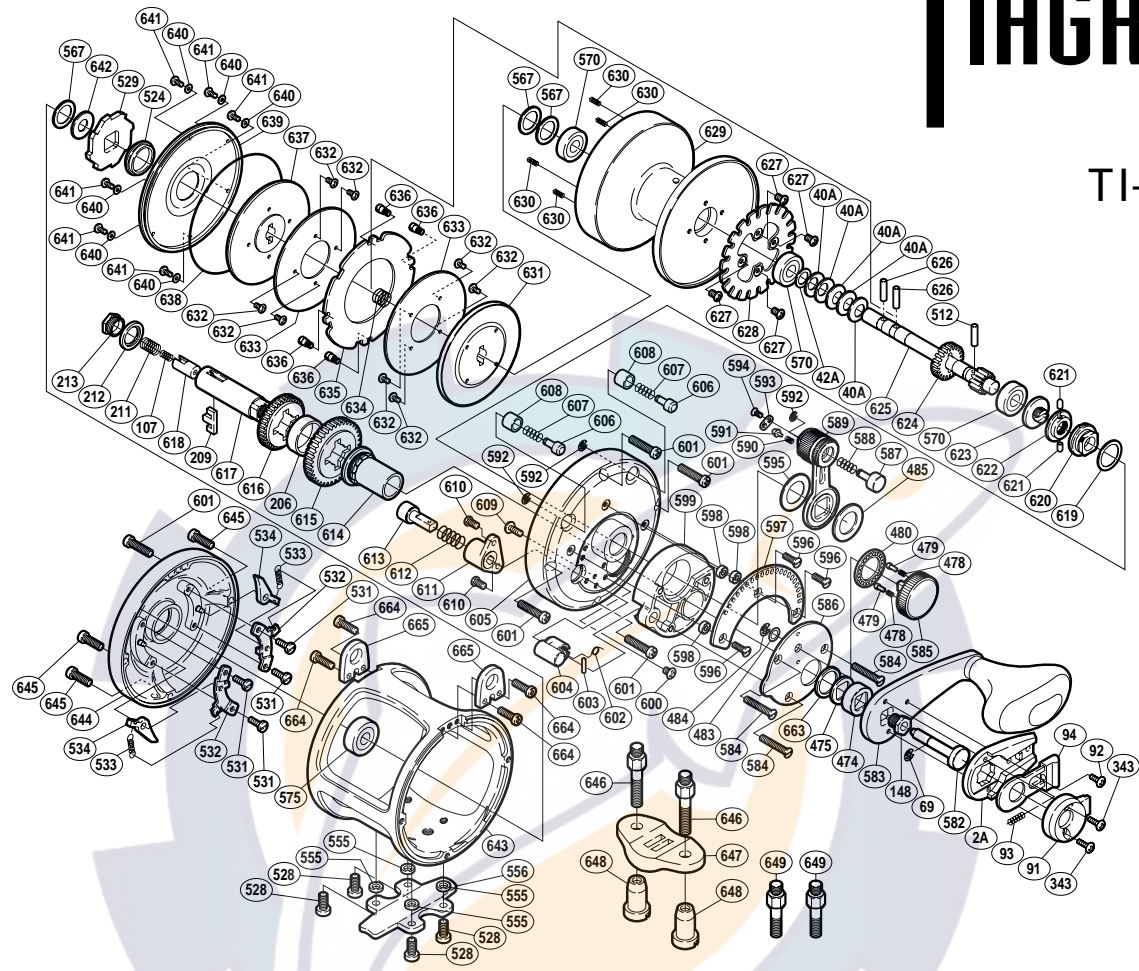

Part No.	Description
TT 0002A	Handle Bolt Plate
TT 0040A	Pre-Load Spring
TT 0042A	Bearing Thrust Washer
TT 0069	"E" Lock
TT 0091	Push Button Shield
TT 0092	Handle Bolt Plate Screw
TT 0093	Slide Plate Spring
TT 0094	Slide Plate
TT 0107	Drive Shaft Spring "B"
TT 0148	Handle Bolt
TT 0206	Friction Washer (C)
TT 0209	Gear Select Cross Bar
TT 0211	Drive Shaft Spring
TT 0212	Friction Washer (A)
TT 0213	Drive Shaft Screw
TT 0343	Push Button Shield Screw
TT 0474	Drive Shaft Shield
TT 0475	Drive Shaft Thrust Washer
TT 0478	Friction Shoe Spring
TT 0479	Dial Click Shoe
TT 0480	Dial Click
TT 0483	Dial Washer
TT 0484	"E" Lock
TT 0485	Lever Thrust Ring (B)
TT 0512	Cross Pin (A)
TT 0524	Waterproof Ring
TT 0528	Stand Screw
TT 0529	Anti-Reverse Ratchet
TT 0531	Set Plate Screw
TT 0532	Set Plate
TT 0533	Dog Spring
TT 0534	Dog
TT 0555	Stand Washer
TT 0556	Stand
TT 0567	Bearing Thrust Washer (B)
TT 0570	Ball Bearing
TT 0575	Ball Bearing

Part No.	Description
TT 0582	Push "Low" Button Shaft
TT 0583	Handle Assembly
TT 0584	Cover Screw
TT 0585	Pre-Program Dial
TT 0586	Lever Hub Cover
TT 0587	Drag Control Button
TT 0588	Drag Control Button Spring
TT 0589	Drag Control Lever
TT 0590	Lever Click Shoe
TT 0591	Lever Click
TT 0592	"E" Lock
TT 0593	Lever Click Cover
TT 0594	Lever Click Cover Screw
TT 0595	Lever Thrust Ring (A)
TT 0596	Quadrant Anchor Bolt
TT 0597	Lever Quadrant
TT 0598	Lever Quadrant Bushing
TT 0599	Right Side Plate (B)
TT 0600	Drive Shaft Holder Screw
TT 0601	Right Side Plate Screw
TT 0602	Cross Pin Support Spring
TT 0603	Plunger Cross Pin (B)
TT 0604	Plunger Cross Pin Support
TT 0605	Right Side Plate (A)
TT 0606	Free Spool Detent
TT 0607	Pressure Spring
TT 0608	Detent Bushing
TT 0609	Right Side Plate (B) Screw
TT 0610	Plunger Holder Screw
TT 0611	Plunger Holder
TT 0612	Plunger Spring
TT 0613	Alert Plunger
TT 0614	Drive Shaft Holder
TT 0615	Drive Gear (A)
TT 0616	Drive Gear (B)
TT 0617	Drive Shaft
TT 0618	Cross Bar Stop

Part No.	Description
TT 0619	Lever Shaft Body Washer
TT 0620	Lever Shaft Body
TT 0621	Pre-Program Key Pin
TT 0622	Pre-Program Dial
TT 0623	Pre-Program Screw
TT 0624	Pinion Gear (B)
TT 0625	Pinion Shaft
TT 0626	Cross Pin (B)
TT 0627	Alert Ratchet Screw
TT 0628	Alert Ratchet
TT 0629	Spool
TT 0630	Drag Plate Spring
TT 0631	Pressure Plate (A)
TT 0632	Drag Washer Screw
TT 0633	Drag Washer
TT 0634	Pressure Plate Spring
TT 0635	Drag Plate
TT 0636	Drag Plate Screw
TT 0637	Pressure Plate (B)
TT 0638	"O" Ring (A)
TT 0639	Cooling Shield
TT 0640	Cooling Shield Washer
TT 0641	Cooling Shield Screw
TT 0642	Bearing Spacer
TT 0643	One-Piece Frame
TT 0644	Left Side Plate
TT 0645	Left Side Plate Screw
TT 0663	Bearing Spacer
TT 0664	Harness Lug Screw
TT 0665	Harness Lug
TT 0646	Rod Clamp Bolt (accessory)
TT 0647	Rod Clamp (accessory)
TT 0648	Rod Clamp Nut (A) (accessory)
TT 0649	Rod Clamp Bolt (S) (accessory)