



| Part No. | Description               | Part No. | Description                | Part No. | Description           |
|----------|---------------------------|----------|----------------------------|----------|-----------------------|
| TT 0002A | Handle Bolt Plate         | TT 0483  | Dial Washer                | TT 0515  | Cross Pin (B)         |
| TT 0033A | Ball Bearing              | TT 0484  | "E" Lock                   | TT 0516  | Alert Ratchet         |
| TT 0040A | Pre-Load Spring           | TT 0485  | Lever Thrust Ring (B)      | TT 0518  | Pressure Plate Spring |
| TT 0042A | Bearing Thrust Washer     | TT 0486  | Drag Control Lever         | TT 0519  | Drag Plate            |
| TT 0091  | Push Button Shield        | TT 0487  | Lever Thrust Ring (A)      | TT 0520  | Drag Washer Screws    |
| TT 0092  | Handle Bolt Plate Screw   | TT 0488  | Quadrant Anchor Bolts      | TT 0521  | Drag Washer           |
| TT 0093  | Slide Plate Spring        | TT 0489  | Lever Quadrant             | TT 0522  | Pressure Plate        |
| TT 0094  | Slide Plate               | TT 0490  | Spacer                     | TT 0523  | Cooling Shield        |
| TT 0107  | Drive Shaft Spring "B"    | TT 0491  | Strike Alert Lever         | TT 0524  | Waterproof Ring       |
| TT 0148  | Handle Bolt               | TT 0492  | Plunger Cross Pin (B)      | TT 0528  | Stand Screw           |
| TT 0206  | Friction Washer (C)       | TT 0493  | Plunger Cross Pin Support  | TT 0529  | Anti-Reverse Ratchet  |
| TT 0209  | Gear Select Cross Bar     | TT 0494  | Strike Stop                | TT 0530  | Bearing Spacer        |
| TT 0210  | Cross Bar Stop            | TT 0495  | Right Side Plate (B)       | TT 0531  | Set Plate Screw       |
| TT 0211  | Drive Shaft Spring        | TT 0496  | Free Spool Detent          | TT 0532  | Set Plate             |
| TT 0212  | Friction Washer (A)       | TT 0497  | Drive Shaft Holder Screw   | TT 0533  | Dog Spring            |
| TT 0213  | Drive Shaft Screw         | TT 0498  | Side Plate Screws          | TT 0534  | Dog                   |
| TT 0276  | Cross Pin Support Spring  | TT 0499  | Right Side Plate (A)       | TT 0535  | Left Side Plate       |
| TT 0343  | Push Button Shield Screw  | TT 0500  | Harness Lugs               | TT 0551  | Lever Shaft Body      |
| TT 0424  | Harness Lug Screw         | TT 0501  | Right Side Plate (B) Screw | TT 0552  | Pinion Shaft          |
| TT 0471  | Handle Assembly           | TT 0502  | Lever Shaft Body Washer    | TT 0553  | Spool                 |
| TT 0472  | Push "Low" Button Shaft   | TT 0504  | Pre-Program Key Pin        | TT 0554  | One-Piece Frame       |
| TT 0474  | Drive Shaft Shield        | TT 0505  | Pre-Program Key            | TT 0555  | Stand Washer          |
| TT 0475  | Drive Shaft Thrust Washer | TT 0506  | Pre-Program Screw          | TT 0556  | Stand                 |
| TT 0476  | Bearing Spacer            | TT 0507  | Alert Plunger Assembly     |          |                       |
| TT 0477  | Pre-Program Dial          | TT 0508  | Drive Shaft Holder         |          |                       |
| TT 0478  | Friction Shoe Spring      | TT 0509  | Drive Gear (A)             |          |                       |
| TT 0479  | Dial Click Shoe           | TT 0510  | Drive Gear (B)             | TT 0559  | Rod Clamp Bolt / Nut  |
| TT 0480  | Dial Click                | TT 0511  | Drive Shaft                | TT 0560  | Rod Clamp Assembly    |
| TT 0481  | Cover Screws              | TT 0512  | Cross Pin (A)              |          |                       |
| TT 0482  | Lever Hub Cover           | TT 0513  | Pinion Gear (B)            | TT 0470  | Wrench                |