

| PART # | DESCRIPTION | 'A' INTERCHANGEABILITY | 'B' INTERCHANGEABILITY |
|----------|----------------------------|------------------------------------|---|
| TT 0002A | Handle Bolt Plate | | |
| TT 0003A | Handle Bolt | | |
| TT 0013 | "C" Lock | | |
| TT 0033 | Ball Bearing | | |
| TT 0036 | Cross Pin (A) | | |
| TT 0036C | Cross Pin (B) | | |
| TT 0040 | Pre Load Spring | TGT0092 | |
| TT 0042 | Bearing Thrust Washer | TGT0091 | |
| TT 0045B | Pressure Plate Spring | | |
| TT 0090 | Push Button Shield Screw | | KXB0044, MLX0043, RD 0036, X/Z0086, RD 0341 |
| TT 0091 | Push Button Shield | | |
| TT 0092 | Handle Bolt Plate Screw | RD 0101 | |
| TT 0093 | Slide Plate Spring | | |
| TT 0094 | Slide Plate | | |
| TT 0102 | Friction Washer (A) | | |
| TT 0103 | Friction Washer (B) | | |
| TT 0105 | Gear Select Cross Bar | | |
| TT 0106 | Cross Bar Stop | | |
| TT 0107 | Drive Shaft Spring "B" | | |
| TT 0108 | Drive Shaft Spring | | |
| TT 0110 | "E" Lock | | |
| TT 0114A | Lever Shaft Body Washer | | |
| TT 0148 | Wrench | | |
| TT 0156 | Friction Shoe Spring | TLD0180 | |
| TT 0186 | Spacer (B) | BNT0667, TGT0070, TLD0052, TRN0106 | |
| TT 0247 | Push "Low" Button Shaft | | |
| TT 0248 | Handle Assembly | | |
| TT 0249 | Drive Shaft Shield | | |
| TT 0250 | Drive Shaft Washer | | |
| TT 0251 | Quadrant Anchor Bolts | | |
| TT 0252 | Lever Quadrant | | |
| TT 0253 | Lever Hub Cover | | |
| TT 0254 | Cover Screw | | |
| TT 0255 | Pre Program Dial | | |
| TT 0256 | Dial Click Shoe | RD 2628 | |
| TT 0257 | Dial Click | | |
| TT 0258 | Dial Washer | | |
| TT 0259 | Lever Thrust Ring A | | |
| TT 0260 | Drag Control Lever | | |
| TT 0261 | Lever Thrust Ring B-1 | | |
| TT 0262 | Strike Stop | | |
| TT 0263 | Right Side Plate (B) | | |
| TT 0264 | Side Plate Screw | | |
| TT 0265 | Right Side Plate (A) | | |
| TT 0266 | Harness Lugs | | |
| TT 0267 | Right Side Plate (B) Screw | TGT0216 | TGT0008, TGT0081, TLD0024 |
| TT 0268 | Lever Shaft Body | | |
| TT 0269 | Pre Program Key | | |
| TT 0270 | Pre Program Key Pin | | |
| TT 0271 | Pre Program Screw | | |
| TT 0272 | Spacer (A) | | |
| TT 0273 | Strike Alert Lever | | |
| TT 0274 | Plunger Cross Pin (B) | | |
| TT 0275 | Plunger Cross Pin Support | | |
| TT 0276 | Cross Pin Support Spring | | |
| TT 0277 | Free Spool Detent | | |
| TT 0278 | Alert Plunger Assembly | | |
| TT 0279 | Holder Nut | | |
| TT 0280 | Drive Shaft Holder | | |
| TT 0281 | Lock Pin | | |
| TT 0282 | Drive Gear (A) | | |
| TT 0283 | Drive Gear (B) | | |
| TT 0284 | Drive Shaft | | |
| TT 0285 | Drive Shaft Screw | | |
| TT 0286 | Pinion Gear (A) | | |
| TT 0287 | Pinion Gear (B) | | |
| TT 0288 | Pre Load Washer | | |
| TT 0289 | Alert Ratchet | | |
| TT 0290 | Piston Assembly | | |
| TT 0291 | Spool | | |
| TT 0292 | Drag Plate | | |
| TT 0293 | Main Shaft | | |
| TT 0294 | Drag Washer Screw | | |
| TT 0295 | Drag Washer | | |
| TT 0296 | Pressure Plate | | |
| TT 0297 | Cooling Shield | | |
| TT 0298 | One-Piece Frame | | |
| TT 0299 | Anti-Reverse Ratchet | | |
| TT 0300 | Set Plate Screw | | |
| TT 0301 | Dog Spring | | |
| TT 0302 | Set Plate | | |
| TT 0303 | Dog | | |
| TT 0304 | Set Plate Support | | |
| TT 0305 | Left Side Plate | | |
| TT 0306 | Rod Clamp Bolt/Nuts | | |
| TT 0307 | Rod Clamp Assembly | | |
| TT 0313 | Lever Thrust Ring B-2 | | |