


# SHIMANO

# TIAGRA

TI-130A

 A-RB

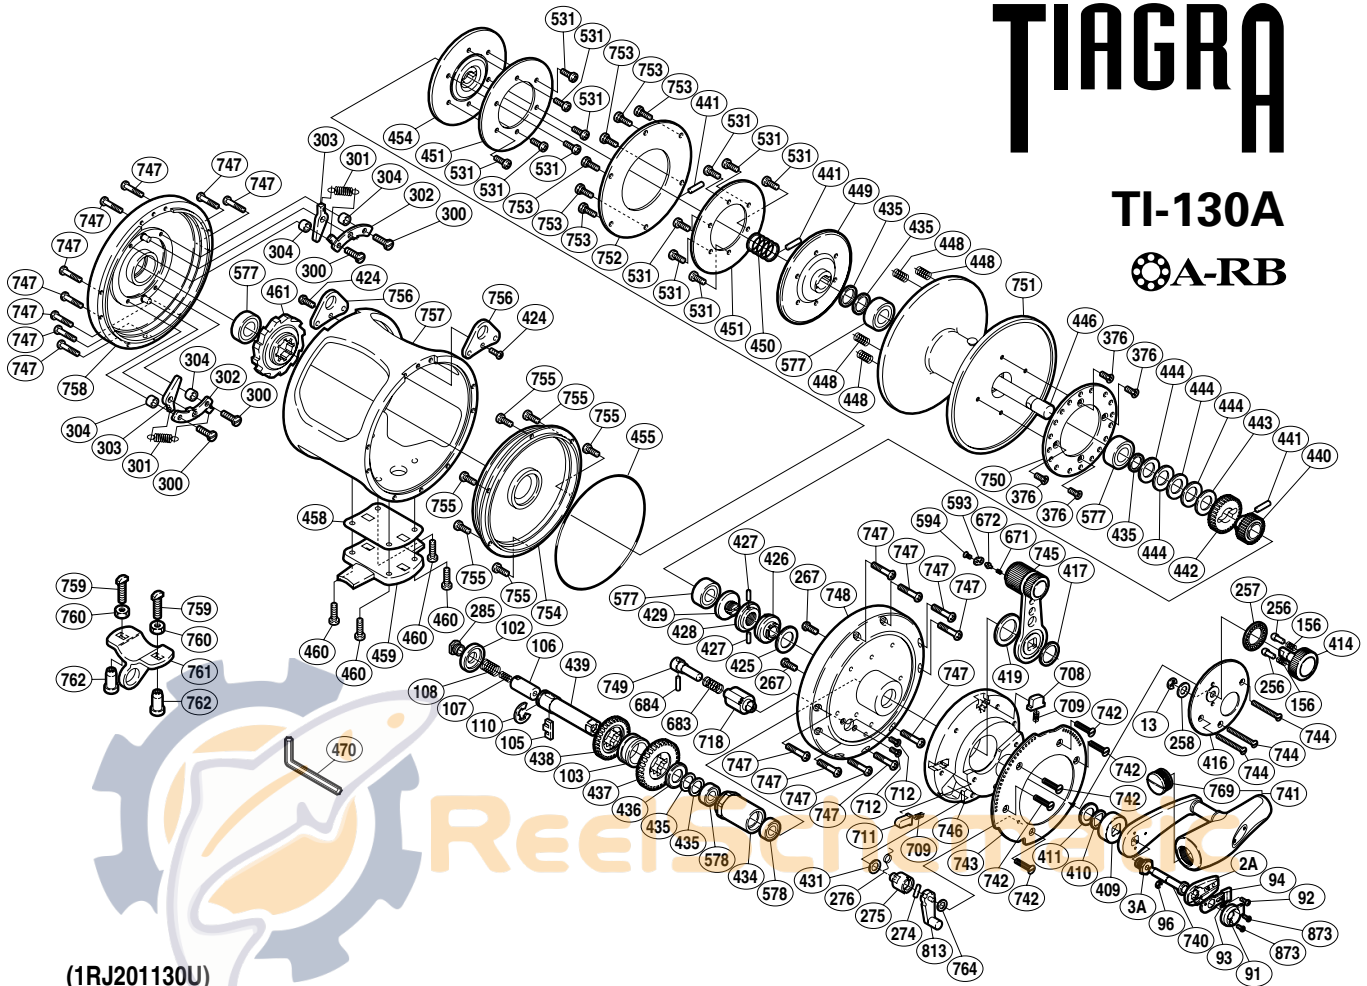

(1RJ201130U)

Part No.	Description	Part No.	Description	Part No.	Description
TT 0002A	Handle Bolt Plate	TT 0424	Screw	TT 0684	Plunger Cross Pin A
TT 0003A	Handle Bolt	TT 0425	Washer	TT 0708	Strike Stop
TT 0013	C Lock	TT 0426	Lever Shaft Body	TT 0709	Pressure Spring
TT 0091	Push Button Shield	TT 0427	Pre-Program Key Pin	TT 0711	Free Spool Detent
TT 0092	Screw	TT 0428	Pre-Program Key	TT 0712	Screw
TT 0093	Slide Plate Spring	TT 0429	Pre-Program Screw	TT 0718	Plunger Holder
TT 0094	Slide Plate	TT 0431	Spacer	TT 0740	Push Low Button Shaft
TT 0096	E Lock	TT 0434	Drive Shaft Holder	TT 0741	Handle Assembly
TT 0102	Friction Washer A	TT 0435	Spacer	TT 0742	Screw
TT 0103	Friction Washer B	TT 0436	Friction Washer C	TT 0743	Lever Quadrant
TT 0105	Gear Select Cross Bar	TT 0437	Drive Gear A	TT 0744	Screw
TT 0106	Cross Bar Stop	TT 0438	Drive Gear B	TT 0745	Drag Control Lever
TT 0107	Drive Shaft Spring B	TT 0439	Drive Shaft	TT 0746	Right Side Plate B
TT 0108	Drive Shaft Spring	TT 0440	Pinion Gear A	TT 0747	Screw
TT 0110	E Lock	TT 0441	Cross Pin	TT 0748	Right Side Plate A
TT 0156	Friction Shoe Spring	TT 0442	Pinion Gear B	TT 0749	Alert Plunger
TT 0256	Dial Click Shoe	TT 0443	Pre-Load Washer	TT 0750	Alert Ratchet
TT 0257	Dial Click	TT 0444	Pre-Load Spring	TT 0751	Spool
TT 0258	Washer	TT 0446	Main Shaft	TT 0752	Drag Plate
TT 0267	Screw	TT 0448	Pressure Release Spring	TT 0753	Screw
TT 0274	Plunger Cross Pin B	TT 0449	Pressure Plate A	TT 0754	Cooling Shield
TT 0275	Plunger Cross Pin Support	TT 0450	Pressure Plate Spring	TT 0755	Screw
TT 0276	Cross Pin Support Spring	TT 0451	Drag Washer	TT 0756	Harness Lug
TT 0285	Drive Shaft Screw	TT 0454	Pressure Plate B	TT 0757	One-Piece Frame
TT 0300	Screw	TT 0455	O Ring	TT 0758	Left Side Plate
TT 0301	Dog Spring	TT 0458	Stand Shield	TT 0764	Spacer
TT 0302	Set Plate	TT 0459	Stand	TT 0769	Handle Knob Bushing
TT 0303	Dog	TT 0460	Screw	TT 0813	Strike Alert Lever
TT 0304	Set Plate Support	TT 0461	Anti-Reverse Ratchet	TT 0873	Screw
TT 0376	Screw	TT 0531	Screw		
TT 0409	Drive Shaft Shield	TT 0577	Ball Bearing		
TT 0410	Drive Shaft Thrust Washer	TT 0578	Ball Bearing	TT 0759	Rod Clamp Bolt (accessory)
TT 0411	Bearing Spacer	TT 0593	Lever Click Cover	TT 0760	Rod Clamp Nut B (accessory)
TT 0414	Pre-Program Dial	TT 0594	Screw	TT 0761	Rod Clamp (accessory)
TT 0416	Lever Hub Cover	TT 0671	Lever Click Shoe	TT 0762	Rod Clamp Nut A (accessory)
TT 0417	Lever Thrust Ring	TT 0672	Lever Click		
TT 0419	Lever Thrust Ring	TT 0683	Click Spring	TT 0470	Wrench (accessory)