


SHIMANO

TRAX

TRX-401HG

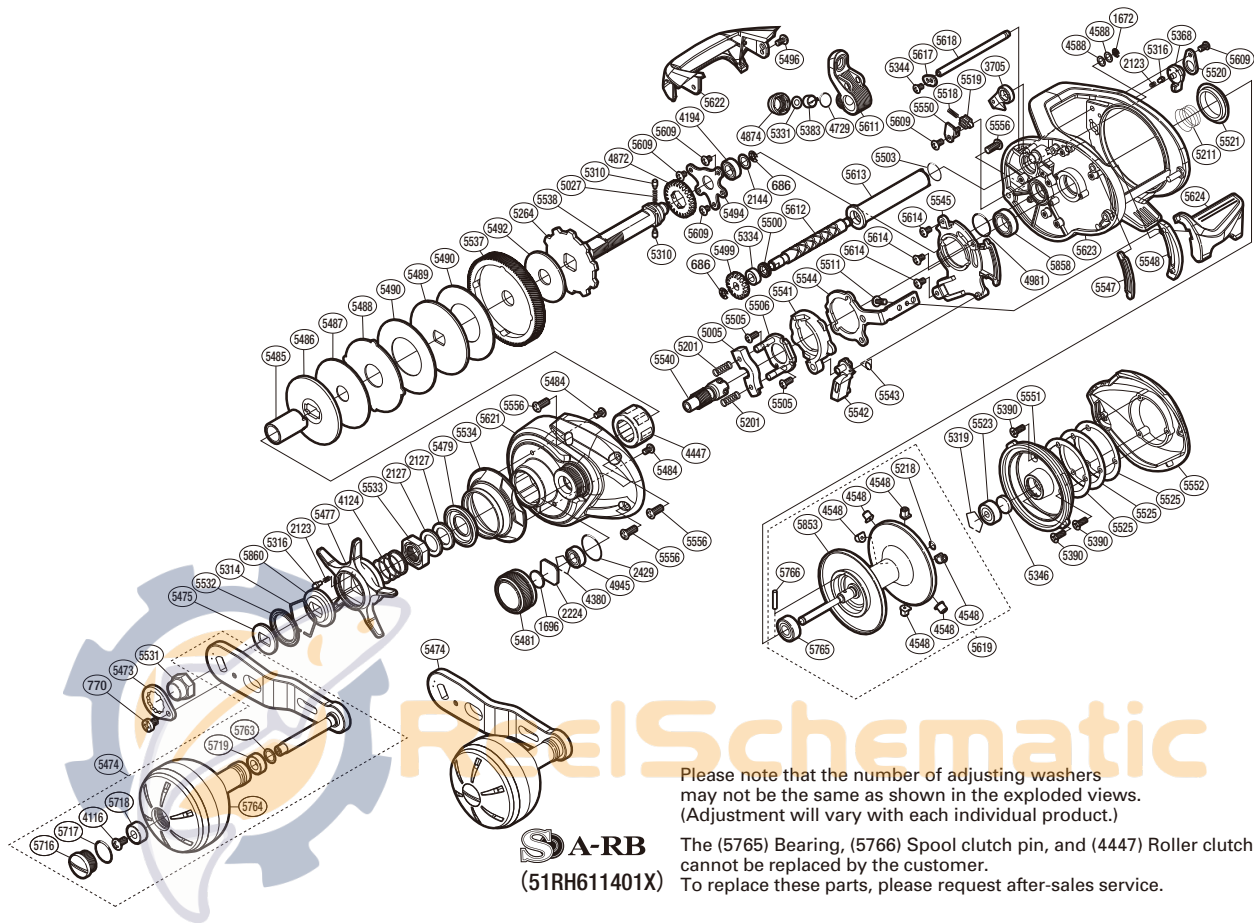

| Part No. | Description | Part No. | Description | Part No. | Description |
|----------|--------------------------|----------|---------------------------|----------|---------------------------|
| BNT0686 | E Lock | BNT5383 | Line Guide Pawl | BNT5541 | Clutch Cam |
| BNT0770 | Screw | BNT5390 | Screw | BNT5542 | Clutch Pawl |
| BNT1672 | E Lock | BNT5473 | Handle Nut Plate | BNT5543 | Clutch Pawl Spring |
| BNT1696 | Cast Control Spacer (B) | BNT5474 | Handle Assembly | BNT5544 | Clutch Plate |
| BNT2123 | Click Spring | BNT5475 | Drive Shaft Shield | BNT5545 | Clutch Guard |
| BNT2127 | Star Drag Spacer | BNT5477 | Star Drag | BNT5547 | Clutch Button Seal |
| BNT2144 | Drive Shaft Washer | BNT5479 | Roller Clutch Water Proof | BNT5548 | Clutch Bar Guide |
| BNT2224 | Spool Tension Spacer (A) | BNT5481 | Cast Control Cap | BNT5550 | Retention Spring Retainer |
| BNT2429 | O Ring | BNT5484 | Screw | BNT5551 | Dial Case |
| BNT3705 | Anti-Reverse Pawl | BNT5485 | Roller Clutch Inner Tube | BNT5552 | Right Side Plate |
| BNT4116 | Screw | BNT5486 | Key Washer | BNT5556 | Screw |
| BNT4124 | Star Drag Spring | BNT5487 | Drag Washer | BNT5609 | Screw |
| BNT4194 | Ball Bearing | BNT5488 | Eared Washer | BNT5611 | Line Guide |
| BNT4380 | Retainer | BNT5489 | Key Washer | BNT5612 | Worm Shaft |
| BNT4447 | Roller Clutch Bearing | BNT5490 | Drag Washer | BNT5613 | Level Wind Guard |
| BNT4548 | Brake Collar | BNT5492 | Drag Washer | BNT5614 | Screw |
| BNT4588 | Washer | BNT5494 | Drive Shaft Retainer | BNT5617 | Stabilizer Bar Retainer |
| BNT4729 | O Ring | BNT5496 | Screw | BNT5618 | Stabilizer Bar |
| BNT4872 | Idle Gear | BNT5499 | Idle Gear | BNT5619 | Spool Assembly |
| BNT4874 | Pawl Cap | BNT5500 | Worm Shaft Seal | BNT5621 | Left Side Plate |
| BNT4945 | Ball Bearing | BNT5503 | O Ring | BNT5622 | Level Wind Protector |
| BNT4981 | O Ring | BNT5505 | Screw | BNT5623 | Frame |
| BNT5005 | Yoke | BNT5506 | Clutch Cam Retainer | BNT5624 | Clutch Lever |
| BNT5027 | Idle Gear Spring | BNT5511 | Screw | BNT5716 | Handle Knob Seal |
| BNT5201 | Yoke Spring | BNT5518 | Clutch Retention Spring | BNT5717 | O Ring |
| BNT5211 | Bearing Pressure Spring | BNT5519 | Clutch Retention Pin | BNT5718 | Handle Knob Bushing A |
| BNT5218 | O Ring | BNT5520 | Cam Lever Retainer | BNT5719 | Handle Knob Bushing |
| BNT5264 | Anti-Reverse Ratchet | BNT5521 | Frame Center Seal | BNT5763 | Washer |
| BNT5310 | Idle Gear Pin | BNT5523 | Ball Bearing | BNT5764 | Handle Knob |
| BNT5314 | Click Plate Retainer | BNT5525 | Washer | BNT5765 | Ball Bearing |
| BNT5316 | Click Pin | BNT5531 | Handle Nut | BNT5766 | Spool Clutch Pin |
| BNT5319 | Bearing Retainer | BNT5532 | Star Drag Seal | BNT5853 | Spool |
| BNT5331 | Spacer | BNT5533 | Star Drag Nut | BNT5858 | Ball Bearing |
| BNT5334 | Bushing | BNT5534 | Clutch Button Attachment | BNT5860 | Star Drag Click Plate |
| BNT5344 | Screw | BNT5537 | Drive Gear | | |
| BNT5346 | Spacer B | BNT5538 | Drive Shaft | | |
| BNT5368 | Side Plate Cam Lever | BNT5540 | Pinion Gear | BNT4692 | B-100 Oil (Accessory) |