


# SHIMANO

## TRAX SA-RB

## TRX-500HG

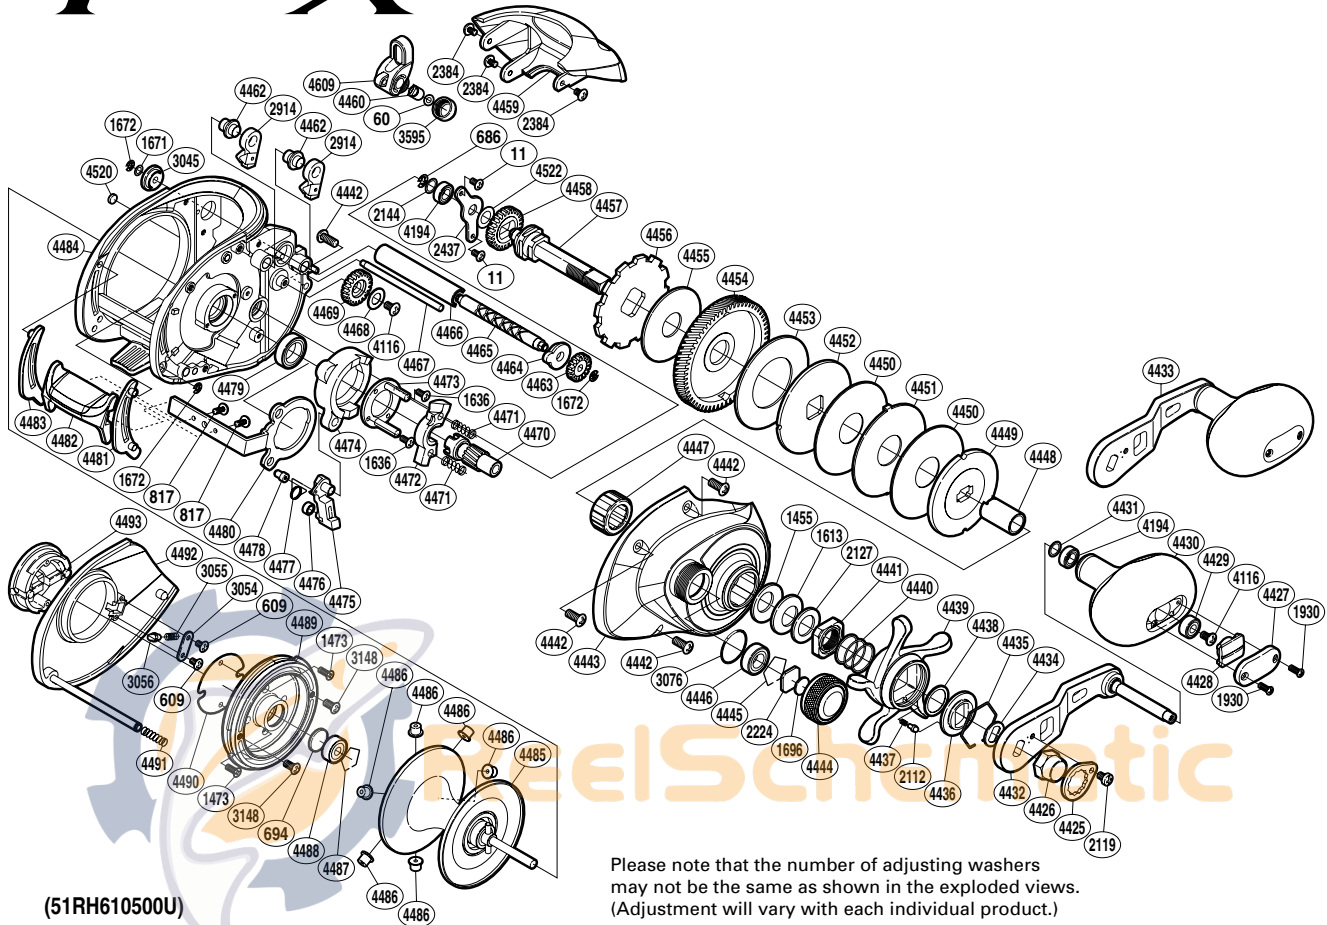

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

| Part No. | Description            | Part No. | Description              | Part No. | Description               |
|----------|------------------------|----------|--------------------------|----------|---------------------------|
| BNT0011  | Screw                  | BNT4428  | Handle Knob Seal         | BNT4463  | Idle Gear                 |
| BNT0060  | Spacer                 | BNT4429  | Ball Bearing             | BNT4464  | Worm Bushing A            |
| BNT0609  | Screw                  | BNT4430  | Handle Knob              | BNT4465  | Worm Shaft                |
| BNT0686  | E Lock                 | BNT4431  | Washer                   | BNT4466  | Level Wind Guard          |
| BNT0694  | Spacer B               | BNT4432  | Handle Shank Assembly    | BNT4467  | Level Wind Guide          |
| BNT0817  | Screw                  | BNT4433  | Handle Assembly          | BNT4468  | Washer                    |
| BNT1455  | Coned Disc Spring (8H) | BNT4434  | Drive Shaft Shield       | BNT4469  | Idle Gear                 |
| BNT1473  | Screw                  | BNT4435  | Click Plate Retainer     | BNT4470  | Pinion Gear               |
| BNT1613  | Coned Disc Spring (8L) | BNT4436  | Star Drag Click Plate    | BNT4471  | Yoke Spring               |
| BNT1636  | Screw                  | BNT4437  | Click Spring             | BNT4472  | Yoke                      |
| BNT1671  | Washer                 | BNT4438  | Washer                   | BNT4473  | Clutch Cam Retainer       |
| BNT1672  | E Lock                 | BNT4439  | Star Drag                | BNT4474  | Clutch Cam                |
| BNT1696  | Cast Control Spacer    | BNT4440  | Star Drag Spring         | BNT4475  | Clutch Pawl               |
| BNT1930  | Screw                  | BNT4441  | Star Drag Nut            | BNT4476  | Clutch Pawl Bushing       |
| BNT2119  | Screw                  | BNT4442  | Screw                    | BNT4477  | Clutch Pawl Spring        |
| BNT2122  | Click Pin              | BNT4443  | Right Side Plate         | BNT4478  | Clutch Pawl Spring Collar |
| BNT2127  | Star Drag Spacer       | BNT4444  | Cast Control Cap         | BNT4479  | Ball Bearing              |
| BNT2144  | Washer                 | BNT4445  | Bearing Retainer         | BNT4480  | Clutch Plate              |
| BNT2224  | Spool Tension Spacer   | BNT4446  | Ball Bearing             | BNT4481  | Clutch Bar Guide B        |
| BNT2384  | Screw                  | BNT4447  | Roller Clutch Bearing    | BNT4482  | Quick-Fire II Clutch Bar  |
| BNT2437  | Drive Shaft Retainer   | BNT4448  | Roller Clutch Inner Tube | BNT4483  | Clutch Bar Guide A        |
| BNT2914  | Anti-Reverse Pawl      | BNT4449  | Pressure Plate           | BNT4484  | One-Piece Frame           |
| BNT3045  | Worm Bushing B         | BNT4450  | Drag Washer              | BNT4485  | Spool Assembly            |
| BNT3054  | Click Pin Retainer     | BNT4451  | Eared Washer             | BNT4486  | Brake Collar              |
| BNT3055  | Click Spring           | BNT4452  | Drag Washer              | BNT4487  | Bearing Retainer          |
| BNT3056  | Click Pin              | BNT4453  | Drag Washer              | BNT4488  | Ball Bearing              |
| BNT3076  | O Ring                 | BNT4454  | Drive Gear               | BNT4489  | Brake Case                |
| BNT3148  | Screw                  | BNT4455  | Drag Washer              | BNT4490  | Brake Case Spacer         |
| BNT3595  | Pawl Cap               | BNT4456  | Anti-Reverse Ratchet     | BNT4491  | Damper Spring             |
| BNT4116  | Screw                  | BNT4457  | Drive Shaft              | BNT4492  | Left Side Plate           |
| BNT4194  | Ball Bearing           | BNT4458  | Idle Gear                | BNT4493  | Turnkey Dial              |
| BNT4425  | Handle Nut Plate       | BNT4459  | Thumb Rest               | BNT4520  | Anti-Thrust Washer        |
| BNT4426  | Handle Nut             | BNT4460  | Line Guide Pawl          | BNT4522  | Washer                    |
| BNT4427  | Handle Knob I.D. Plate | BNT4462  | Anti-Reverse Pawl Shaft  | BNT4609  | Line Guide                |