



EXPLODED PARTS VIEW
TRITON *SpeedMaster* TSM II FS
with *Fightin' Star*™

PARTS LIST

PART # DESCRIPTION

- TGT 0014 Lock Washer
- TGT 0024 Eared Washer "E"
- TGT 0026 Eared Washer "B"
- TGT 0031 Drive Shaft Bushing
- TGT 0032 Spacer
- TGT 0033 Drive Shaft Retainer
- TGT 0037 Anti-Reverse Pawl
- TGT 0039 Anti-Reverse Pawl Spring
- TGT 0041 Yoke Plate
- TGT 0054 Click Gear
- TGT 0058 Spacer "B"
- TGT 0062 Click Pawl Retainer
- TGT 0063 Click Pawl
- TGT 0065 Spacer A
- TGT 0067 Click Spring
- TGT 0068 Click Spring Screw
- TGT 0070 Spacer B
- TGT 0076 Handle Nut
- TGT 0087 Clutch Lever Screw
- TGT 0090 Ball Bearing
- TGT 0091 Bearing Thrust Washer
- TGT 0092 Drag Spring Washer
- TGT 0104 Yoke Spring

PART # DESCRIPTION

- TGT 0109 Right Side Plate Screw (B)
- TGT 0111 Click Gear Retainer
- TGT 0142 Handle Nut Plate Screw
- TGT 0145 Friction Washer
- TGT 0146 Pre-Set Dial
- TGT 0147 Pre-Set Spring
- TGT 0148 Pre-Set Nut
- TGT 0149 Strike
- TGT 0150 Strike Spring
- TGT 0151 Strike Spacer
- TGT 0152 Strike Ball
- TGT 0153 Star Drag
- TGT 0154 Drive Shaft Cam
- TGT 0157 Drag Washer "G"
- TGT 0158 Drag Washer "I"
- TGT 0159 Key Washer "F"
- TGT 0161 Drive Shaft Washer
- TGT 0162 Anti-Reverse Ratchet
- TGT 0163 Drive Shaft
- TGT 0178 Handle Nut Plate
- TGT 0179 Handle Assembly
- TGT 0180 Cast Control Cap
- TGT 0181 Drag Spring Washer

PART # DESCRIPTION

- TGT 0182 Cast Control Spacer
- TGT 0183 Felt Washer
- TGT 0184 Ball Bearing
- TGT 0185 O Ring
- TGT 0186 Bushing Screw
- TGT 0187 Right Side Plate Screw (A)
- TGT 0188 Right Side Plate
- TGT 0189 Clutch Lever
- TGT 0190 Clutch Spring
- TGT 0191 Clutch Cam
- TGT 0192 Side Plate Bushing
- TGT 0193 Key Washer "F2"
- TGT 0194 Drive Gear
- TGT 0195 Pinion Gear
- TGT 0196 Yoke
- TGT 0197 Frame
- TGT 0198 Spool
- TGT 0199 Left Side Plate
- TGT 0200 Left Side Plate Screw
- TGT 0201 Click Button
- TGT 0202 Rod Clamp
- TGT 0203 Rod Clamp Bolt