


### Direct Drive Free Spooling 775-C and 775-D

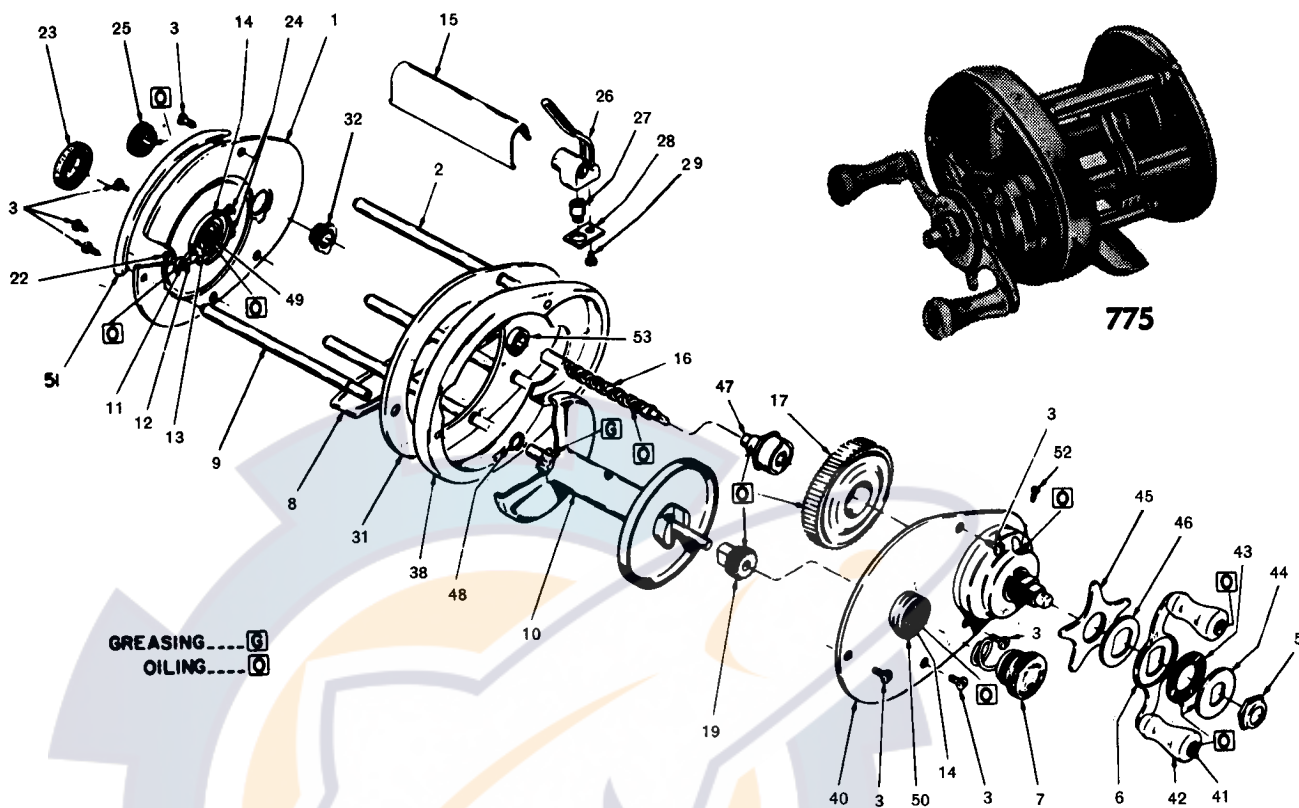

| Diagram No. | Part Name                    | Reel 775-C |        | Reel 775-D |        |
|-------------|------------------------------|------------|--------|------------|--------|
|             |                              | Part No.   | Price  | Part No.   | Price  |
| 1           | Tail Plate Assembly          | RF-36      | \$1.75 | RF-36      | \$1.75 |
| 2           | Top Pillar                   | RB-33      | .30    | RB-33      | .30    |
| 3           | Pillar Screw                 | R-18       | .03    | R-18       | .03    |
| 5           | Crank Nut                    | RJ-11      | .25    | RJ-11      | .25    |
| 6           | Crank Drag Assembly          | RK-12      | 1.35   | RK-12      | 1.35   |
| 7           | Head Spool Cap Assembly      | RH-20      | .45    | RH-20      | .45    |
| 8           | Rod Clip                     | RD-31      | .85    | RD-31      | .85    |
| 9           | Side Pillar                  | RB-32      | .25    | RB-32      | .25    |
| 10          | Spool Assembly               | RV-19      | 4.00   | RV-19      | 4.00   |
| 11          | Click Button Stem            | RA-26      | .02    | RA-26      | .02    |
| 12          | Click Pawl                   | R-9        | .05    | R-9        | .05    |
| 13          | Click Spring                 | RB-10      | .10    | RB-10      | .10    |
| 14          | Spool Bushing                | R-45       | .15    | R-45       | .15    |
| 15          | Line Protector               | R-21       | .20    | R-21       | .20    |
| 16          | Line Carriage Screw          | RJ-7       | .55    | RJ-7       | .55    |
| 17          | Drive Gear                   | RS-15      | .75    | RS-15      | .75    |
| 19          | Spool Pinion                 | RL-17      | .35    | RM-17      | .35    |
| 22          | Click Button                 | R-37       | .10    | R-37       | .10    |
| 23          | Tail Spool Cap Assembly      | RH-20T     | .65    | RH-20T     | .65    |
| 24          | Click Spring Rivet           | C-43       | .03    | C-43       | .03    |
| 25          | Carriage Screw Bushing Cap   | RA-25      | .45    | RA-25      | .45    |
| 26          | Line Carriage                | RA-3       | .55    | RA-3       | .55    |
| 27          | Carriage Pawl                | R-4        | .15    | R-4        | .15    |
| 28          | Carriage Pawl Retainer       | R-5        | .05    | R-5        | .05    |
| 29          | Carriage Pawl Retainer Screw | R-6        | .03    | R-6        | .03    |
| 31          | Head Ring Assembly           | RG-29      | 2.30   | RG-29      | 2.30   |
| 32          | Carriage Screw Tail Bushing  | R-24       | .20    | R-24       | .20    |
| 38          | Plastic Head Ring            | RB-30      | 1.95   | RB-30      | 1.95   |
| 39          | Head Plate Assembly          | RG-28P     | 3.70   | RG-28P     | 3.70   |
| 40          | Head Plate Sub Assembly      | RG28PC     | 7.60   | RG-28PC    | 7.60   |
| 41          | Crank Stud                   | R40        | .10    | R-40       | .10    |
| 42          | Crank Handle                 | R39        | .30    | R-39       | .30    |
| 43          | Crank Drag Washer            | R-41       | .15    | R-41       | .15    |
| 44          | Drag Plate                   | FR5336     | .20    | R-42       | .20    |
| 45          | Crank Drag Star              | R-42       | .65    | R-43       | .65    |
| 46          | Crank Drag Spring Washer     | R-43       | .15    | CB-54      | .15    |
| 47          | Gear Driver Assembly         | CB-54      | .70    | R-44       | .70    |
| 48          | Ratchet Retaining Ring       | R-44       | .02    |            |        |
| 49          | Spool Bushing Holder Tail    | R-51       | .40    | RB-35T     | .40    |
| 50          | Spool Bushing Holder Head    | RB-35T     | .15    | RA-35H     | .15    |
| 51          | Palm Rest                    | RA-35H     | .40    | R-46       | .40    |
| 52          | Oiler Screw                  | R-46       | .03    | R-2        | .03    |
| 53          | Carriage Screw Bushing Head  | R-2        | .25    | B-555K     | .25    |
|             |                              | RA-47      |        | NE5455     |        |

### DISASSEMBLY and ASSEMBLY INSTRUCTIONS

1. To disassemble reel, remove head pillar screws and head plate (cap) assembly. Remove spool assembly and drive gear. 2. To take apart the level wind mechanism, remove carriage screw bushing cap assembly which will allow

disassembly of carriage screw and carriage assembly. 3. Wash all parts carefully, using gasoline, or other grease solvents. Replace worn parts. For greasing and oiling see diagrams and instructions.

Numbers shown in red common to both South Bend and Shakespeare.

**NOTE: When ordering parts, give reel part name, reel number and model.**