


PARTS LIST

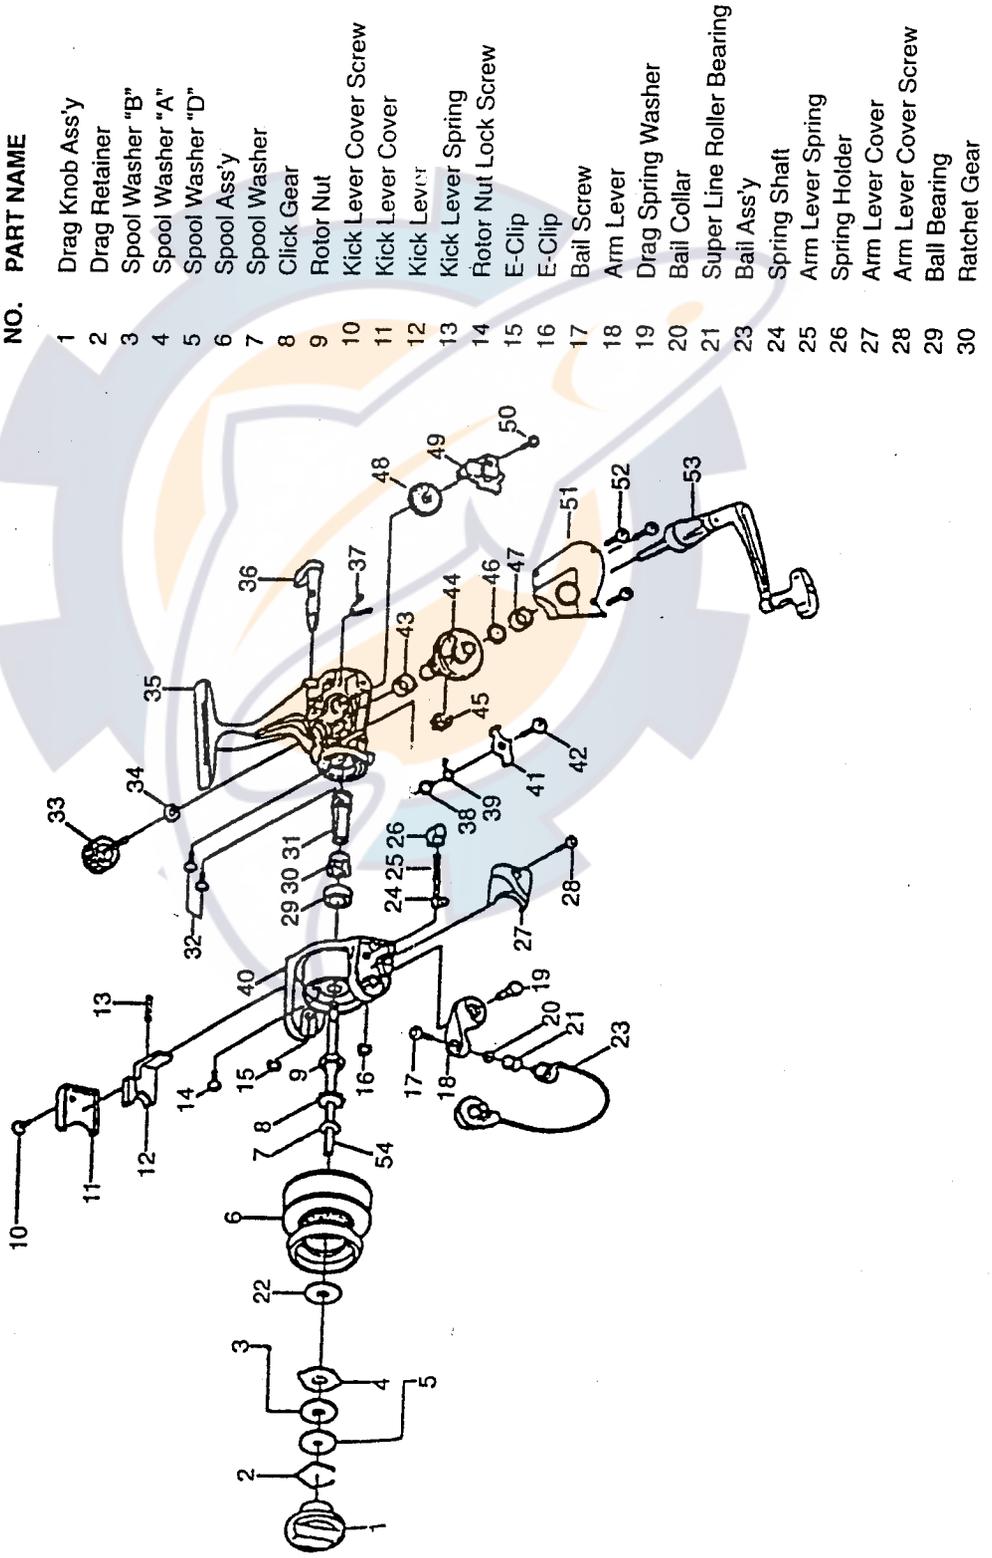

NO.	PART NAME	NO.	PART NAME
1	Drag Knob Ass'y	31	Pinion Gear
2	Drag Retainer	32	Bearing Screw
3	Spool Washer "B"	33	Handle Screw Cap
4	Spool Washer "A"	34	Handle Screw Washer
5	Spool Washer "D"	35	Body
6	Spool Ass'y	36	Stopper Lever
7	Spool Washer	37	Stopper Lever Spring
8	Click Gear	38	Stopper Bushing
9	Rotor Nut	39	Stopper Spring
10	Kick Lever Cover Screw	40	Rotor
11	Kick Lever Cover	41	Stopper "B"
12	Kick Lever	42	Stopper Screw
13	Kick Lever Spring	43	Ball Bearing
14	Rotor Nut Lock Screw	44	Drive Gear
15	E-Clip	45	Silent Cam
16	E-Clip	46	Drive Gear Adj. Washer
17	Bail Screw	47	Ball Bearing
18	Arm Lever	48	Oscillation Gear
19	Drag Spring Washer	49	Oscillation Slider
20	Bail Collar	50	Main Shaft Screw
21	Super Line Roller Bearing	51	Body Cover
22	Bail Ass'y	52	Body Cover Screw
23	Spring Shaft	53	Handle Ass'y
24	Arm Lever Spring	54	Main Shaft
25	Spring Holder		
26	Arm Lever Cover		
27	Arm Lever Cover Screw		
28	Ball Bearing		
29	Ratchet Gear		
30			