

SPIN REEL 22

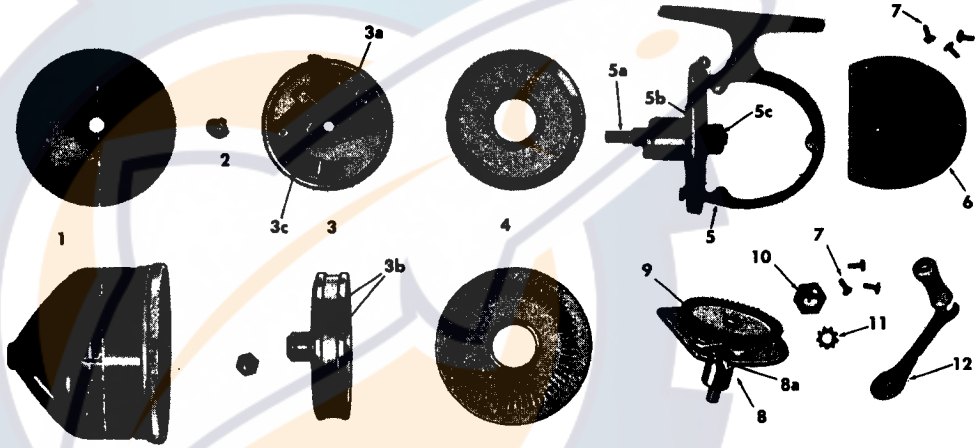
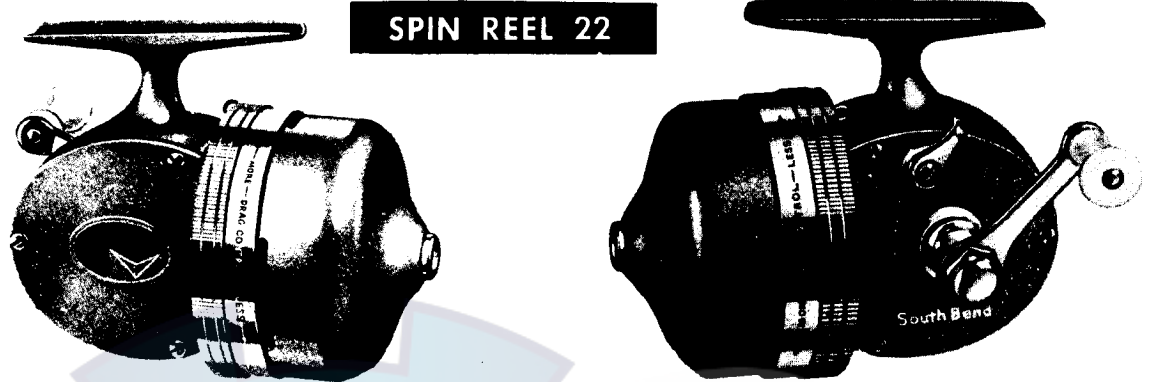


DIAGRAM No.	PART NAME	PART NO.	PRICE
1	Outer Cone Assembly	C-25	\$3.15
2	Pickup Nut or Screw	AA-19	.10
3	Pickup Housing Assembly	CA-24	2.35
3a	Pickup Arm	CA-38	.40
3b	Pickup Wear Rings	C-36	.35
3c	Pickup Tension Pad	C-13	.02
4	Spool Assembly	CA-15	1.75
5	Frame Assembly	CB-16	3.70
5a	Main Shaft Assembly	CA-18	.70
5b	Spool Thrust Washer	CA-35	.03
5c	Pinion Gear	C-22	.30
6	Cover Plate (Right)	CB-27	.45
7	Cover Plate Screws	R-18	ea. .03
8	Cover Plate Assembly (Crank Side)	CB-33	1.25
8a	Non-Reverse Lever	C-28	.20
9	Drive Gear Assembly	CB-32	1.30
10	Crank Nut	B-14	.25
11	Crank Nut Lock Washer	B-15	.02
12	Crank Assembly	CB-26	.70

DISASSEMBLY and ASSEMBLY INSTRUCTIONS

1. Unscrew the Outer Cone Assembly from the Frame (Ref. 5).
 2. Remove Pickup Nut or Screw and slide Pickup Assembly (Ref. 3) from Spool Shaft. 3. Spool Assembly is removed by sliding forward off the Main Shaft. 4. To make gears accessible for cleaning and greasing, remove Cover Plate Screws opposite crank side and remove Cover Plate (Right).

Reassemble in reverse order. When replacing Spool Assembly on the main shaft, be sure the large flange is toward the frame. Then slide the Pickup Assembly into place and rotate it so that it is fully seated and engaged with the main shaft stud. Replace Pickup Nut or Screw. When replacing the Outer Cone, be sure line is not pinched and be careful to avoid "cross threading" or forcing the finely machined threads.

NOTE: When ordering parts, give reel part name, reel number and model.