
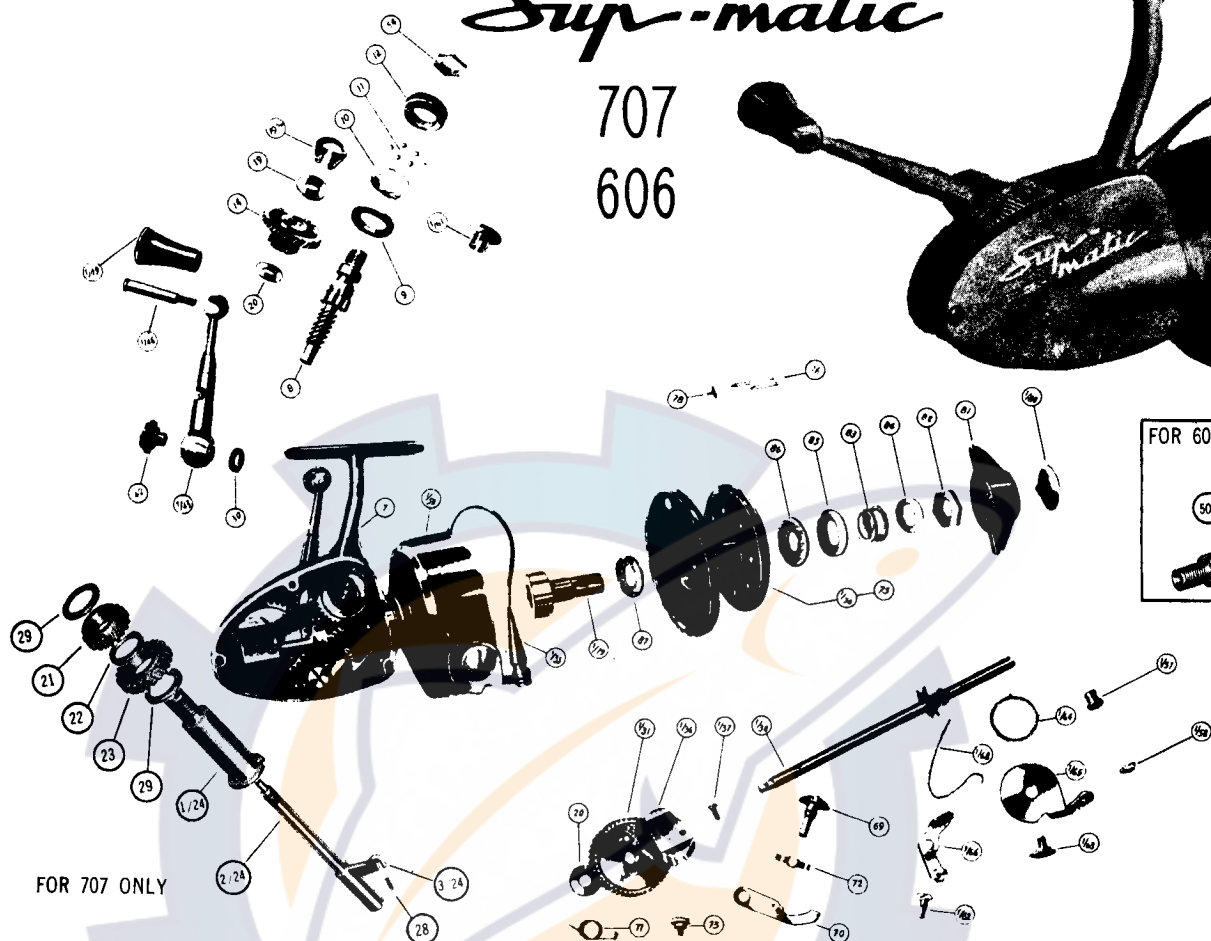



Sup-matic

707

606

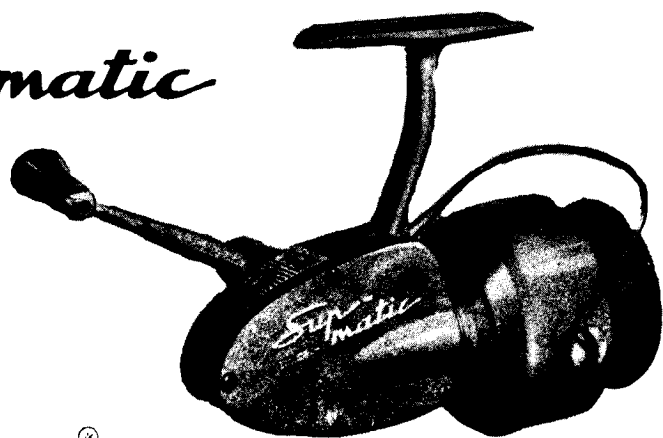

FOR 606 ONLY

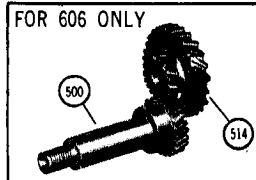

FOR 707 ONLY

PART No.	NAME	PRICES	No.	NAME	PRICES	No.	NAME	PRICES
1	Housing	\$4.25	30	Driving Shaft Bushing	.10	70	Anti-reverse Dog	\$.10
7	Cover Screw	.10	1/31	Smooth Wind Gear	.75	71	Anti-reverse Dog Spring	.10
8	Worm Gear	1.25	1/36	Roller Slide	\$.35	72	Anti-reverse Retaining Spring	.10
9	Cover Ring	.35	1/37	Slide Screw	.10	73	Anti-reverse Dog Screw	.10
10	Ball Plate Guide	.10	1/38	Main Shaft Assembly	.75	1/74	Spool, Large Capacity	.75
11	Ball Bearings	.10	42	Gear Change Button	.20	1/75	Spool, Small Capacity	.75
12	Upper Threaded	.60	1/43	Handle Complete	1.60	76	Drag Spring	.10
14	Triple Gear Assembly	1.20	1/46	Handle Knob Shaft	.10	78	Drag Click Screw	.10
19	Washer	.10	1/53	Drum	2.75	1/79	Spool Shaft	.50
19 bis	Circlip	.10	1/49	Handle Knob	.20	81	Wing Nut	.25
20	Washer	.10	54	Lock Nut	.10	82	Drag Compression Nut	.10
21	Low Speed Gear	.40	1/55	Pick-up Bail	1.25	83	Drag Spring	.15
22	Gear Shift Washer	.15	1/57	Pick-up Roller	.20	84	Upper Washer	.10
23	High Speed Gear	.45	1/58	Roller Lock Nut	.10	85	Lower Washer	.10
FOR 707 REEL ONLY			1/62	Trip Lever Screw	.10	86	Upper Fiber Friction Washer	.10
1/24	High Speed Shaft	1.15	1/63	Bail Plate Screw	.25	87	Lower Fiber Friction Washer	.10
2/24	Low Speed Shaft	.75	1/64	Bail Spring	.10	1/88	Wing Nut Retaining Screw	.20
3/24	Gear Pawl	.35	1/65	Bail Holder	.35	1/74A	Large Capacity Spool — Assembled	3.00
4/24	Gear Pawl Pin	.10	1/66	Bail Trip Lever	.10	1/75A	Small Capacity Spool—Assembled	3.00
28	Gear Change Spring	.10	1/68	Bail Trigger Spring	.10	FOR 606 REEL ONLY		
29	Gear Change Shaft Adjusting Shims	.10	69	Anti-reverse Button	.65	500	Gear and Shaft Assembly	2.00
						514	Double Gear Assembly	1.00

DISASSEMBLY and ASSEMBLY INSTRUCTIONS

1. Hold the reel with the crank handle 1/49 pointing at you. Turn the whole handle assembly clockwise and unscrew it.
2. Remove spool 1/74 or 1/75 by pressing the spool inward and then turning it in any direction about 45° to free it.
3. Turn the reel 90° and unscrew cover screw 7. Remove the plate and the housing is open for washing, oiling and greasing.
4. Unscrew slide retaining screw 1/37 and you can remove the main shaft 1/38, roller slide 1/36 and smooth wind gear 1/31. Do not drop brass bearing washer 20.
5. By pushing the Circlip 19 bis sideways out from the shaft groove, you can disassemble the intermediate gear and also the crank shaft and gear assembly 24.

NOTE: When ordering parts, give reel part name, reel number and model.