


Elite® spinning reel parts list

IMPORTANT - SPECIFY REEL MODEL NUMBER WHEN ORDERING PARTS.
 Example - Extra spool for Elite 910-specify 910 (reel no.)-6 (spool part no.)

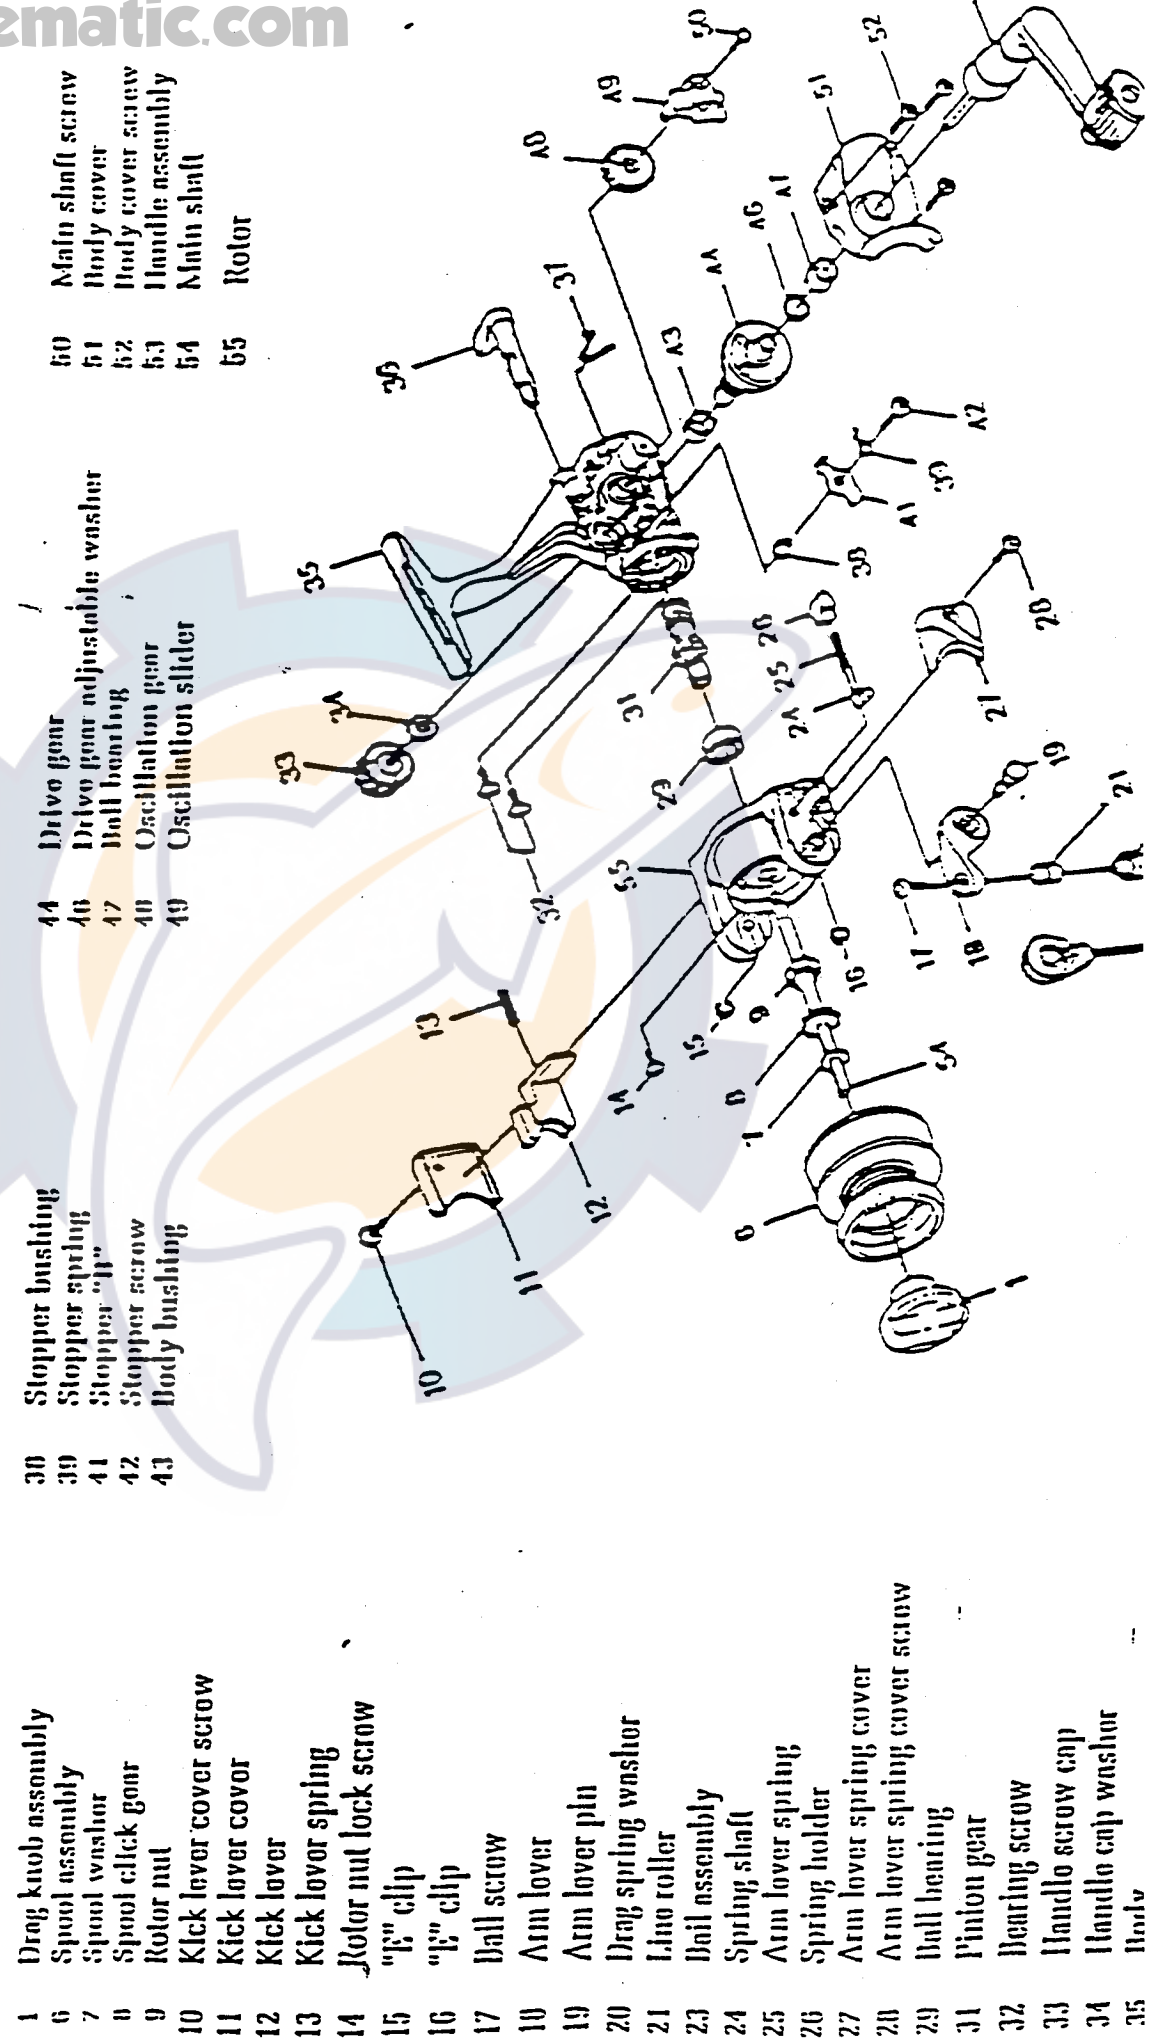

- | | | | | | | | |
|----|------------------------------|----|-----------------|----|------------------------------|----|------------------|
| 1 | Drag knob assembly | 30 | Stopper bushing | 44 | Drive gear | 50 | Main shaft screw |
| 6 | Spool assembly | 39 | Stopper spring | 46 | Drive gear adjustable washer | 51 | Body cover |
| 7 | Spool washer | 41 | Stopper "H" | 47 | Ball bearing | 52 | Body cover screw |
| 8 | Spool click gear | 42 | Stopper screw | 48 | Oscillation gear | 53 | Handle assembly |
| 9 | Rotor nut | 43 | Body bushing | 49 | Oscillation slider | 54 | Main shaft |
| 10 | Kick lever cover screw | | | | | 55 | Rotor |
| 11 | Kick lever cover | | | | | | |
| 12 | Kick lever | | | | | | |
| 13 | Kick lever spring | | | | | | |
| 14 | Rotor nut lock screw | | | | | | |
| 15 | "E" clip | | | | | | |
| 16 | "E" clip | | | | | | |
| 17 | Ball screw | | | | | | |
| 18 | Arm lever | | | | | | |
| 19 | Arm lever pin | | | | | | |
| 20 | Drag spring washer | | | | | | |
| 21 | Line roller | | | | | | |
| 23 | Bail assembly | | | | | | |
| 24 | Spring shaft | | | | | | |
| 25 | Arm lever spring | | | | | | |
| 26 | Spring holder | | | | | | |
| 27 | Arm lever spring cover | | | | | | |
| 28 | Arm lever spring cover screw | | | | | | |
| 29 | Ball bearing | | | | | | |
| 31 | Pinion gear | | | | | | |
| 32 | Bearing screw | | | | | | |
| 33 | Handle screw cap | | | | | | |
| 34 | Handle cap washer | | | | | | |
| 35 | Body | | | | | | |