
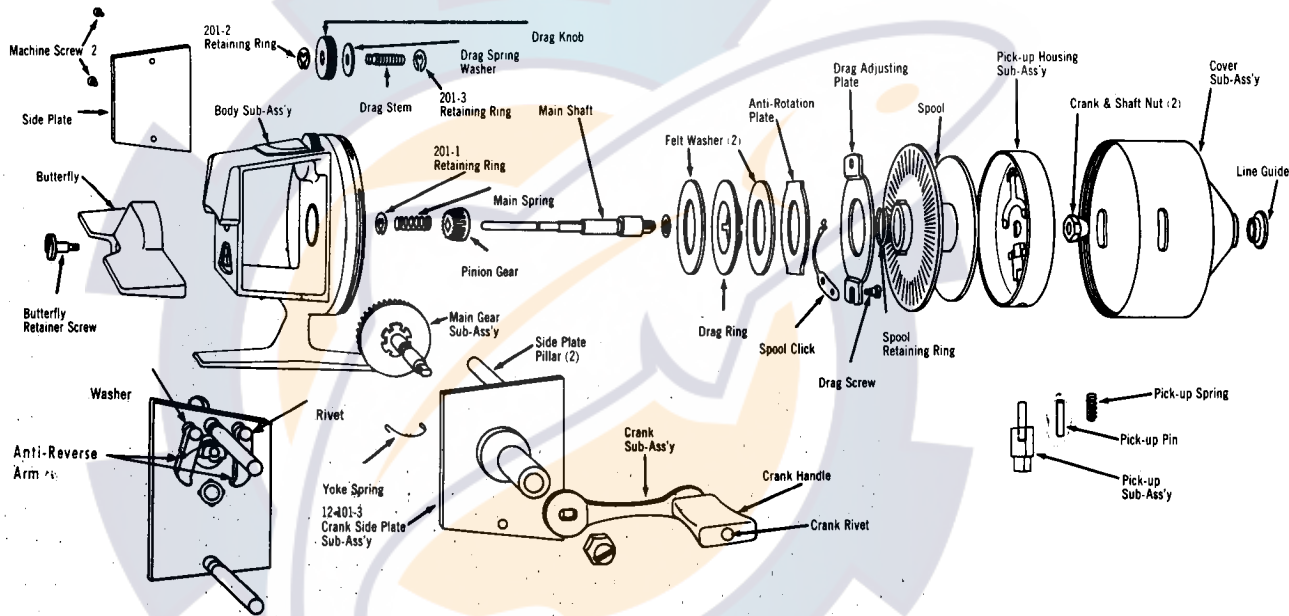


FUTURA

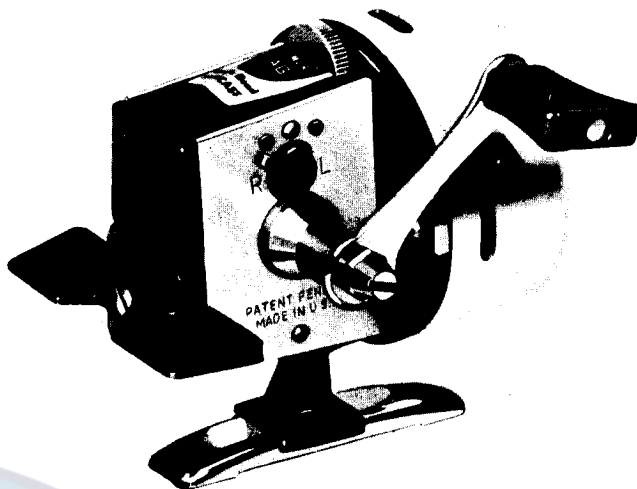

Part Number and Price

Part Number and Price

Part Name	101	List Price	202	List Price	303	List Price
Body Sub-Assembly	12-102-1	\$5.00	12-101-1	\$5.50	12-100-1	\$6.00
Butterfly Sub-Assembly	12-102-22	.65	12-100-22	.65	12-100-2	.75
Crank Side Plate Sub-Assembly	12-102-3	3.00	12-101-3	3.25	12-100-3	3.50
Main Gear Sub-Assembly	12-100-4	1.35	12-100-4	1.35	12-100-4	1.35
Pick-up Housing Sub-Assembly	12-102-5	3.00	12-102-5	3.00	12-100-5	3.50
Feathering Device	12-100-6	.65	12-100-6	.65	12-100-6	.65
Cover Sub-Assembly	12-102-9	3.00	12-101-9	3.25	12-100-9	3.50
Side Plate	12-102-10	1.35	12-101-10	1.35	12-100-10	1.55
Crank Sub-Assembly	12-100-19	.20	12-100-19	.20	12-100-19	.20
Spool Click	12-100-20	.10	12-100-20	.10	12-100-20	.10
Drag Screw	12-100-21	ea .10	12-100-21	ea .10	12-100-21	ea .10
Felt Washer (2)	12-100-26	ea .25	12-100-26	ea .25	12-100-26	ea .25
Butterfly Stop Pin	12-100-27	.10	12-100-27	.10	12-100-27	.10
Side Plate Pillar (2)	12-102-29	.15	12-102-29	.15	12-100-29	.15
Anti-reverse Arm	12-102-32	.05	12-102-32	.05	12-100-32	.05
Yoke Spring	12-100-36	.15	12-100-36	.15	12-100-36	.15
Anti-reverse Washer	12-100-38	.35	12-100-38	.35	12-100-38	.35
Pick-up Spring	12-102-41	2.00	12-102-41	2.00	12-100-41	2.50
Rick-up Pin	12-100-42	.10	12-100-42	.10	12-100-42	.10
Spool	12-102-44	.35	12-102-44	.35	12-100-44	.35
Spool Retaining Ring	12-100-46	.20	12-100-46	.20	12-100-46	.20
Line Guide						
Crank Rivet						

Part Name	101	List Price	202	List Price	303	List Price
Crank Handle	12-102-47	.35	12-101-47	.35	12-100-47	.35
Main Shaft	12-100-48	2.50	12-100-48	2.50	12-100-48	2.50
Pinion Gear	12-100-49	.40	12-100-49	.40	12-100-49	.40
Main Spring	12-100-50	.15	12-100-50	.15	12-100-50	.15
Butterfly Retainer Screw	12-102-51	.25	12-100-51	.25	12-100-51	.25
Drag Knob	12-102-52	.30	12-100-52	.35	12-100-52	.35
Drag Adjusting Plate	12-100-53	.45	12-100-53	.45	12-100-53	.45
Anti-rotation Plate	12-100-54	.35	12-100-54	.35	12-100-54	.35
Drag Ring	12-100-55	.35	12-100-55	.35	12-100-55	.35
Crank and Shaft Nut (2)	12-100-56	.25	12-100-56	.30	12-100-56	.30
Line Holder						
Side Plate	12-102-58	1.15	12-101-58	1.25	12-100-58	1.25
Anti-reverse Arm Rivet	12-102-59	.15	12-102-59	.15	12-100-59	.15
Butterfly Stop Spring						
Drag Stem	12-100-61	.25	12-100-61	.25	12-100-61	.25
Adjustable Rod Clip						
Drag Spring Washer	12-100-65	.10	12-100-65	.10	12-100-65	.10
Retaining Ring	201-1	.15	201-1	.15	201-1	.15
Retaining Ring	201-2	.15	201-2	.15	201-2	.15
Retaining Ring	201-3	.15	201-3	.15	201-3	.15
Lock Washer						
Machine Screw						
Machine Screw (2)	204-2	ea .10	204-1	ea .15	204-1	ea .15
Drive Screw						
Rivet (2)						

DISASSEMBLY and ASSEMBLY INSTRUCTIONS

1. Unscrew cover sub-assembly. Hold crank from turning and unscrew shaft nut. Slip off pick-up housing sub-assembly and spool.
2. Unscrew machine screws to remove side plate and crank side plate sub-assembly. Remove crank sub-assembly by unscrewing crank-nut.
3. Unscrew butterfly retainer screw to remove butterfly sub-assembly. Remove retaining ring and slip out main shaft. To reassemble, repeat above procedure in reverse order.

NOTE: When ordering parts, give reel part name, reel number and model.