
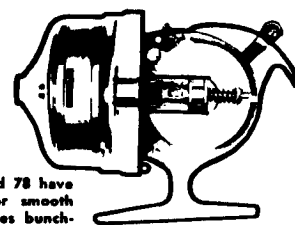


Spin Cast®

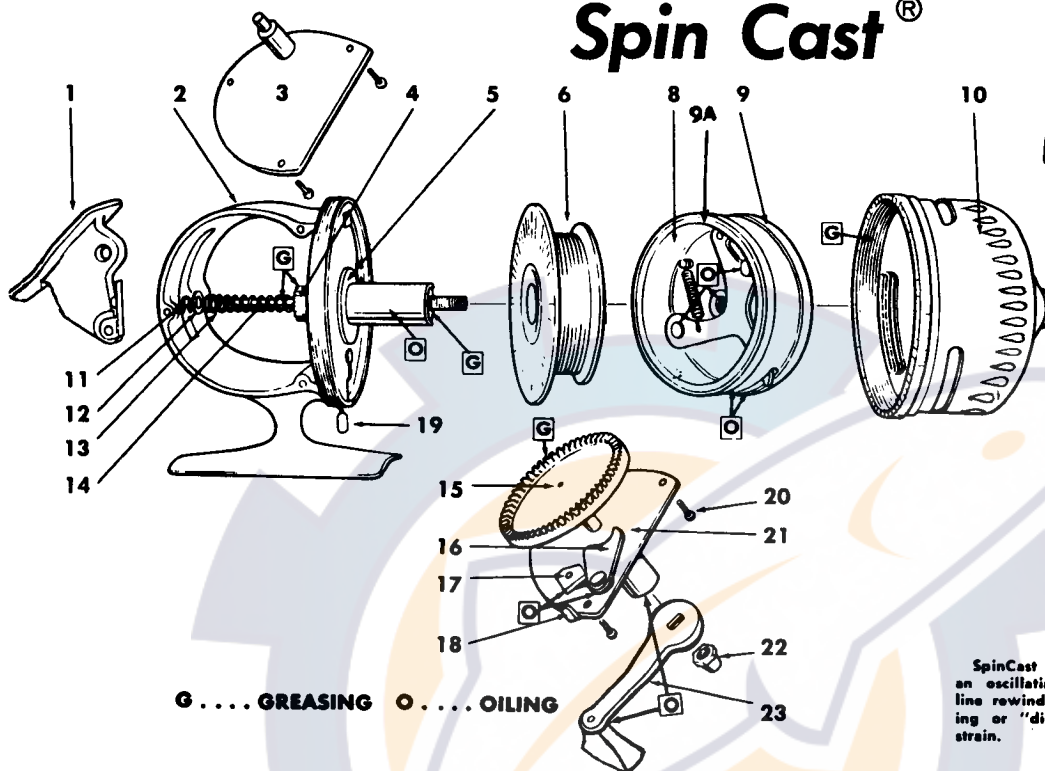

SpinCast Models 89 and 78 have an oscillating pickup for smooth line rewind that eliminates bunching or "digging in" even under strain.

G . . . GREASING O . . . OILING

Diagram No.	PART NAME	PART NUMBERS AND PRICE					
		78		88		89	
		Ref. No.	Price	Ref. No.	Price	Ref. No.	Price
1	Control Button	CB-17	\$.80	C17	\$.70	CB-17	\$.80
2	Frame Assembly	CG-16	4.40	CE16	4.00	CH-16	4.65
3	Left Cover Plate	CG-33	.60	CE33	.55	CH-33	.60
4	Pinion Gear	CB-22	1.05	C-22	.30	CB-22	B4679K 1.05
5	Spool Friction Washer	C-35	FL4485 .03	CA-35	A4654 .03	CA-35	FL4516 .03
6	Spool Assembly	CB-15	A4536 2.25	CD-15	A4999 2.25	CD-15	A4654 2.25
8	Pickup Assembly	CD-24	A4991 3.75	CE-24	B4288K 3.20	CF-24	A4993 4.00
9	Pickup Wear Rings (Front)	C-36	B4464K .35	B-61	B4288K .35	B-61	B4288K .35
9A	Pickup Wear Rings (Rear)	CA-36	B4138K .60	CB-36	B4140K .60	CB-36	B4140K .60
10	Outer Cone Assembly	CJ-25	3.80	CK-25	3.85	CL-25	3.85
11	Retainer Spring	C-21	E4475 .02	C-21	E4475 .02	C-21	E4475 .02
12	Spring Retainer Washer	C-20	B4634 .05	C-20	B4634 .05	C-20	B4634 .05
13	Main Shaft Spring	C-19	E4432 .10	C-19	E4432 .10	C-19	E4432 .10
14	Main Shaft	CD-18	NE4678 .90	CE-18	E4649 .45	CD-18	NE4678 .90
15	Drive Gear Assembly	CG-32	A4689 1.70	CE-32	A4442 1.30	CG-32	A4689 1.70
16	Non-Reverse Pawl	C-30	.05	C-30	.05	C-30	.05
17	Non-Reverse Throwout	C-31	A4520 .15	C-31	A4520 .15	C-31	A4520 .15
18	Non-Reverse Lever	C-28	B4444K .20	C-28	B4444K .20	C-28	B4444K .20
19	Drag Adjusting Spring	C-23	E4502 .10	C-23	E4499 .10	CB-23	E4499 .10
20	Cover Plate Screws	R-18	B840K .03	CB-23	B840K .03	R-18	B840K .03
21	Right Cover Plate	C-27	1.00	R-18	1.00	CF-27	1.00
22	Crank Nut	RG-11	B3290K .25	CE-27	B3290K .25	RG-11	B3290K .25
23	Crank Assembly	QP4480K	A4495 .75	RG-11	QP4480K .70	CF-11	B3290K .75
24	Pick-up Arm Assembly	CF-38	A4495 1.20	C-26	QP4480K .70	CC-26	A4498 1.25
25	Pick-up Arm Retaining Ring	R-51	E96 .02	CE-38	A4498 .02	CE-38	A4498 .02
26	Pick-up Arm Retaining Washer	CA-47	B4460N .03	R-51	E96 .02	R-51	E96 .02
				CA-47	B4460N .03	CA-47	B4460N .03

Note: Prior to the introduction of the Contour Control SpinCast Reel in June, 1959, all SpinCast reels had non-fluted Outer Cone Assemblies. When ordering this part, please indicate if reel is Contour Control.

REF. No.	PART NAME	78		88		89	
		Part No.	Price	Part No.	Price	Part No.	Price
10	Outer Cone Assembly Non-Fluted	CD-25	\$3.55	CE-25	\$3.15	CF-25	\$3.55

DISASSEMBLY and ASSEMBLY INSTRUCTIONS

1. Unscrew Outer Cone Assembly from the frame. 2. Hold crank from turning and unscrew Pickup Assembly (Ref. No. 8) from Main Shaft. Line Spool slides off from spool bearing. 3. Remove Crank Nut (Ref. No. 22) and slip off Crank. 5. Remove Cover Plate Screws (Ref. No. 20) and lift out Right Cover Plate Assembly (Ref. No. 21). Drive Gear Assembly (Ref. No. 15) slides out. 6. To remove Control Button, remove Left Cover Plate

(Ref. No. 3). Note: On Level-Wind models, Main Shaft (Ref. No. 14) slides forward through bearing. On Non Level-Winding models, Main Shaft is removed through gear housing after spring and pinion are removed. To reassemble, repeat above procedure in reverse order. Be sure Level-Wind cam is engaged when Right Cover Plate is replaced.

Numbers shown in red common to both South Bend and Shakespeare.

NOTE: When ordering parts, give reel part name, reel number and model.