



800 Series

Detail No.	Part Name	3-205-820 Part No.	3-205-840 Part No.	3-205-870 Part No.	3-205-880 Part No.	Detail No.	Part Name	3-205-820 Part No.	3-205-840 Part No.	3-205-870 Part No.	3-205-880 Part No.	
1	Drag Nut	SPE66	SPE67	SPE68	SPE68	26	Bail Bracket Spring	SPD83	SPD83	SPD84	SPD84	
2	Spool Assy. (with internal parts)	SPE57	SPE59	SPE61	SPE63	27	Pick-up Housing	SPE89	SPE70	SPE71	SPE72	
3	Retaining Ring	SPC43	SPD42	SPA89	SPA89	28	Pinion Washer		SPD87	SPD88	SPD89	
4	Keyed Drag Washer (2 for 870 & 880)	SPC44	SPD43	SPA91	SPA91	29	Pinion Bearing Washer	SPD98	SPE73	SPE73	SPE73	
5	Drag Fiber Washer	SPC45	SPD44	SPC46	SPC46	30	Pinion Bearing		SPE84	SPE85	SPE86	
6	Eared Drag Washer	SPC47	SPD45	SPA95	SPA95	31	Pinion Gear	SPD97	SPD94	SPD95	SPD96	
7	Tension Washer (2 for 870 & 880)	SPC48	SPD46	SPC49	SPC49	32	Anti Throw-in Screw		SPD91	SPD91	SPD91	
8	Spool Shell	SPC50	SPD47	SPC51	SPC52	33	Anti Throw-in Spring		SPD92	SPD93	SPD93	
9	Line Guard	SPC57	SPC57	SPC57	SPC58	34	Drive Gear	SPE6	SPE7	SPC98	SPC99	
10	Click Pawl	SPE56	SPE56	SPE56	SPE56	35	Drive Gear Washer	SPA27	SPA28	SPD2	SPD2	
11	Click Pawl Screw	SPE65	SPE65	SPE65	SPE65	36	Non Reverse Spring	SPB99	SPB99	SPB99	SPE13	
12	Click Pawl Spring	SPB61	SPB61	SPB61	SPB61	37	Non Reverse Pawl	SPD8	SPE10	SPE82	SPE11	
13	Spool Fiber Washer	SPC73	SPD49	SPB73	SPB73	38	Pawl Retaining Ring	SPE26	SPE26	SPE26	SPB97	
14	Click Ratchet			SPE89	SPE89	39	Level Wind Bracket	SPD23	SPE4	SPD24	SPD24	
15	Main Shaft Assembly	SPB50	SPD51	SPD52	SPD53	40	Bracket Screw (2 for 870 & 880)		SPD22	SPE5	SPC15	SPC15
16	Bail Wire Assembly	SPD54	SPD55	SPD56	SPD57	41	Lever Retaining Ring	SPE28	SPE28	SPE28	SPE28	
17	Line Roller Nut	SPD67	SPD67	SPC26	SPC26	42	Non Reverse Lever	SPE83	SPE83	SPE83	SPE83	
18	Bail Bracket	SPD62	SPD63	SPC64	SPD65	43	Frame	SPE74	SPE75	SPE76	SPE77	
19	Line Roller	SPD68	SPD69	SPD60	SPD61	44	Cover Plate	SPE78	SPE79	SPE80	SPE81	
20	Pick-up Housing Nut	SPD74	SPD75	SPD75	SPD75	45	Cover Plate Screw	SPD11	SPC3	SPC3	SPC3	
21	Pick-up Housing Washer	SPD76	SPD77	SPD78	SPD78	46	Crank Assembly	SPD12	SPE15	SPD13	SPD14	
22	Trip Bracket Screw	SPB68	SPB68	SPB68	SPB68	47	Crank Arm		SPE16	SPD16	SPD17	
23	Trip Bracket	SPD70	SPD71	SPD72	SPD73	48	Crank Handle		SPE17	SPC12	SPD19	
24	Bail Bracket Screw	SPF53	SPF53	SPF53	SPF53	49	Crank Handle Screw		SPE18	SPE18	SPE18	
25						50	Oil Cap	SPF52	SPF52	SPF52	SPF52	
						51	Bail Bracket Washer	SPF54	SPF54	SPF54	SPF54	