




ELL - ELECTRA LAZER DP12000 2013-Current Model Parts List

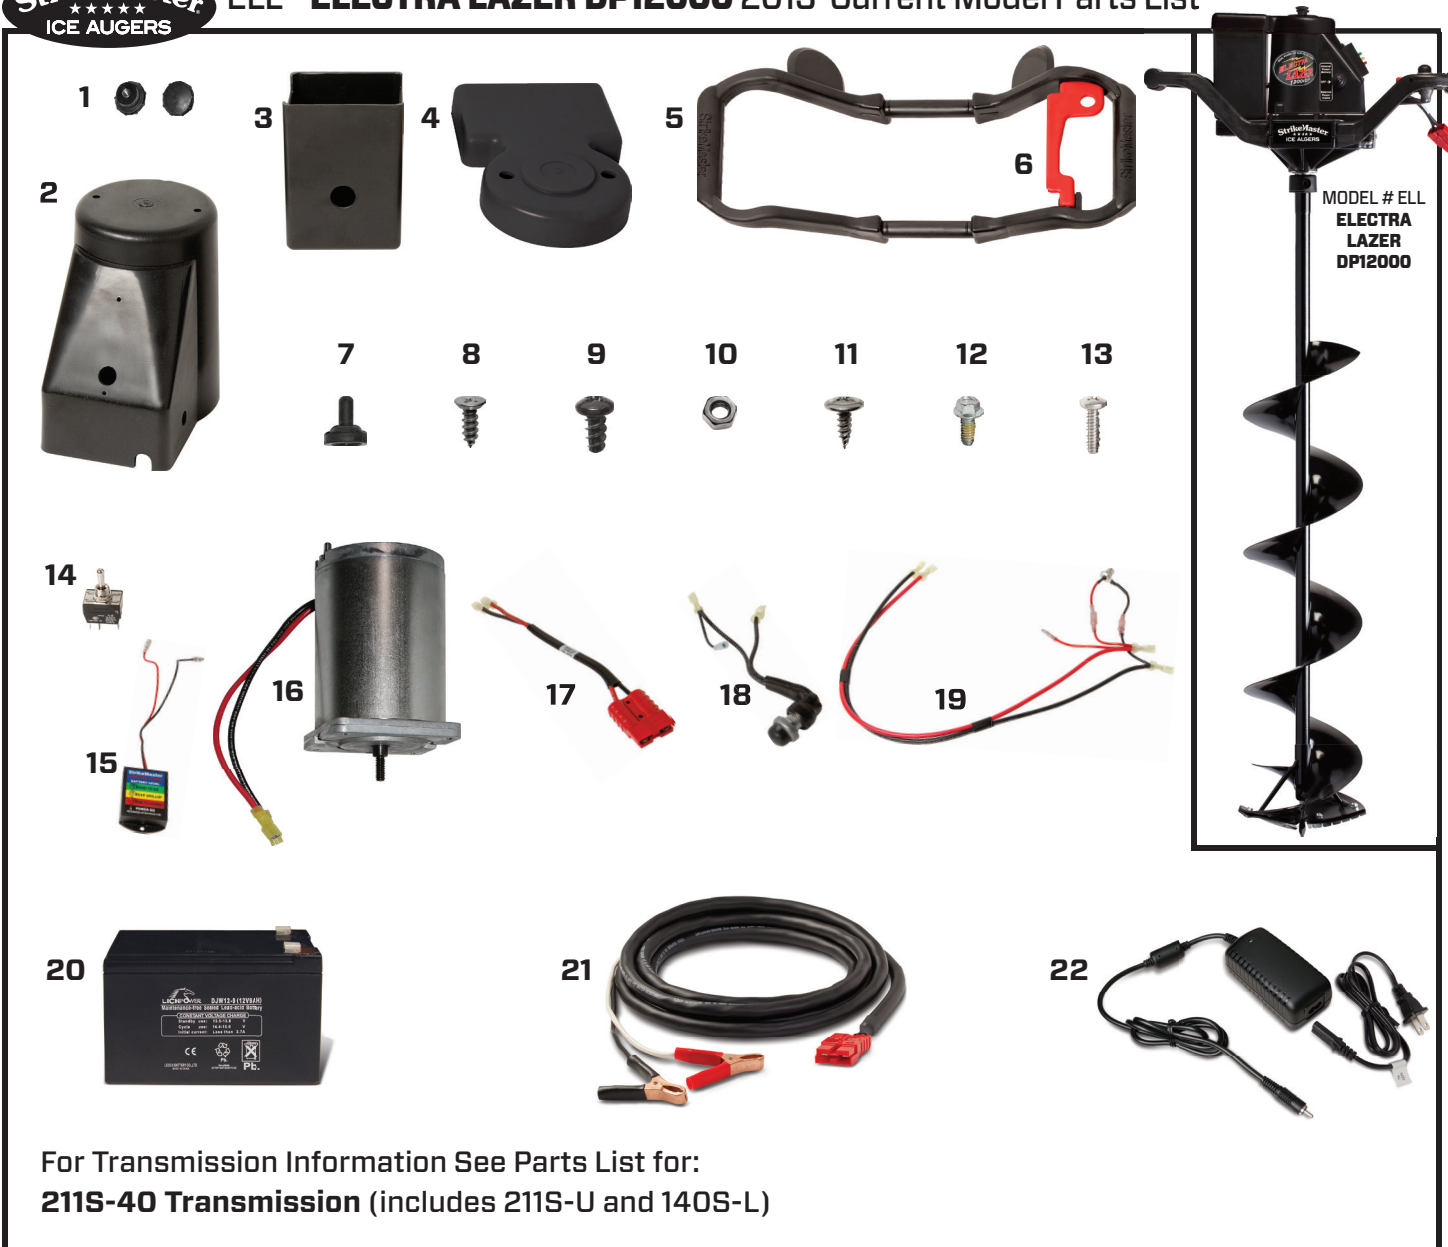

For Transmission Information See Parts List for:
211S-40 Transmission (includes 211S-U and 140S-L)

| # | Part No. | Description |
|----|-----------|---|
| 1 | 151322 | Battery Cover Knobs (2 Per Pack) |
| 2 | 151348 | Electra Motor Cover |
| 3 | 151312 | Battery Box |
| 4 | 151319 | Motor/Battery Box |
| 5 | 151388C-A | Composite Handle with Lever (Includes #6) |
| 6 | 151645E | Throttle Lever |
| 7 | 151318 | Toggle Switch Boot |
| 8 | 410030 | Battery Box Screws (Requires 2) |
| 9 | 410095 | Battery Meter Screws (Requires 2) |
| 10 | 410027 | Motor Cover Nut (Requires 2) |
| 11 | 410014 | Rocker Lever Mounting Screw |
| 12 | 470833 | Upper Transmission Bolt - 1/4 - 20 x 5/8 HHFLGBLT with Nylon Patch (Requires 4) |
| 13 | 410011S | Lower Trans Screws Hi-Low Cut Philips (Requires 6) |

| # | Part No. | Description |
|----|-----------|---|
| 14 | 151317 | Internal/External Toggle Switch |
| 15 | 151310-09 | Battery Meter |
| 16 | 151438 | ELL Motor |
| 17 | 151320-09 | Power Pole Assembly |
| 18 | 151336-09 | 60-amp Push Button Switch Assembly |
| 19 | 151315-09 | DC Power Assembly with Charger Plug |
| 20 | ERB-1 | 12-volt/9-amp Battery Replacement |
| 21 | 151358 | Power Cord with Battery Clamps |
| 22 | EBC-1 | 12-volt Battery Charger Plug-in (Wall Outlet Adapter) |