


**BRUNSWICK CORPORATION**  
**CONSUMER DIVISION**  
 POST OFFICE BOX 270,  
 TULSA, OKLAHOMA 74101

# ZEBCO PARTS LIST AND ORDER BLANK

## MODEL XB75 SPINNING REEL

PLEASE ORDER BY PART NUMBER, NOT KEY NUMBER

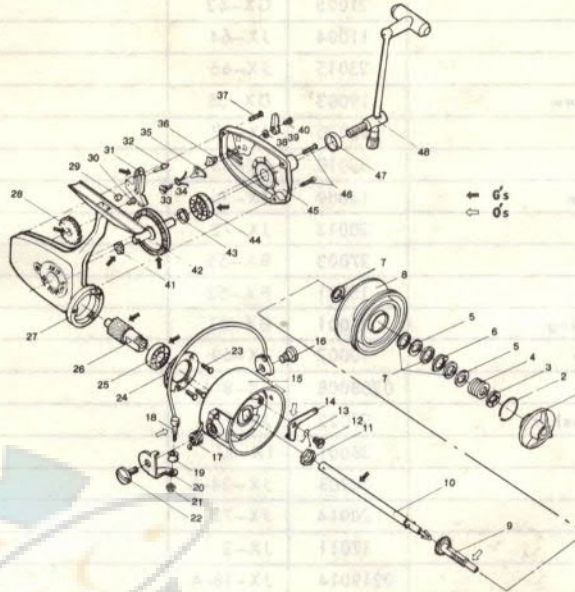

IF REQUIRED REPAIRS CANNOT BE MADE AT YOUR NEAREST FACTORY APPROVED SERVICE STATION, YOU MAY ORDER THE FOLLOWING REPLACEMENT PARTS DIRECT FROM THE FACTORY OR RETURN REEL TO FACTORY.

Your Order No. \_\_\_\_\_ Date \_\_\_\_\_

Charge To \_\_\_\_\_ Ship To \_\_\_\_\_

Address \_\_\_\_\_ Address \_\_\_\_\_

City & State \_\_\_\_\_ City & State \_\_\_\_\_

### DEFECTIVE PARTS REPLACED AT FACTORY ONLY

KEY NO.	DESCRIPTION	PART NO.		QUANTITY	PRICE	EXTENSION
		OLD	NEW			
1	Drag Knob	0232001	HX-32		\$ .85	
2	Drag Washer Retainer	28004	EX-28		.10	
3	Drag Washer A	26005A	JX-35		.20	
4	Spring Washer	28029	JX-30		.30	
5	Drag Washer A	26005	JX-68		.30	
6	Drag Washer B	26006	HX-49		.15	
7	Drag Washer C	27001	EX-45		.15	
8	Spool Assembly	0206011	JX-21		2.40	
9	Spool Click	0213007	JX-33		.95	
10	Main Shaft Assembly	0212017	JX-15-A		1.50	
11	Rotor Nut	18001	HX-6		.15	
12	Bail Arm Lever Screw	19003	BX-41		.20	
13	Bail Arm Lever Spring	28001	HX-42		.15	
14	Bail Arm Lever	15002	HX-43		.20	
15	Rotor	05001	HX-9-1		2.05	
16	Bail Arm Cam B Screw	19002	HX-14		.30	
17	Bail Arm Spring	28006	HX-45		.15	
18	Bail Arm Assembly With Cam B	0229001	HX-10-A		1.75	
19	Bail Arm Line Roller	25001	CX-4		.35	
20	Bail Arm Cam A	15008	JX-7		.50	
21	Bail Arm Nut	18006	JX-19		.35	
22	Bail Arm Cam A Screw	19001	HX-16		.55	
23	Ball Bearing Holding Screw	20001	JX-25-1		.10	

(Continued on Reverse Side)

KEY NO.	DESCRIPTION	PART NO.		QUANTITY	PRICE	EXTENSION
		OLD	NEW			
24	Ball Bearing Holder	17002	JX-26-1		\$ .35	
25	Ball Bearing	38001	IX-27		3.05	
26	Pinion Gear	09007	JX-11		1.95	
27	Main Body	03006	JX-1-A		2.60	
28	Oscillating Bull Gear	10001	JX-61		.30	
29	Oscillating Slider Collar	17010	JX-62		.10	
30	Bull Gear Screw	21005	GX-63		.15	
31	Oscillating Slider	11004	JX-64		.40	
32	Oscillating Slider Pin	23015	JX-66		.10	
33	Anti-Reverse Lever Screw	19003	DX-38		.20	
34	Anti-Reverse Spring	28028	JX-37		.15	
35	Anti-Reverse Claw	33010	JX-35		.15	
36	Anti-Reverse Lever Cam	14009	JX-36		.20	
37	Side Plate Screw B	20013	JX-72		.10	
38	Spring Washer	27003	BX-55		.10	
39	Anti-Reverse Lever	15001	FX-52		.30	
40	Anti-Reverse Lever Spring	21001	BX-51		.10	
41	Oscillating Pinion Gear	10002	JX-60		.15	
42	Main Gear Assembly	0208008	JX-8-A		2.35	
43	Main Gear Adjusting Washer	27022	JX-77		.10	
44	Ball Bearing	38001	IX-27		3.05	
45	Side Plate	04008	JX-24-A		.95	
46	Side Plate Screw A	20014	JX-73		.15	
47	Handle Holder	17011	JX-3		.40	
48	Handle Assembly	0219014	JX-18-A		3.85	