



LT100 SCHEMATIC

**MANUAL PARTS LIST**

<b>FIN-NOR LETHAL SPINNING</b>			
<i>REVISION: "6" - Updated: 04/24/19</i>			
<b>KEY #</b>	<b>DESCRIPTION</b>	<b>LT100</b>	<b>FBS100</b>
1	DRAG KNOB ASSEMBLY	DT332-61	QO332-01
2	SPOOL RETAINER	JO038-01	JO038-01
3	DRAG WASHER "D"	JO080-01 (4)	JO080-01 (4)
4	DRAG WASHER "B"	JO033-01 (7)	JO033-01 (7)
5	DRAG WASHER "A"	JO081-01 (4)	JO081-01 (4)
6	SPOOL BUSHING	ZAB141-01	ZAB141-01
7	SPOOL ASSEMBLY KIT	ZAB4321-01	ZAB4321-02
	7A - SPOOL ASSEMBLY	ZAB321-01	ZAB321-02
	2 - SPOOL RETAINER	JO038-01	JO038-01
	3 - DRAG WASHER "D"	JO080-01 (4)	JO080-01 (4)
	4 - DRAG WASHER "B"	JO033-01 (7)	JO033-01 (7)
	5 - DRAG WASHER "A"	JO081-01 (4)	JO081-01 (4)
	7 - SPOOL BUSHING	ZAB141-01	ZAB141-01
	7B - SPOOL CLICKER	JO103-01	JO103-01
	7C - CLICK SPRING	JO068-01	JO068-01
	7D - SCREW - CLICKER	GU077-04	GU077-04
8	WASHER - ADJUST SPOOL	QO080-01	QO080-01
9	CLICK GEAR - SPOOL	JO039-01	JO039-01
10	MAIN SHAFT ASSEMBLY	ZAB315-01	ZAB315-01
11	SCREW - ROTOR NUT RETAINER	JX125-01	JX125-01
12	RETAINER - ROTOR NUT	ZAB118-01	ZAB118-01
13	ROTOR NUT	ZAB006-01	ZAB006-01
14	BAIL ASSEMBLY	ZAB347-01	ZAB347-02
15	LINE ROLLER	TK004-03	TK004-03
16	SPACER	DT167-01	DT167-01
17	LINE ROLLER BEARING	GH202-01 (2)	GH202-01 (2)
18	LINE ROLLER WASHER	DT229-01	DT229-01
19	ARM LEVER ASSEMBLY	ZAB307-01	ZAB307-02
20	WASHER - L/SLIDER SCREW	PAA065-01	PAA065-01
21	SCREW - LINE SLIDER	AQ108-01	AQ108-01
22	E-CLIP	GH034-01 (2)	GH034-01 (2)
23	ROTOR ASSEMBLY	ZAB309-01	ZAB309-02
24	WASHER - ROTOR	ZAB109-01	ZAB109-01
25	SCREW - BEARING HOLDER	JX107-03 (3)	JX107-03 (3)
26	BEARING HOLDER ASSEMBLY	ZAB3190-01	ZAB3190-01
27	BALL BEARING - PINION	BGRS11	BGRS11
28	CLUTCH ASSEMBLY KIT	ZAB463-01-01	ZAB463-01
	28A - CLUTCH HOUSING	ZAB063-01	ZAB063-01
	28B - CLUTCH SLEEVE	ZAB139-01	ZAB139-01
29	WASHER - RATCHET	ZAB110-01	ZAB110-01
30	RATCHET	ZAB060-01 (2)	ZAB060-01 (2)
31	GEAR KIT	ZAB4011-01	ZAB4011-01
	31A - PINION BUSHING: TOP SIDE	ZAB214-01	ZAB214-01
	31B - PINION GEAR	ZAB011-01	ZAB011-01
	31C - PINION BUSHING: BOTTOM SIDE	ZAB058-01	ZAB058-01
	31D - SPRING: A/R PAWL	ZAB061-01	ZAB061-01
	31E - DRIVE GEAR	DT312-51	DT312-51
	31F - DRIVE GEAR ADJUST WASHER	GU105-36	GU105-36
32	HANDLE CAP	BT373-61	JO073-02
33	BODY ASSEMBLY	ZAB301-01	ZAB301-02
34	BUSHING - STOPPER	ZAB202-01	ZAB202-01
35	STOPPER	ZAB074-01	ZAB074-01
36	SCREW - STOPPER	ZAB107-01	ZAB107-01
37	BALL BEARING - BODY	BT157-01	BT157-01
38	BALL BEARING - BODY COVER	BT157-01	BT157-01
39	OSCILLATOR GEAR BUSHING	ZAB158-01	ZAB158-01
40	OSCILLATOR GEAR	ZAB053-01	ZAB053-01
41	BALL BEARING - O/S GEAR	ZAB027-01	ZAB027-01
42	SCREW - O/S GEAR	ZAB111-01	ZAB111-01
43	O/S SLIDER	ZAB025-01	ZAB025-01
44	SCREW - MAIN SHAFT	ZAB100-01	RQ100-01 (2)
45	RETAINER - O/S SLIDER	ZAB078-01	ZAB078-01
46	SCREW - RETAINER	TK057-01 (2)	TK057-01 (2)
47	SIDE COVER	ZAB023-01	ZAB023-02
48	SIDE COVER SCREW KIT	ZAB4057-01	ZAB4057-01
	48A - SCRATCH PROTECT WASHER	RQ142-01 (4)	RQ142-01 (4)
	48B - SIDE COVER SCREW: TOP SIDE	ZAB057-01 (2)	ZAB057-01 (2)
	48C - SIDE COVER SCREW: BOTTOM SIDE	ZAB057-02 (2)	ZAB057-02 (2)
49	HANDLE ASSEMBLY	SO318-01	SO318-02

- Rev.2 Handle knob change.ECN
- Rev.3 Handle assembly change.ECN
- Rev.4 Change LT100 Main shaft screw from RQ100 to ZAB100
- Rev.5 Correct the LT100 O/S Slider part number to ZAB025 (was DT025) by ECN\_F1188
- Rev.6 Corrected the O/S Gear (was DT053) and Bearing (was CH027) number by ECN\_F1207