



FIN NOR STAR DRAG SERVICE DIAGRAM

LTC 16H / LTC 20H / LTC 30H

Fin-Nor LTC16H, LTC20H and LTC30H Part List

Key No.	Description	Part No.			Q'TY	Key No.	Description	Part No.			Q'TY
		LTC16H	LTC20H	LTC30H				LTC16H	LTC20H	LTC30H	
1	HANDLE NUT PLATE	SF034-01	↔	↔	1		35 - PALM SIDE COVER ASSY/with Medallion	RF323-02	RF323-02	RF323-02	1
2	HANDLE NUT	RF003-01	↔	↔	1		39 - SPOOL CLICK BUTTON	RF109-01	RF109-01	RF109-01	1
3	HANDLE NUT SCREW	RF065-01	↔	↔	1		40 - CLICK BUTTON WASHER	RF081-01	RF081-01	RF081-01	2
4	CRANK HANDLE ASSY	RF318-03	↔	↔	1		41 - SPOOL CLICK PAWL	RF108-01	RF108-01	RF108-01	1
5	SPACER	RF094-01	↔	↔	1		42 - RETAINER RING - SPOOL CLICK	RF020-01	RF020-01	RF020-01	1
6	DRAG STAR ASSY	RF355-03	↔	↔	1	37	COVER SCREW	RF057-02	↔	↔	3
7	SPOOL TENSION CAP	RF033-02	↔	↔	1	43-A	BRAKE SLEEVE	RF044-01	↔	↔	2
8	SPACER "A"	RF032-01	↔	↔	1	43-B	BRAKE SLEEVE	RF044-02	↔	↔	2
9	SPACER "B"	RF082-01	↔	↔	1	44	SPOOL ASSY	RF321-05	SF321-05	TF321-05	1
10	O RING	RF101-01	↔	↔	1	45	DRIVE SHAFT PAD (FELT)	RF155-01	↔	↔	1
11	CLUTCH LEVER ASSY	RF309-02	↔	↔	1	46	BALL BEARING	SF117-01	↔	↔	1
12	CLUTCH LEVER COLLAR	RF160-01	↔	↔	1	47	DRIVE SHAFT RETAINER	RF002-51	↔	↔	1
13	COVER SCREW	RF057-01	↔	↔	3	48-A	SCREW	RF107-01	↔	↔	3
14	RIGHT SIDE COVER ASSY	RF324-07	RF324-08	RF324-09	1	48-B	SCREW	RF107-01	↔	↔	3
15	BUSHING	RF088-02	↔	↔	1	49	DRIVE SHAFT	RF008-02	↔	↔	1
16	BUSHING RETAINER	RF080-01	↔	↔	1	50	A/R/ RATCHET	RF091-01	↔	↔	1
17	CLUTCH SPRING	RF104-01	↔	↔	1	51	DRAG WASHER "B"	RF111-01	↔	↔	1
18	CLUTCH CAM ASSY	RF384-01	↔	↔	1	52	BALL BEARING	TF117-01	↔	↔	1
19	RETAINER RING - CLUTCH LEVER	RF092-01	↔	↔	1	53	DRIVE GEAR	RF012-02	↔	↔	1
20	PINION	RF011-02	↔	↔	1	54	DRAG WASHER "A" (FRICTION)	RF059-03	↔	↔	5
21	YOKE SPRING	RF040-01	↔	↔	2	55	KEYED DRAG WASHER	RF045-01	↔	↔	2
22	YOKE	RF025-01	↔	↔	1	56	TABBED DRAG WASHER	RF048-01	↔	↔	2
23	YOKE PLATE	RF039-01	↔	↔	1	57	SPRING WASHER	RF046-01	↔	↔	1
24	FRAME ASSEMBLY	RF301-02	SF301-02	TF301-02	1	58	A/R PAWL ASSY	RF363-01	↔	↔	1
25	BALL BEARING	RF058-02	↔	↔	1	59	CLUTCH SLEEVE	RF159-01	↔	↔	1
	Palm Side Cover Kit include	RF4323-02	RF4323-02	RF4323-02		60	CLUTCH	RF131-01	↔	↔	1
	26 - CENTRIFUGAL BRAKE RING	RF042-01	RF042-01	RF042-01	1	61	HOOD	RF027-03	↔	↔	1
	27 - SPOOL CLICK SPRING SCREW	RF053-01	RF053-01	RF053-01	1	62	BALL BEARING	RF058-01	↔	↔	1
	28 - SPOOL CLICK SPRING	RF022-01	RF022-01	RF022-01	1	63	BEARING WASHER	RF121-01	↔	↔	1
	29 - BEARING RETAINER	RF129-01	RF129-01	RF129-01	1	64	SEAL	AA166-01	↔	↔	1
	30 - BEARING WASHER "D" (FELT)	RF122-01	RF122-01	RF122-01	1	65	SPRING WASHER	RF046-02	↔	↔	2
	31 - BALL BEARING	RF017-01	RF017-01	RF017-01	1	66	CLICK SPRING ASSEMBLY	RF314-01	↔	↔	1
	32 - BEARING WASHER "C"	RF035-02	RF035-02	RF035-02	1	67	BEARING WASHER	RF121-02	↔	↔	1
	33 - BEARING WASHER "B"	RF038-01	RF038-01	RF038-01	1	68	KIT - ROD CLAMP	RF4154-01	↔	↔	1
	34 - BEARING WASHER "A"	RF035-01	RF035-01	RF035-01	1	69	WRENCH	RF113-01	↔	↔	1

1/10/2019

Add palm side cover kit