
ABEL TR

PRODUCT CARE

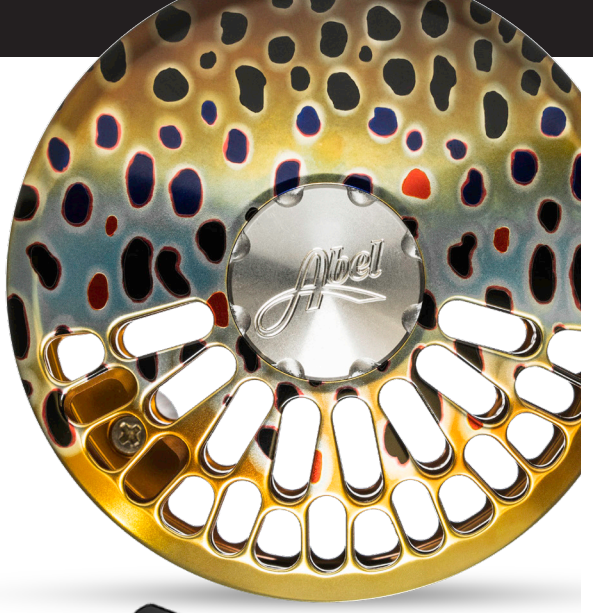


SPOOL REMOVAL

1. To remove the Spool (1) from the Frame (2), unscrew the Spool Release (3) by turning it counter-clockwise, then pull the Spool (1) from the Frame (2). The Spool Release (3) will remain in place on the Spool (1).
2. To replace the Spool (1) on the Frame (2), put the spool back on the Frame (2), and then turn the Spool Release (3) clockwise once it is in place.

CHANGING THE DIRECTION OF RETRIEVE

1. The design on the new Abel TR does not require any modification to change between right and left hand retrieve - the line only needs to be wound in the desired direction.

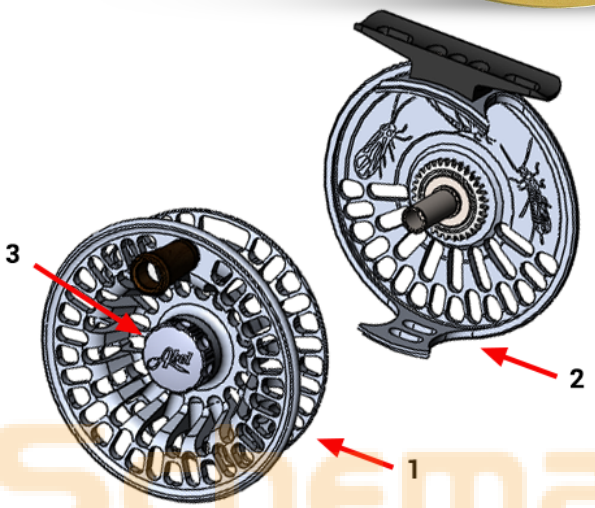

ReelSchematic

SPECIFICATIONS

All capacity numbers are in yards. Line capacities are based on 90- foot floating fly lines and 20# backing. All numbers are conservative, as capacities will vary according to specific length and diameters of alternative line manufacturers' products. Capacities will be reduced by approximately 20% if using #30 backing instead of #20 backing.

ABEL TR 2/3	
ARBOR SIZE	LARGE
REEL	$395
SPOOL ONLY	$237
WEIGHT	4.19 oz.
SPOOL DIAMETER	3.06
ARBOR DIAMETER	1.72
SPOOL WIDTH	0.775
LINE + YARDS OF BACKING	2 + 65 20# 3 + 50 20#

ABEL TR 4/5	
ARBOR SIZE	LARGE
REEL	$395
SPOOL ONLY	$237
WEIGHT	4.65 oz.
SPOOL DIAMETER	3.29
ARBOR DIAMETER	1.96
SPOOL WIDTH	0.775
LINE + YARDS OF BACKING	4 + 85 20# 5 + 65 20#

CLEANING

Keep pawl spring, gear, and pawl coated with medium to heavy all-purpose waterproof grease. No grease is required on the main shaft, as it is self-lubricating. Windex can be used to clean the shaft and inner spool bushing if necessary. Always remove sand, dirt, and grit after use. Soak reel in distilled water after exposure to saltwater. Use a small, soft brush to remove contaminant residue from hard to reach places-screws, holes, etc. Store in protective reel case both on and off the rod.