
AMUNDSON

Please release drag system when not in used.Failure to deactivate drag could result free spooling.

TREND MOOCHING SPECIALIST 04

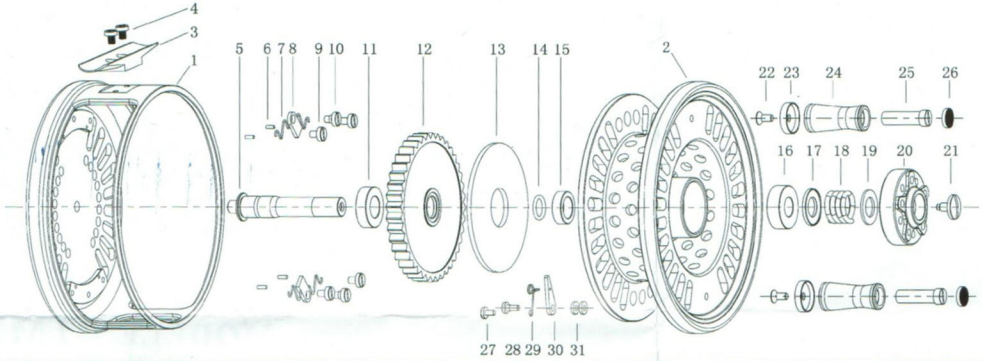

MODEL:**TMX4**

1. Frame
2. Spool
3. Reel foot
4. Reel foot screw
5. Main shaft
6. Pin
7. Steel wire
8. Click
9. Screw
10. Screw
11. Ball bearing
12. Gear
13. Drag friction disc
14. O-ring
15. Ball bearing
16. Ball bearing
17. Washer
18. Spring
19. Washer
20. Drag knob
21. Screw
22. Handle screw
23. Handle collar
24. Handle
25. Handle rivet
26. Handle cover
27. Screw
28. Screw
29. Spring
30. Clip
31. Washer

LEFT/RIGHT HAND RETRIEVE INSTRUCTION

- Screw off #21 then unscrew drag knob #20.
- Remove spool #2 from the frame #1.
- Take out gear #12 then take click #8 to the other side.
- Refit spool #2 back onto the frame #1 and tighten the spool cap #21.

For warranty issue, Please check www.amundson.ca
or e-mail info@amundson.ca

Amundson Outdoor Products Ltd

7141 Randolph Ave. Burnaby, BC. Canada. V5J 4W5 Tel: 604 431 1805 Toll Free:877 437 1805 Fax:604 431 1816 E-mail:info@amundson.ca www.amundson.ca