
AMUNDSON

TXS FLY REEL

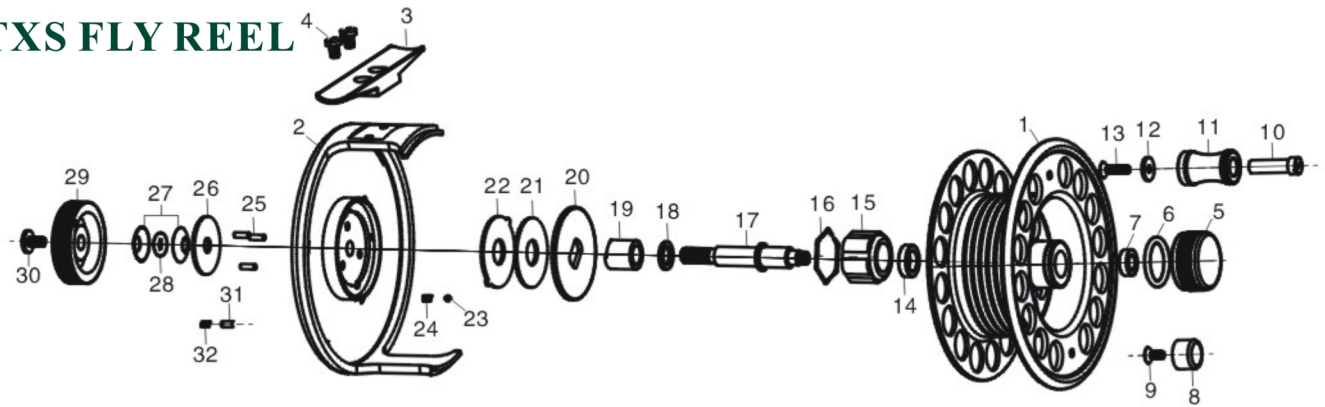


MODEL: TXS2/4 TXS 5/6 TXS7/8 TXS9/10

1.Spool
2.Frame
3.Reel Foot
4.Reel Foot Screw
5.Spool Cap
6.O-Ring
7.Ball Bearing
8.Handle Balance
9.Balance Screw
10.Handle Rivet
11.Handle Knob
12.Handle Collar
13.Handle Screw
14.Ball Bearing
15.One Way Bearing
16.Retaining Clip
17.Main Shaft
18.Drag Addition Main Shaft
19.Bearing Cone
20.Brake Disc
21.Drag Friction Disc
22.Rotationing Plate
23.Stainless Steel Ball
24.Spring
25.Drag Plate Pin
26.Washer
27.Elastic Plate
28.O-Ring
29.Drag Knob
30.Screw
31.Pawl
32.Pawl Spring

Left/Right Hand Retrieve Instructions

1.Unsrew the spool cap #5
2.Remove the spool #1 from the frame #2
3.Remove the Hexagon Retaining clip #16
4.Remove one-way bearing #15 by gently tapping spool face down on any flat surface. Re-install bearing: plastic face out for LH retrieve, metal shroud out for RH retrieve
5.Re fit the spool#1 back onto the frame#12 and tighten the spool cap#5

For warranty issue, Please check www.amundson.ca or e-mail info@amundson.ca

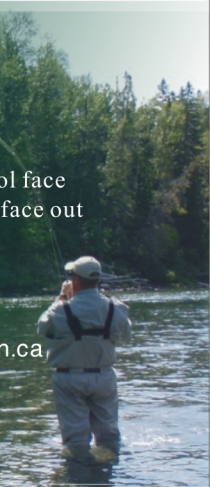

Amundson Outdoor Products Ltd
7141 Randolph Ave. Burnaby B.C Canada V5J4W5 Tel:604 431 1805 Fax:604 431 1816 E-mail:info@amundson.ca www.amundson.ca