
Eureka!


INSTRUCTIONS | Boondocker Hotel 6 (2601290)

1. Identify all tent components (see list below).

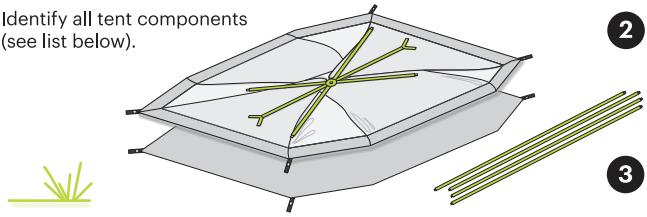


2. Spread out footprint with waterproof coated side up. Place tent body on top of footprint, matching the webbing colors + locate 4 corner webbing loops with grommets.


3. Construct 4 leg poles and roof pole assembly.

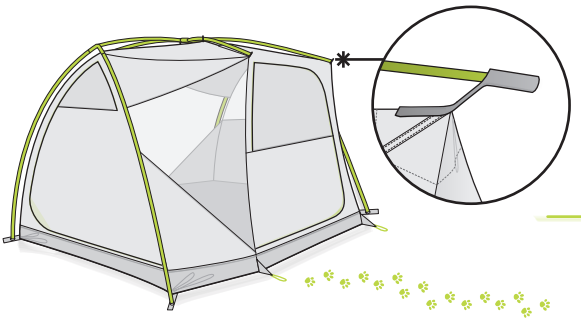

4. Place the roof pole assembly on top of tent as shown with correct hub orientation. Locate the 4 red webbing pockets. Insert red roof pole ends into webbing pockets.


5. Attach roof clips to color matched roof poles.

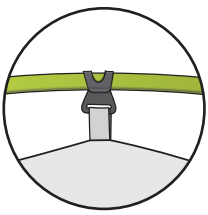

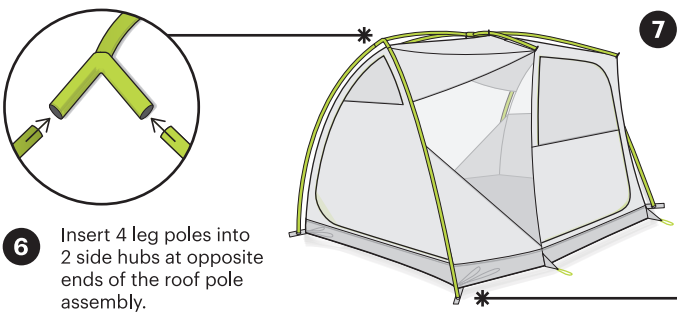


6. Insert 4 leg poles into 2 side hubs at opposite ends of the roof pole assembly.

7. Insert leg pole end tips into each of the 4 corner webbing grommets. Attach remaining clips to tent poles. Stake down 8 webbing loops.

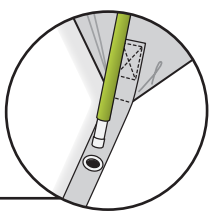

8. Place fly over tent body. Match the corresponding red + black webbing on fly + tent for correct orientation. Locate hook + loop fasteners on underside of fly + attach to tent poles.

9. Connect matching buckles on fly and tent body at 4 corners. Adjust fly tension via corner webbing. Stake out front vestibule.

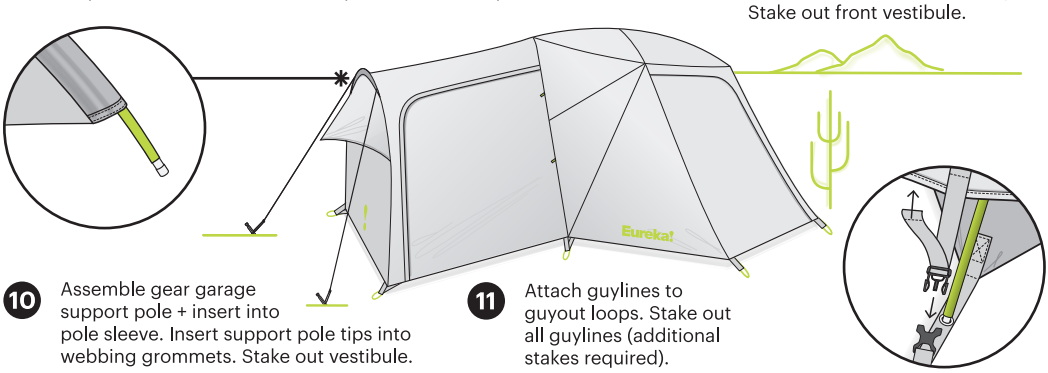

10. Assemble gear garage support pole + insert into pole sleeve. Insert support pole tips into webbing grommets. Stake out vestibule.

11. Attach guylines to guyout loops. Stake out all guylines (additional stakes required).

TENT CONTENTS

Tent body, Tent fly, Footprint
Leg poles (4)
Roof pole assembly (1)
Gear garage support pole (1)
Stakes (16) + Guylines (7)
Gear caddy

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com
Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows and/or vents on the tent fly.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.