

Eureka!

INSTRUCTIONS | Copper Canyon LX 12 (2601312)


1. Identify all tent components (see list below).

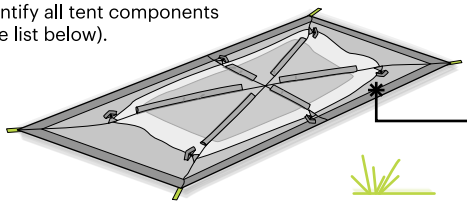

2. Spread out tent body and locate 6 eave hubs.

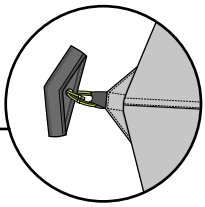


3. Assemble 3 roof poles and the 6 leg poles.

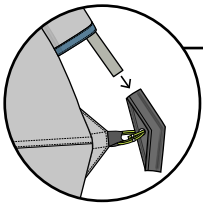

NOTE: Middle roof pole sleeve identified by **BLUE** trim.



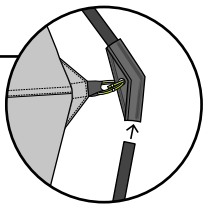


4. Gently slide roof poles through pole sleeves. Insert roof poles into the eave hubs. NOTE: Insert short **GRAY** middle roof pole into the ribbed end of eave hubs.

5. Insert open end of leg poles into eave poles. NOTE: Position **BLACK** leg poles at corners and **TAN** leg poles at middle.

6. Insert metal pin into bottom of each leg pole.






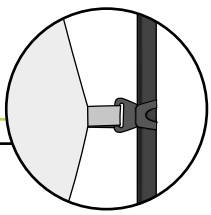

7. Attach all tent body clips to frame and stake down 6 webbing loops.


8. Assemble **BLACK** medium length fly pole with plastic end caps. Insert pole ends into pole pockets on underside of tent fly.



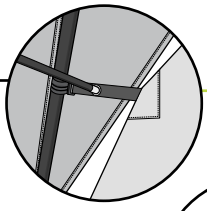

10. Assemble fly brim pole. Gently slide the brim pole through pole sleeve on the fly above the door. Insert ends of brim pole into grommet webbing.

11. Secure fly to tent by attaching fly hooks to plastic rings located on ground webbing. Stake out all guylines.

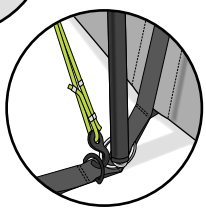

9. Place fly over tent body. Match the corresponding **ORANGE** and **BLACK** webbing on the fly and tent for correct orientation. Locate hook and loop fasteners on underside of fly and attach to leg poles.

TENT CONTENTS

Tent body + Tent fly
Steel leg poles:
(4) black corner + (2) tan middle
Fiberglass roof poles:
(2) black long + (1) gray middle
Fiberglass fly brim pole (1)
Gear lofts (2) + Divider curtain
Stakes (14) + Guy lines (6)

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com
Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.