
Eureka!


INSTRUCTIONS | Copper Canyon LX 4 (2601298)

1. Identify all tent components (see list below).

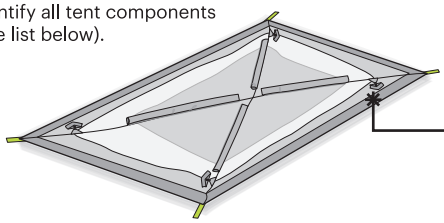

2. Spread out tent body and locate 4 eave hubs.

3. Assemble 2 roof poles and the 4 leg poles.

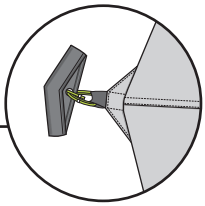



4. Gently slide roof poles through pole sleeves. Insert roof poles into the RIBBED end of eave hubs.


5. Insert open end of leg poles into eave poles.

6. Insert metal pin into bottom of each leg pole.



7. Attach all tent body clips to frame and stake down 4 webbing loops.

8. Place fly over tent body. Match the corresponding **ORANGE** and **BLACK** webbing on the fly and tent for correct orientation. Locate hook and loop fasteners on underside of fly and attach to leg poles.

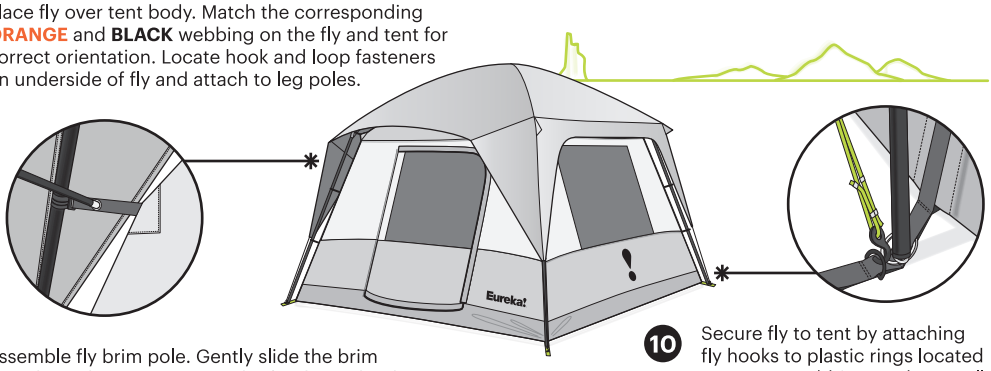

9. Assemble fly brim pole. Gently slide the brim pole through pole sleeve on the fly above the door. Insert ends of brim pole into grommet webbing

10. Secure fly to tent by attaching fly hooks to plastic rings located on corner webbing. Stake out all guy lines.

TENT CONTENTS

Tent body + Tent fly
Steel leg poles (4)
Fiberglass roof poles (2)
Fiberglass fly brim pole (1)
Gear lofts (2)
Stakes (8) + Guy lines (4)

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com

Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.