

Eureka!

INSTRUCTIONS | Desert Canyon 4 (2601297)


1. Identify all tent components (see list below).

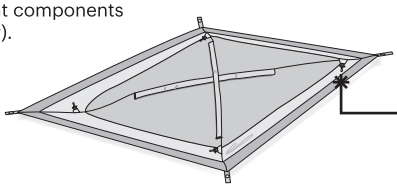


2. Spread out tent body and locate 4 corners with hubs.

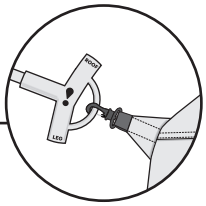


3. Assemble 2 roof poles and the 4 leg poles.

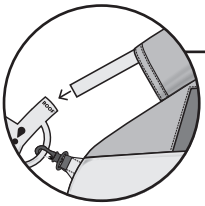


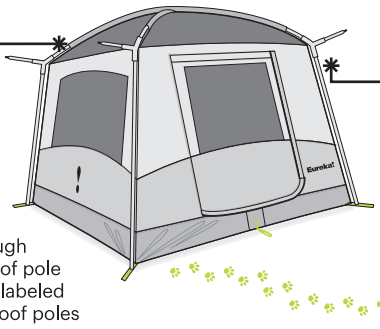


4. Insert roof poles through pole sleeves. Insert roof pole ends into the sockets labeled "ROOF". Ensure that roof poles arch in a dome-like manner.

5. Insert leg poles into sockets labeled "LEG".

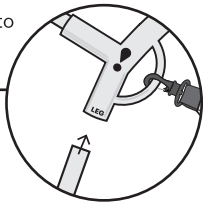

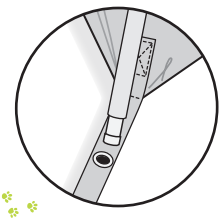


6. Insert leg pole tips into each of the 4 corner grommets.

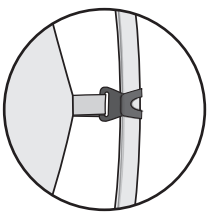



7. Attach all tent body clips to frame + stake down 5 webbing loops.


8. Place fly over tent body. Locate hook + loop fasteners on underside of fly + attach to roof poles. Locate clips on underside of fly + attach to leg poles.

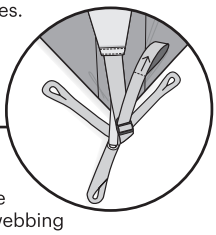


9. Secure fly to tent by hooking fly webbing grommet under leg pole tips. Adjust tension of fly via fly webbing and tension locks. Stake down all guylines.

CANOPY SET UP


1. Identify CANOPY SET UP components (fly, 2 roof poles, 4 leg poles, 4 corner hubs with extensions). Spread out fly on ground, UP SIDE DOWN.

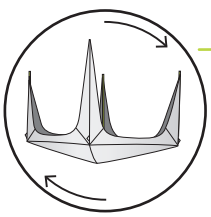

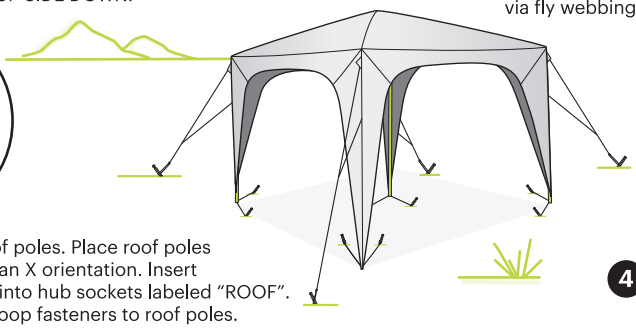

2. Assemble 2 roof poles. Place roof poles on top of fly in an X orientation. Insert roof pole ends into hub sockets labeled "ROOF". Attach hook + loop fasteners to roof poles.

3. Assemble leg poles. Insert leg poles into corner hub sockets labeled "LEG". Secure fly by hooking fly webbing grommets under leg pole tips. Adjust tension of fly via fly webbing + tension locks.

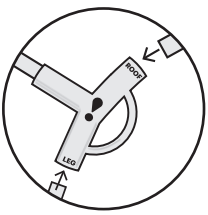

4. Flip entire canopy right side up. Stake down and guyout.

TENT CONTENTS

Tent body + Tent fly
Steel leg poles (4)
Fiberglass roof poles (2)
Corner hubs with extensions (4)
Stakes (12)
Gear caddy

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com

Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.