
Eureka!


INSTRUCTIONS | Jade Canyon X 6 (2601282)

1. Identify all tent components (see list below).

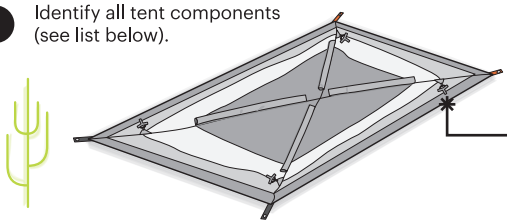

2. Spread out tent body and locate 4 eaves with hubs.

3. Assemble 2 roof poles and the 4 leg poles.

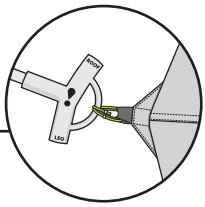




4. Insert roof poles through pole sleeves. Insert roof pole ends into hub sockets labeled "ROOF". Ensure that roof poles arch in a dome-like manner.

5. Insert leg poles into hub sockets labeled "LEG".

6. Insert leg pole tips into each of the 4 corner grommets.

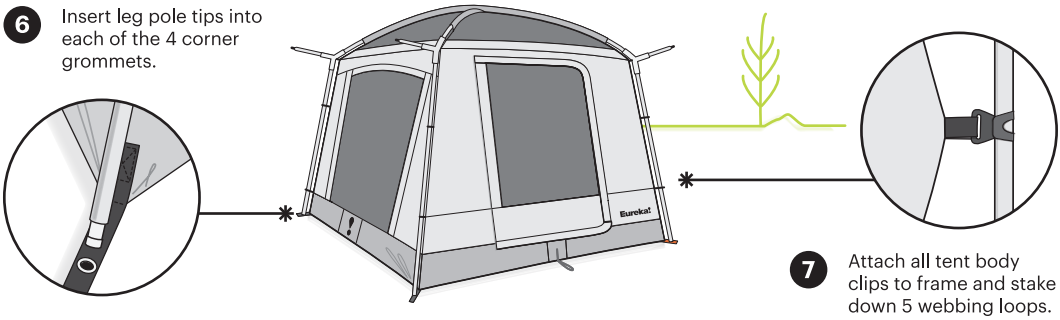

7. Attach all tent body clips to frame and stake down 5 webbing loops.

8. Place fly over tent body. Match the corresponding **GRAY** and **ORANGE** webbing on the fly and tent for correct orientation. Locate clips on underside of fly and attach to leg poles.

9. Assemble fly brim pole. Gently slide the brim pole through pole sleeve on fly above door. Insert ends of brim pole in webbing grommets



10. Connect matching buckles on fly and tent body at 4 corners. Adjust fly tension via corner webbing.

11. Stake down all guylines.

TENT CONTENTS

Tent body + Tent fly
Steel leg poles (4)
Aluminum roof poles (2)
Aluminum fly brim pole (1)
Corner hubs with extensions (4)
Stakes (9) + Guylines (4)

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com

Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the windows in favorable weather.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.