
Eureka!


INSTRUCTIONS | Midori 2 (2629085)


1. Identify all tent contents (see list below).

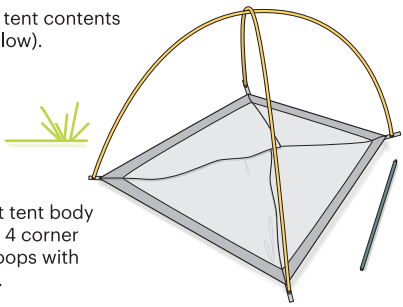


2. Spread out tent body and locate 4 corner webbing loops with grommets.


3. Assemble main poles (GOLD). Insert pole tips into each of the 4 corner grommets. Poles should be in an X orientation.

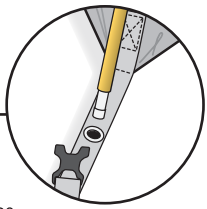

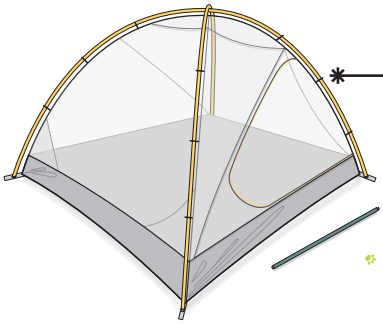


4. Attach tent body clips with GOLD webbing to the 2 main poles.

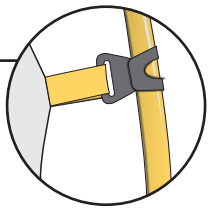


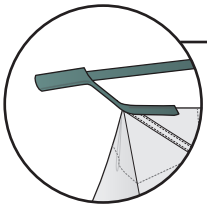


5. Assemble ridge pole (BLUE). Locate the 2 webbing pockets (BLUE) above each door. Insert ridge pole ends into each pocket.

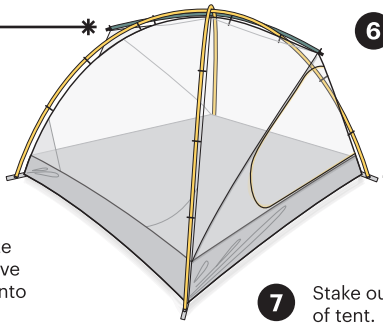

6. Attach remaining clips with BLUE webbing to ridge pole.

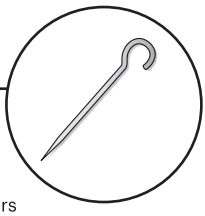

7. Stake out 4 corners of tent.

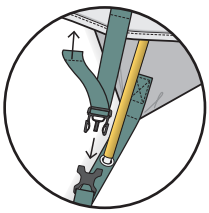

8. Place fly over tent body. Match the corresponding GOLD and BLUE webbing on fly and tent for correct orientation. Locate hook and loop fasteners on underside of fly and attach to tent poles.

9. Connect matching buckles on fly and tent body at 4 corners. Adjust fly tension via corner webbing. Stake out vestibules. Attach guylines to guyout loops. Stake out all guylines.



TENT CONTENTS

Tent body + Tent fly
Main frame poles (2-gold)
Ridge pole (1-blue)
Stakes (8)
Guylines (6)
Gear loft

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com

Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the fly vent and using the High/Low Air Exchange fly feature.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.